

About This Document

This document contains instructions for DVR configuration and operation.

Package Contents

The package contains the following:

- Digital Video Recorder
- Power Cord
- Quick User Guide (This Document)
- Software CD (User's Manual included)
- Rack-mount Kit
- Assembly Screws for Adding Hard Disk Drives
- SATA Cables
- Infrared Remote Control and Batteries



Notice

Specifications are subject to change without prior notice.

The information contained herein is to be considered for reference only.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (*OpenSourceGuide\OpenSourceGuide.pdf*).

Warning

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.

This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

B. If liquid is spilled, or objects have fallen into the equipment.

C. If the equipment has been exposed to rain or water.

D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

E. If the equipment has been dropped, or the cabinet damaged.

F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

Disposal

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Specifications

Video

Signal Format	NTSC or PAL (Auto Detect)
Video Input	Composite: 16 looping inputs, 1 Vp-p, auto-terminating, 75 Ohms
Monitor Outputs	HDMI: 1 HDMI VGA: 1 SPOT: 1 BNC, 1 Vp-p, 75 Ohms
Video Resolution	HDMI: 1920x1080, 1440x900, 1280x1024 VGA: 1920x1080, 1440x900, 1280x1024 Composite (SPOT): 720x480 (NTSC), 720x576 (PAL)
Record Speed	Real-time: 480ips (NTSC), 400ips (PAL) @ D1 480ips (NTSC), 400ips (PAL) @ 960H, Basic Quality*
Playback Speed	Full Duplex: 480ips (NTSC), 400ips (PAL) @ CIF

* Maximum recording speed will decrease about 30% with Standard or more image quality.

Inputs/Outputs

Alarm Input	16 terminal, programmable as NC or NO, 2.4V (NC) or 0.3V (NO) threshold, 5VDC
Alarm Output	2 relay output, programmable as NC or NO, 2A@125VAC, 1A@30VDC
Alarm Reset Input	1 TTL, terminal block
Internal Buzzer	78dB at 10cm
Network Connectivity	10/100/1000Mbps Ethernet (RJ-45)
Audio Input	RCA Input: 4 Line In
Audio Output	RCA Output: 1, Line Out HDMI Output: 1
Text Input	POS Interface, ATM Interface

Connectors

Video Input	Composite: 16 BNC
Video Loop	Composite: 16 BNC (Auto Terminating)
Monitor Output	HDMI: 1 HDMI, VGA: 1 VGA, SPOT (Composite): 1 BNC
Audio In	4 RCA connector
Audio Out	1 RCA connector 1 HDMI connector
Alarm Input/Output	Terminal Blocks
Ethernet Port	RJ-45
eSATA Port	eSATA
RS232 Serial Port	Two-connector terminal block
RS485 Serial Port	Two-connector terminal block
IR Port	1 Remote Control
USB Port	2 (USB 2.0)

Storage

Primary Storage	SATA hard disk drive (up to 4) (up to 3 with an internal DVD RW drive)
Secondary Storage	eSATA hard disk drive, Built-in DVD RW drive, USB hard disk drive or flash drive

General

Dimensions	16.9" (W) x 3.5" (H) x 15.7" (D) (430mm x 88mm x 400mm)
Unit Weight**	12.43 lbs. (5.64kg)
Shipping Weight**	19.44 lbs. (8.82kg)
Shipping Dimensions	21.1" (W) x 9.4" (H) x 21.1" (D) (535mm x 238mm x 535mm)
Operating Temperature	41°F to 104°F (5°C to 40°C)
Operating Humidity	0% to 90%
Power	100 to 240 VAC, 1.2 – 0.6 A, 50/60Hz, 75W
Power Consumption***	37.5W
Approvals	FCC, UL ****, CB, CE

** When one hard disk drive of 1TB and an internal DVD RW drive are installed, the value was measured.

*** When four hard disk drives of 2TB are installed, the value was measured.

**** CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions. This equipment is indoor use and all the communication wiring are limited to inside of the building.

Table of Contents


- Installation 7
 - Video Input..... 7
 - Video Loop Through 7
 - Audio In/Out..... 7
 - eSATA Port..... 8
 - Alarm Input/Output..... 8
 - RS485 Port 8
 - RS232 Port 8
 - Factory Reset Switch..... 9
 - Video Out..... 9
 - Network Port..... 9
 - Power Cord Connector 9
- Configuration 10
 - Front Panel Buttons and LEDs 10
 - IR Remote Control 12
 - Turning on the Power 12
 - Shutting down the System..... 12
 - Initial Unit Setup..... 13
 - Setup Wizard 14
- Operation 17
 - Live Monitoring 17
 - Searching Video 18
- Remote Program 20
 - ATVision 20
 - ATVision Pro..... 21
 - ATVision Mobile..... 21

Installation

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system.

Your DVR can be used with either NTSC or PAL equipment.


NOTE: You cannot mix NTSC and PAL equipment. For example you cannot use a PAL camera and an NTSC monitor.

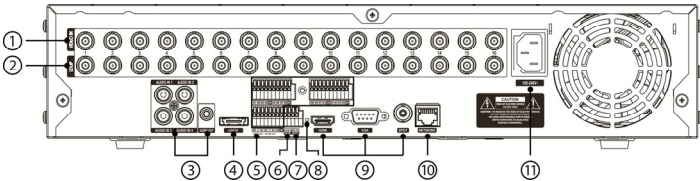

< DVR rear panel >


- | | | | |
|----------------------|----------------------|------------------------|------------------------|
| ① Video Input | ② Video Loop Through | ③ Audio In/Out | ④ eSATA Port |
| ⑤ Alarm Input/Output | ⑥ RS485 Port | ⑦ RS232 Port | ⑧ Factory Reset Switch |
| ⑨ Video Out | ⑩ Network Port | ⑪ Power Cord Connector | |

 Video Input



Connect the coaxial cables from the video sources to the BNC Video In connectors.

 Video Loop Through



If you would like to connect your video source to another device, you can use the Loop BNC connectors.

NOTE: The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to a terminated device because it will cause poor quality video.

Audio In/Out



Your DVR can record audio from up to four sources. Connect the audio sources to Audio In 1, Audio In 2, Audio In 3 and Audio In 4 as needed using RCA jacks. Connect Audio Out to your amplifier.

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio. The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The DVR does not have a pre-amplifier for audio input, so the audio input should be from an amplified source, not directly from a microphone.

eSATA Port



An eSATA port is provided to connect external storage devices for recording video. Connect the external eSATA hard disk drive (RAID) cable to the eSATA port.

CAUTION: Do NOT connect or disconnect eSATA devices while the DVR power is on. The DVR must be powered down to connect or disconnect eSATA devices. Power up eSATA devices so they are ready for operation before powering up the DVR. Power down eSATA devices after powering down the DVR and then disconnect eSATA devices.

CAUTION: If the eSATA device is shut down while the device is operating, the DVR system might not operate normally.

Alarm Input/Output



NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

AI 1 to 16 (Alarm-In): You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the AI (Alarm-In) and GND (Ground) connectors. The threshold voltage of electrical switches for NC (Normally Closed) is above 2.4V and for NO (Normally Open) is below 0.3V, and should be stable at least 0.5 seconds to be detected. The voltage range of alarm input is from 0V to 5V.

GND (Ground): Connect the ground side of the Alarm input and/or alarm output to the GND connector.

NOTE: All the connectors marked GND are common.

NC/NO (Relay Alarm Outputs): The DVR can activate external devices such as buzzers or lights. Connect the device to the C (Common) and NC (Normally Closed) or C and NO (Normally Open) connectors. NC/NO is a relay output which sinks 2A@125VAC and 1A@30VDC.

ARI (Alarm Reset In): An external signal to the Alarm Reset In can be used to reset both the Alarm Out signal and the DVR's internal buzzer. Mechanical or electrical switches can be wired to the ARI (Alarm Reset In) and GND (Ground) connectors. The threshold voltage is below 0.3V and should be stable at least 0.5 seconds to be detected. Connect the wires to the ARI and GND connectors.

RS485 Port



The DVR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals. The RS485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the P+ and N- (respectively) of the DVR.

RS232 Port



An RS232 port is provided to connect a remote control keyboard.

Factory Reset Switch



 
The DVR has a **Factory Reset** switch to the left of the HDMI connector on the rear panel. This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When using the *Factory Reset*, you will lose any settings you have saved.

To reset the unit, you will need a straightened paperclip:

1. Turn the DVR off.
2. Turn it on again.
3. While the DVR is initializing, the front panel LEDs will blink. When the front panel LEDs blink, poke the straightened paperclip into the unlabeled hole to the left of the HDMI connector.
4. Hold the switch until the DVR's internal buzzer sounds twice.
5. Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

Video Out



NOTE: Connect the monitor before the DVR boots so that video can be displayed on the monitor with the resolution you have set during system setup. If you want to use both the HDMI and VGA Monitor connectors, one of the monitors should be connected before the DVR boots, and the other monitor should be connected after the DVR boots.

An HDMI (High-Definition Multimedia Interface) connector is provided so that you can use an HDMI monitor as your main monitor.

A VGA connector is provided so that you can use a standard, multi-sync computer monitor as your main monitor. Use the cable supplied with your monitor to connect it to the DVR.

Connect the spot monitor to the SPOT connector as needed.

Network Port



The DVR can be networked using the 10/100/1000Mb Ethernet connector. Connect a Cat5 cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

Power Cord Connector




Connect the AC power cord to the DVR and then to a wall outlet.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.

Configuration

Front Panel Buttons and LEDs

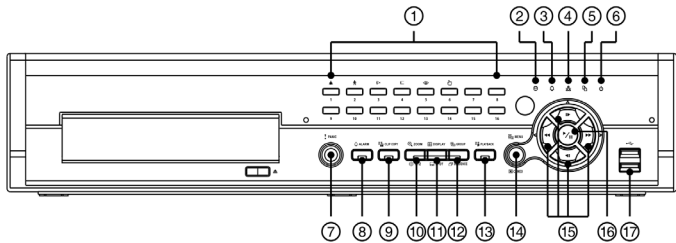

< DVR front panel >



 

 

 
 









- | | | | |
|-------------------------|------------------------|-----------------------|----------------|
| ① Camera Buttons | ② HDD LED | ③ Alarm Out LED | ④ Network LED |
| ⑤ Clip Copy LED | ⑥ Power LED | ⑦ Panic Button | ⑧ Alarm Button |
| ⑨ Clip Copy Button | ⑩ Zoom/PTZ Button | ⑪ Display/SPOT Button | |
| ⑫ Group/Sequence Button | ⑬ Playback Mode Button | ⑭ Menu/Cameo Button | |
| ⑮ Arrow Buttons | ⑯ Play/Pause Button | ⑰ USB Connector | |

NOTE: The infrared sensor on the DVR is just to the right of the camera buttons. Make certain that nothing blocks the sensor, or the remote control will not function properly.

 
When you use wireless communication devices (such as Wi-Fi or Bluetooth) near the DVR, the remote control might not function properly.

  You can also use a USB mouse (not supplied) to navigate through the screens and menus much like you would on a computer.

Camera Buttons	Pressing the individual camera buttons will cause the selected camera to display full screen. Buttons 1 to 9 are also used to enter passwords. In the PTZ mode, pressing the button 1 zooms in the screen and the button 2 zooms out the screen, pressing the button 3 focuses near and button 4 focuses far, and pressing the button 5 moves to the preset and button 6 saves the preset.
HDD LED	The HDD LED flickers when the DVR is recording or searching video on the hard disk drive.
Alarm Out LED	The Alarm Out LED is lit when alarm output or internal buzzer is activated.
Network LED	The Network LED is lit when the unit is connected to a network via Ethernet.
Clip Copy LED	The Clip Copy LED is lit when the DVR is clip-copying.
Power LED	The Power LED is lit when the unit is On.
PANIC Button	Pressing the PANIC button starts panic recoding of all camera channels, and displays ! on the screen. Pressing the button again will stop panic recording.
ALARM Button	The ALARM button has two functions. First, it will reset the DVR's outputs including the internal buzzer during an alarm. Second, it will display the event log when you are in the live monitoring mode unless there is an active alarm. This operation can be user password protected.
CLIP COPY Button	Pressing the CLIP COPY button allows you to copy video clips.

ZOOM/PTZ Button	<p>Pressing the ZOOM/PTZ button zooms in the current image in double on the screen. You can use the arrow buttons to move the rectangle to another area. Pressing the  button zooms in the image in rectangle.</p> <p>Pressing and holding the button for three seconds or longer enters the PTZ (Pan/Tilt/Zoom) mode and the PTZ icon flickers. Pressing the button again exits the PTZ mode. Pressing the arrow buttons or MENU/CAMEO button allows you to control properly configured cameras.</p>
DISPLAY/SPOT Button	<p>Pressing the DISPLAY/SPOT button toggles between different display formats. The available formats are: PIP, 2x2, 1+5, 1+7, 3x3 and 4x4 (2x2, 1+5, 1+7, 3x3 and 4x4 on a Spot Monitor).</p> <p>Pressing and holding the button for three seconds or longer allows you to select which cameras will display on the Spot monitor.</p>
GROUP/SEQUENCE Button	<p>When in the live mode, pressing the GROUP/SEQUENCE button changes the screen from the current camera group to the next camera group, and the screen displays the page number.</p> <p>Pressing and holding the button for three seconds or longer displays live channels sequentially.</p>
PLAYBACK Button	<p>Pressing the PLAYBACK button enters the playback mode, and pressing the button again exits the playback mode. When entering the playback mode, video is paused. Pressing the  button plays back video at regular speed. The screen displays when the DVR is in the Pause mode and the screen displays ► when the DVR is playing back video.</p> <p>When in one of the multi-view formats, pressing this button enters the Triplex mode. The DVR supports the Triplex function: monitoring, recording and playing back at the same time.</p>
MENU/CAMEO Button	<p>In the Live Monitoring mode and Search mode, pressing the MENU/CAMEO button displays the menu icons on the right edge of the screen. Pressing the button again hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.</p> <p>Pressing and holding the button for three seconds or longer enters the cameo mode. Pressing the  button exits the Active Cameo mode. Selecting Exit Group Edit in the cameo menu displayed when pressing the MENU/CAMEO button also exits the Active Cameo mode.</p>
Arrow Buttons	<p>These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value.</p> <p>These buttons are also used to control Pan and Tilt when in the PTZ mode. When in the PIP display format, pressing the Up and Down arrow buttons moves the position of the small screen counter-clockwise and clockwise, and pressing the Left and Right buttons changes the PIP screen size.</p> <p>In the playback mode, pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and . Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and . When in the pause mode, pressing the  button moves to the next image and pressing the  button moves to the previous image.</p>
PLAY/PAUSE Button	<p>In the live monitoring mode, pressing the  button freezes the current screen and the screen displays  icon. When in the playback mode, pressing the  button plays back images at regular speed or pauses playing video.</p> <p>Pressing the  button selects a highlighted item or completes an entry that you have made during system setup.</p>

IR Remote Control

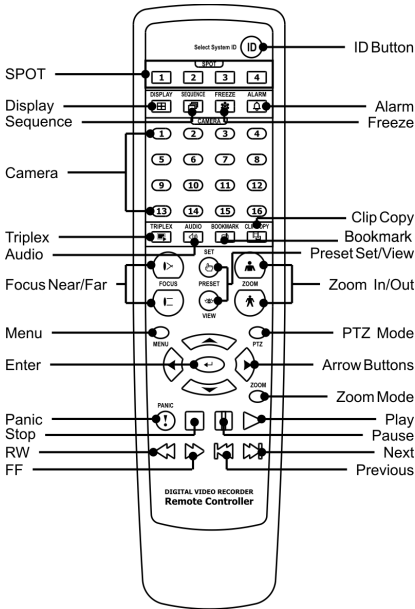

ID Button on Remote Control

If a DVR System ID is set to 0, the infrared remote control will control that DVR without any additional operations. If the system ID is 1 to 16, you must to press the **ID** button on the remote control and then press the number button (1 to 16) in order to control that DVR. If the System ID of two or more DVRs is set to 0, those DVRs will react to the infrared remote control at the same time.

BOOKMARK Button on Remote Control

When in the playback mode, pressing the **BOOKMARK** button adds the current playback point to the bookmark list or moves to the registered bookmark point.

Turning on the Power

Connecting the power cord to the DVR turns on the unit. The unit takes approximately 50 seconds to initialize.

Shutting down the System

Highlight Shutdown in the System menu and press the **⏻** button. The Shutdown screen displays asking you to confirm whether or not you want to shut the system down. After selecting Shutdown in the screen and pressing the **⏻** button, a screen will appear telling you when it is safe to disconnect power.

Initial Unit Setup

Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, display language, camera, remote control, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **Ⓐ** (Login) in the Live Monitoring menu to enter the setup screens. The Login screen appears.

Login

User

admin

Password


?

OK

Cancel

Select a User and enter the password by pressing the appropriate combination of Camera number buttons and then the **Ⓢ** button. There is no default password when logging in the admin user for the first time. If you do not know the password, click the **?** button for guidance.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **Ⓔ** (Setup) in the Live Monitoring menu.

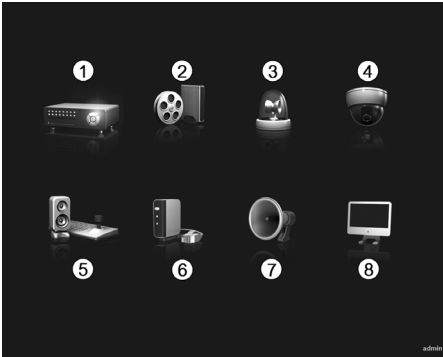

- Ⓛ

System
- Ⓜ

Record
- Ⓝ

Event
- Ⓓ

Camera
- Ⓟ

Device
- Ⓝ

Network
- Ⓝ


Notification
- Ⓟ

Display

System Setup	Record Setup	Event Setup	Camera Setup
General	General	Motion	General
Date/Time	Schedule	Alarm-In	PTZ
User	Pre-Event	Video Loss	
Storage		Video Blind	
System Event		Text-In	
Device Setup	Network Setup	Notification Setup	Display Setup
Audio	General	Callback	OSD
Alarm-Out	LAN	Mail	Main Monitor
Remote Control	FEN	SNS	Spot Monitor
	RTSP	FTP	
	ATVision	Schedule	
	VNC		
	NetFS		


NOTE: For detailed descriptions of the system setup, refer to the User's Manual on the software CD.

 Setup Wizard


Select the **System** menu → **General** → **Wizard** and press the  button. The **Wizard** setup screen appears. The Wizard setup guides you through configuring the system for basic operation.



Select either **Quick wizard** or **Network wizard** and select the **Next** button to start the selected setup wizard.

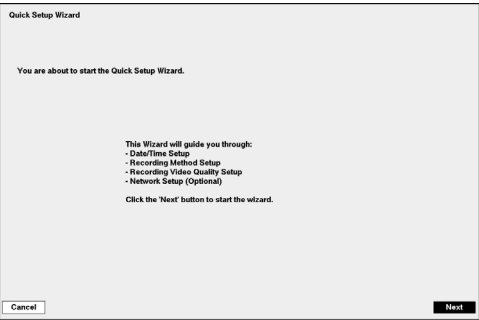

If you selected the **Quick wizard**, selecting the **Next** button starts the **Quick Setup Wizard**.

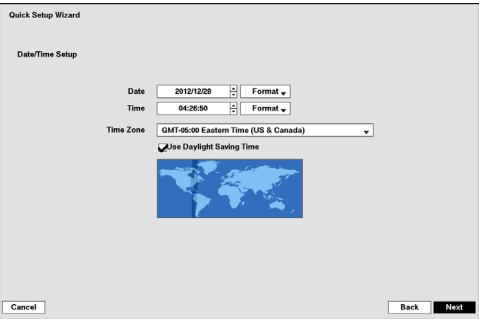

Date/Time Setup

- **Date:** Set the system date and select the date format.
- **Time:** Set the system time and select the time format.
- **Time Zone:** Select your time zone. The Time Zone can be selected on the map.
- **Use Daylight Saving Time:** Selecting the box sets the system to use daylight saving time.

Quick Setup Wizard (Step 1/3)

Record Method Setup

Which recording method would you prefer to use?

☒ Motion Event Record (Recommended)
☐ Continuous & Motion Event Record
☐ Continuous Record

Motion Event Record means that the system will record when a Motion Event is detected. Generally, video quality is more important for Motion Event Recording than it is for Continuous Recording, so the system records at a higher quality for Motion Events.

Cancel Back Next

Record Method Setup

- Select the desired recording mode from:
 - Motion Event Record (Recommended)
 - Continuous & Motion Event Record
 - Continuous Record

Quick Setup Wizard (Step 2/3)

Record Video Quality Setup

Which video quality profile would you prefer to use?

☒ High Video Quality Priority Profile (HVQPP)
☐ Standard Recording Profile (SRP)
☐ Longer Recording Time Priority Profile (LRTPP)

The HVQPP provides the highest video quality recording at that highest frame rate but requires more hard disk space than the LRTPP. Please see the User's Manual for details.

Cancel Back Next

Record Video Quality Setup

- Select the desired video quality profile from:
 - Higher Video Quality Priority Profile
 - Standard Recording Profile
 - Longer Recording Time Priority Profile

Quick Setup Wizard (Step 3/3)

Now you have completed setup for basic operation.

Click the 'Finish' button to finish the wizard, or click the 'Go to Network Setup' button to start the Network Setup.

Cancel Go to Network Setup Finish

Select the **Finish** button to finish the Quick Setup Wizard and select the **Go to Network Setup** button to start the Network Setup.

Network Setup Wizard

Network Wizard will help configure the DVR for your Network.

Please make sure to connect an Ethernet cable between your DVR and Router, DSL Modem or Cable Modem.

The wizard includes:

- LAN Setup
- UPnP (Port forwarding) Setup
- P2P Setup

Click the 'Next' button to start the wizard.

Cancel Next

If you selected the **Go to Network Setup**, select the **Next** button to start the Network Setup Wizard.

Network Setup Wizard

Internet Connection

Is your DVR connected to the Internet?

☒ Yes (I will use an Internet connection)
☐ No (I will Not use an Internet connection)

Cancel Back Next

Internet Connection

Select whether or not your DVR is connected to the Internet.

Network Setup Wizard (Step 12)

LAN Setup

Auto Configuration

☐ Use DSL/PPPoE Setup
 Search DNS Server
 Check Internet connectivity
 Search UPnP/PortForwarding

Cancel Back Next

LAN Setup

Select between Auto Configuration and Manual Configuration for network configuration, and then select the Test button to test the network configuration you selected.

- **Use DSL/PPPoE Setup:** Selecting the box allows you to set up the DSL network. Entering the ID and password for DSL connection is required.

Network Setup Wizard (Step 23)

FEN Setup

FEN is the technology that automatically sets up your DVR to work seamlessly for remote viewing via your network internet connection. Simply connect the DVR to your network router and you will be networking in no time! You need to name your DVR FEN to work.

Now enter the DVR name you created to access this DVR.
NO SPACES!!

FEN Name Test

Cancel Back Next

FEN Setup

- **FEN Name:** Enter the DVR name to be registered on the FEN server. The FEN Name you entered should be checked by selecting Test, otherwise the FEN changes will not be saved.

Network Setup Wizard (Step 33)

You have now completed your network setup.

Click 'Finish' to complete the setup wizard


Cancel Finish

Select the Finish button to finish the Setup Wizard.

Operation



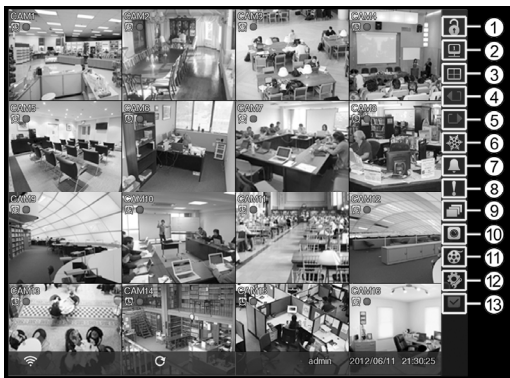

Live Monitoring

While in the live monitoring mode, pressing the **MENU** button displays the following Live Monitoring menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.




- ① Login/Logout
- ② Monitor
- ③ Display
- ④ Previous Group
- ⑤ Next Group
- ⑥ Freeze
- ⑦ Alarm
- ⑧ Panic
- ⑨ Sequence
- ⑩ Camera Menu
- ⑪ Search
- ⑫ Setup
- ⑬ Status

Login/Logout	Selecting ① accesses the Login screen, and you will be asked to select a User and enter the password to log into the system. Selecting ② displays the Logout screen asking you to confirm whether or not you want to log out the current user.
Monitor	Selecting ③ will allow you to select the monitor from Main Monitor and Spot Monitor.
Display	<p>Selecting ④ displays the Display Menu.</p> <ul style="list-style-type: none"> • Full Screen: Selecting ⑤ and choosing the camera number button displays the selected camera full screen. • PIP, 2x2, 1+5, 1+7, 3x3, 4x4: Selecting ⑥, ⑦, ⑧, ⑨, ⑩ or ⑪ displays the cameras in the selected multiview screen mode. • Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Previous/Next Group	Selecting ④ or ⑤ moves to the previous or next page.
Freeze	Selecting ⑥ will freeze the current image on the screen until you select ⑥ again.
Alarm	Selecting ⑦ resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting ⑧ starts panic recording of all cameras, and selecting ⑧ again stops panic recording.
Sequence	Selecting ⑨ causes the cameras to display sequentially, and selecting ⑨ again exits the Sequence mode.




Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • PTZ: Selecting PTZ and choosing the camera number allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. • Zoom: Selecting Zoom and choosing the camera number zooms the current image of the selected camera on the screen. • Audio: Selecting Audio toggles audio output On and Off. • Color Control: Selecting Color Control and choosing the camera number allows you to control brightness, contrast, hue and saturation for each camera for the selected camera. • Edit Group: Selecting Edit Group enters to the Active Cameo mode.
Search	<p>Selecting  displays the Search Menu.</p> <ul style="list-style-type: none"> • All Channels: Selecting All Channels exits the live monitoring mode and enters the search mode. • Triplex: Selecting Triplex enters the Triplex mode.
Setup	Selecting  enters the Main Setup screen.
Status	Selecting  will allow you to check the status of the DVR's system, inputs and storage.


 
 
 
 
 
 


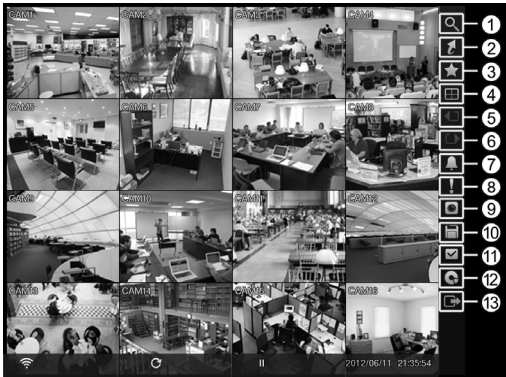




 



Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.



- ① Search
- ② Go To
- ③ Bookmark
- ④ Display
- ⑤ Previous Group
- ⑥ Next Group
- ⑦ Alarm
- ⑧ Panic
- ⑨ Camera Menu
- ⑩ Export
- ⑪ Status
- ⑫ Data Source
- ⑬ Exit

Search	<p>Selecting  displays the Search menu.</p> <ul style="list-style-type: none"> • Event Log Search: Selecting Event Log Search selects video from the event log. • Record Table Search: Selecting Record Table Search selects using a recording table. • Motion Search: Selecting Motion Search selects motion events. • Text-In Search: Selecting Text-In Search selects text input strings.
Go To	<p>Selecting  displays the Go to menu.</p> <ul style="list-style-type: none"> • Go to the First: Selecting Go to the First displays the first recorded image. • Go to the Last: Selecting Go to the Last displays the last recorded image. • Go to the Date/Time: Selecting Go to the Date/Time allows you to set the date and time you want to search for video.
Bookmark	Selecting  adds the current playback point to the bookmark list.

Display	<p>Selecting  displays the Display Menu.</p> <ul style="list-style-type: none"> • Full Screen: Selecting  and choosing the camera number button displays the selected camera full screen. • 2x2, 1+5, 1+7, 3x3, 4x4: Selecting , , ,  or  displays the cameras in the selected multiview screen mode. • Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Previous/Next Group	Selecting  or  moves to the previous or next page.
Alarm	Selecting  resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting  starts panic recording of all cameras, and selecting  again stops panic recording.
Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • Zoom: Selecting Zoom and choosing the camera number zooms the current playback image of the selected camera on the screen. • Audio: Selecting Audio toggles audio playback On and Off. • Show/Hide Text-In: Selecting Show Text-In or Hide Text-In shows or hides the text-in data on the screen if the video was recorded with text-in data. • Edit Group: Selecting Edit Group enters to the Active Cameo mode.
Export	<p>Selecting  displays the Export menu.</p> <ul style="list-style-type: none"> • A-B Clip-Copy: Selecting A-B Clip-Copy will set the starting point of the video to be clip copied, and the  icon displays at the bottom-left corner of the screen. Selecting A-B Clip-Copy again will set the ending point of the video to be clip copied and displays the Clip-Copy screen. • Clip-Copy: Select Clip-Copy, and the Clip-Copy screen appears to allow clip copy setup. • Print: Selecting Print allows you to print a selected image.
Status	Selecting  will allow you to check the status of the DVR's system, inputs and storage.
Data Source	Selecting  allows you to select the data source to be searched.
Exit	Selecting  exits the search mode and enters the live monitoring mode.


Remote Program

ATVision


ATVision allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Start Internet Explorer on your local PC. You can run the ATVision program by entering the following information in the address field.


- “http://IP address:port number” (The DVR IP address and the ATVision port number (default: 12088) set in the Network setup screen (ATVision tab))
- Or, “http://FEN server address/DVR name” (The FEN server address and the DVR name registered on the FEN server)

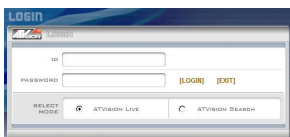

Select between the ATVISION LIVE (Web monitoring) and ATVISION SEARCH (Web search) modes. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode.

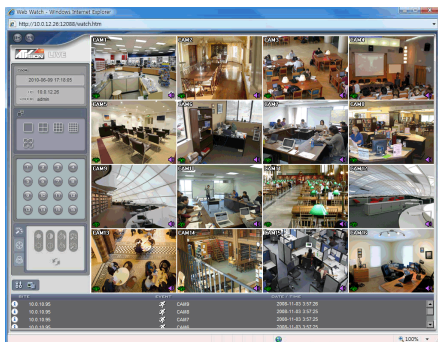

Web Monitoring

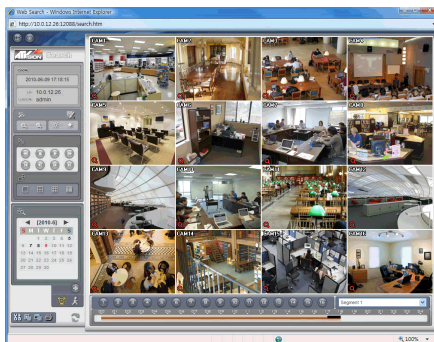

Web Search


NOTE: For detailed instructions on operating the ATVision program, refer to the User's Manual on the software CD.


ATVision Pro

ATVision Pro program, which is designed to be used with remote digital video recorder is an integrated software program that controls system management, video monitoring, video recording and image playback of multiple remote sites.

CAUTION: If an older version of ATVision Pro software is installed in your computer, you should uninstall the older version first.

Insert the installation CD and run the Setup.exe file. Install the ATVision Pro software following the instructions.

After installing the ATVision Pro software, you will find the ATVision Pro shortcut icon  on the desktop. Run the ATVision Pro program by double clicking the icon.

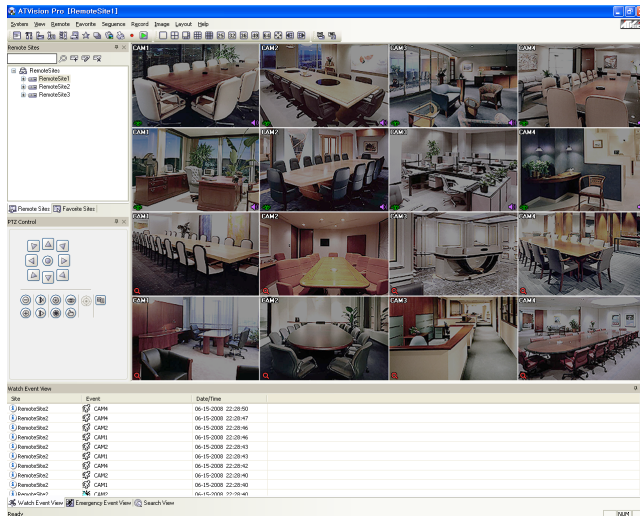


NOTE: For detailed instructions on operating the ATVision Pro program, refer to the User's Manual on the software CD.

ATVision Mobile

ATVision Mobile allows you to access remote sites and monitor live video using mobile devices anytime from virtually anywhere.


CAUTION: This program uses large amounts of data and you are responsible for all data charges. Please contact your service provider's customer service to confirm or add an unlimited data plan.

Android-based mobile devices

1. Open the Play Store (Google Play)  on your Android device.
2. In Play Store (Google Play), enter ATVision Mobile in the search field.
3. Install ATVision Mobile and open it.


NOTE: To uninstall ATVision Mobile, go to **Settings** → **Applications** → **Manage applications**. Select **ATVision Mobile** and press **Uninstall**.


4. Press the **Menu** button on your mobile device. The following start-up screen will appear.

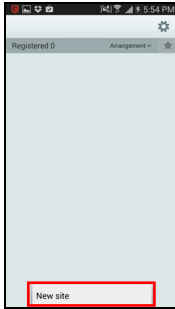


- **New site:** Registers device.
- **Delete site:** Deletes device. Only displayed when a registered device exists.

5. Register the device by pressing **New Site** and entering the device information.

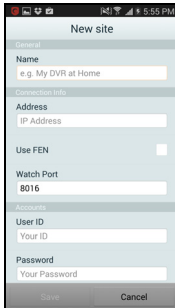


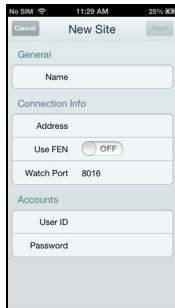
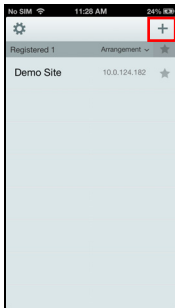
- **General:** Enter a name of the device to be used in ATVision Mobile.
- **Connection Info:** Configure FEN, remote address, and remote port settings.
NOTE: Deselect the checkbox if FEN is not enabled on the device. If using a separate FEN server, tap  (**Settings**) to configure FEN server settings. For more details, contact your FEN server administrator.
NOTE: If FEN feature is not enabled on the device, deselect *Use FEN* checkbox and enter the device's IP address under Address. Default value is recommended for the Port setting.
- **Accounts:** Enter the User ID and Password used to login to the device.


iOS-based mobile devices

1. Open App Store  on your device.
2. In App Store, enter **ATVision Mobile** in the search field.
3. Install ATVision Mobile and open it.

NOTE: To remove the **ATVision Mobile** program, press and hold the program icon for 2 seconds and then press the  button.

 4. Press the  (**New Registration**) button on the title bar at the top. The following menu will appear.



- **General:** Enter a name of the device to be used in ATVision Mobile.
- **Connection Info:** Configure FEN, remote address, and remote port settings.
NOTE: Deselect the checkbox if FEN is not enabled on the device. If using a separate FEN server, tap  (**Settings**) to configure FEN server settings. For more details, contact your FEN server administrator.
NOTE: If FEN feature is not enabled on the device, deselect *Use FEN* checkbox and enter the device's IP address under Address. Default value is recommended for the Port setting.
- **Accounts:** Enter the User ID and Password used to login to the device.