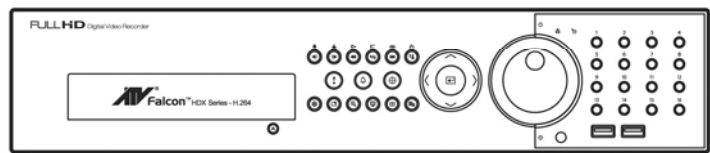




DIGITAL VIDEO RECORDER 16-CHANNEL MODEL USER'S MANUAL





WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (*OpenSourceGuide\OpenSourceGuide.pdf*) or as a printed document included along with the User's Manual.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

B. If liquid is spilled, or objects have fallen into the equipment.

C. If the equipment has been exposed to rain or water.

D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

E. If the equipment has been dropped, or the cabinet damaged.

F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Table of Contents

Chapter 1 — Introduction	1
Feature.....	1
Technical Overview.....	1
Chapter 2 — Installation.....	3
Package Contents.....	3
Required Installation Tools	3
Video Input.....	3
Video Loop Through	4
Factory Reset Switch.....	4
HD/SD Out Selector	4
Network Port.....	4
iSCSI Port.....	4
eSATA Port.....	5
RS232C Port	5
RS485 Port	5
Alarm Input/Output	5
Audio In/Out.....	6
Video Out.....	6
Power Cord Connector	7
Chapter 3 — Configuration	9
Front Panel Controls.....	9
Camera Buttons (1 to 16)	10
LED.....	10
Jog Dial, Shuttle Ring.....	10
Arrow Buttons	11
Enter Button.....	11
Playback Buttons.....	11
PTZ Button.....	11
Alarm Button	11
Panic Button	11
Freeze Button	11
Bookmark Button	11
ZOOM Button	12
Monitor Button	12
Display Button	12
Menu Button	12
USB Port.....	12
ID Button on Remote Control	12
Sequence Button on Remote Control.....	12
Clip Copy Button on Remote Control	12
Turning on the Power.....	13
Initial Unit Setup.....	13
Setup Screen	14
System Setup.....	14
General.....	14
Date/Time	17

Account.....	18
Storage	19
Monitoring	21
Recording Setup	22
General	22
Schedule.....	23
Pre-Event.....	25
Archive.....	26
Network Setup	26
General	26
IP Address	28
DVRNS	29
RTSP	30
Notification.....	31
iSCSI.....	32
Event Setup	33
Motion	33
Alarm-In	35
Video Loss.....	35
Video Blind.....	36
Text-In.....	37
Device Setup.....	38
Audio.....	38
Alarm-Out	39
Remote Control	40
Display Setup.....	40
OSD	40
Primary Monitor	41
Secondary Monitor	43
Spot Monitor	43
Status Setup	44
Event.....	44
Storage	45
Camera Setup.....	46
General	46
PTZ	46
Chapter 4 — Operation	49
Turning on the Power.....	49
Live Monitoring.....	49
Live Monitoring Menu	50
Active Cameo Mode	51
Zoom Mode.....	52
PTZ Mode	52
Event Monitoring.....	53
Covert Camera	53
Spot Monitoring	53
Recording Video	54
Panic Recording	54
Recording Audio	54
Playing Recorded Video	54

Searching Video.....	56
Search Menu	56
Event Log Search	58
Record Table Search.....	59
Motion Search	61
Text-In Search	62
Bookmarks.....	63
Clip-Copy	64
Print	66
Disk Mirroring.....	66
Appendix	69
USB Hard Disk Drive Preparation.....	69
Preparing the USB hard disk drive in Windows 2000	69
Preparing the USB hard disk drive in Windows 98.....	69
Text-In Search Examples.....	70
Search Example I	70
Search Example II	70
ATVision.....	71
Web Monitoring Mode	72
Web Search Mode.....	73
Time Overlap	75
Map of Screens.....	76
Troubleshooting	77
System Log Notices	77
Error Code Notices	78
Connector Pin Outs.....	78
RS485 Connector Pin Outs	78
I/O Connector Pin Outs	79
Specifications.....	79

List of Illustrations

Figure 1 : Typical DVR installation.	2
Figure 2 : DVR rear panel.	3
Figure 3 : DVR front panel.	9
Figure 4 : Infrared remote control.....	10
Figure 5 : Login screen.	13
Figure 6 : Logout screen.	13
Figure 7 : Setup screen.....	14
Figure 8 : System – General setup screen.....	15
Figure 9 : System – Date/Time setup screen.....	17
Figure 10 : System – Account setup screen.....	18
Figure 11 : System – Storage setup screen.....	20
Figure 12 : System – Monitoring setup screen.....	21
Figure 13 : Record – General setup screen.	22
Figure 14 : Record – Schedule setup screen.....	23
Figure 15 : Schedule – Settings (Advanced Mode) setup screen.	24

Figure 16 : Record – Pre-Event setup screen.....	25
Figure 17 : Record – Archive setup screen.....	26
Figure 18 : Network – General setup screen.....	27
Figure 19 : Network – IP Address (Manual) setup screen.....	28
Figure 20 : Network – DVRNS setup screen.....	29
Figure 21 : Network – RTSP setup screen.....	30
Figure 22 : Network – Notification setup screen.....	31
Figure 23 : Network – iSCSI setup screen.....	32
Figure 24 : Event – Motion setup screen.....	34
Figure 25 : Event – Alarm-In setup screen.....	35
Figure 26 : Event – Video Loss setup screen.....	36
Figure 27 : Event – Video Blind setup screen.....	36
Figure 28 : Event – Text-In setup screen.....	37
Figure 29 : Text-In Device screen.....	37
Figure 30 : Device – Audio setup screen.....	39
Figure 31 : Device – Alarm-Out setup screen.....	39
Figure 32 : Device – Remote Control setup screen.....	40
Figure 33 : Display – OSD setup screen.....	41
Figure 34 : Display – Primary Monitor setup screen.....	42
Figure 35 : Display – Secondary Monitor setup screen.....	43
Figure 36 : Display – Spot Monitor setup screen.....	44
Figure 37 : Status – Event setup screen.....	45
Figure 38 : Status – Storage setup screen.....	45
Figure 39 : Camera – General setup screen.....	46
Figure 40 : Camera – PTZ setup screen.....	47
Figure 41 : Live Monitoring menu.....	49
Figure 42 : PTZ Select Camera menu.....	52
Figure 43 : PTZ Preset menu.....	52
Figure 44 : Select Playback Camera menu.....	55
Figure 45 : Search menu.....	56
Figure 46 : Event Log Search screen.....	58
Figure 47 : Record Table Search screen.....	60
Figure 48 : Motion Search screen.....	61
Figure 49 : Text-In Search screen.....	62
Figure 50 : Bookmarks screen.....	64
Figure 51 : Clip-Copy screen.....	64
Figure 52 : Print screen.....	66
Figure 53 : System – Storage setup screen.....	66

Chapter 1 — Introduction

Feature

Your color digital video recorder (DVR) provides recording capabilities for 16 camera inputs. It provides exceptional picture quality in both live and playback modes, and offers the following features:

- 16 Composite Video Input Connectors
- Compatible with Color (NTSC or PAL) and B&W (CCIR and EIA-170) Video Sources
- Auto Detection for NTSC and PAL
- H.264 Codec
- Multiple Monitor Connectors: 1 HDMI, 2 VGA, 2 BNC Video Out, 1 Spot
- Multiple Search Engines (Date/Time, Record Table, Event)
- Real-time Recording (480/400 Images per Second (NTSC/PAL) with Very High (D1) Resolution)
- “Loop-Through” Video Connectors
- Continuous Recording in Disk Overwrite Mode
- Pentaplex Functionality (Monitoring, Recording, Playback, Archiving and Transmission at the same time)
- Video Archiving via eSATA Interface
- 2 USB 2.0 Ports
- Continues Recording while Archiving, Transmitting to Remote Site and during Playback
- User-friendly Graphical User Interface (GUI) Menu System
- Multiple Recording Modes (Time-lapse, Pre-event, Event and Panic)
- Two-way Audio Communication
- 16-Channel Audio Recording and 1-Channel Audio Playback
- Text Input for ATM and POS
- Alarm Connections Include: Input, Output and Reset Input
- Built-in Alarm Buzzer
- Live or Recorded Video Access via Ethernet
- Time Synchronization using industry standard protocol
- Built-in DVD RW Drive
- IR Remote Control
- Self-diagnostics with automatic notification including hard disk drive S.M.A.R.T. protocol

Technical Overview

In addition to replacing both a time-lapse VCR and a multiplexer in a security installation, your DVR has many features that make it much more powerful and easier to use than even the most advanced VCR.

The DVR converts analog NTSC or PAL video to digital images and records them on a hard disk drive. Using a hard disk drive allows you to access recorded video almost instantaneously; there is no need to rewind tape. The technology also allows you to view recorded video while the DVR continues recording video.

Digitally recorded video has several advantages over analog video recorded on tape. There is no need to adjust tracking. You can freeze frames, fast forward, fast reverse, slow forward and slow reverse without image streaking or tearing. Digital video can be indexed by time or events, and you can instantly view video after selecting the time or event.

Your DVR can be set up for event or time-lapse recording. You can define times to record, and the schedule can change for different days of the week and user defined holidays.

The DVR can be set up to alert you when the hard disk drive is full, or it can be set to record over the oldest video once the disk is full.

Your DVR supports disk mirroring functions to prevent any unexpected loss of recorded video data that might be caused by disk damage or corruption.

Your DVR uses a proprietary encryption scheme making it nearly impossible to alter video.

You can view video and control your DVR remotely by connecting via Ethernet. There are eSATA and iSCSI ports that can be used to record or archive (eSATA interface only) video to external hard disk drives, and there are two USB ports that can be used to upgrade the system or copy video clips to external hard disk and flash drives.

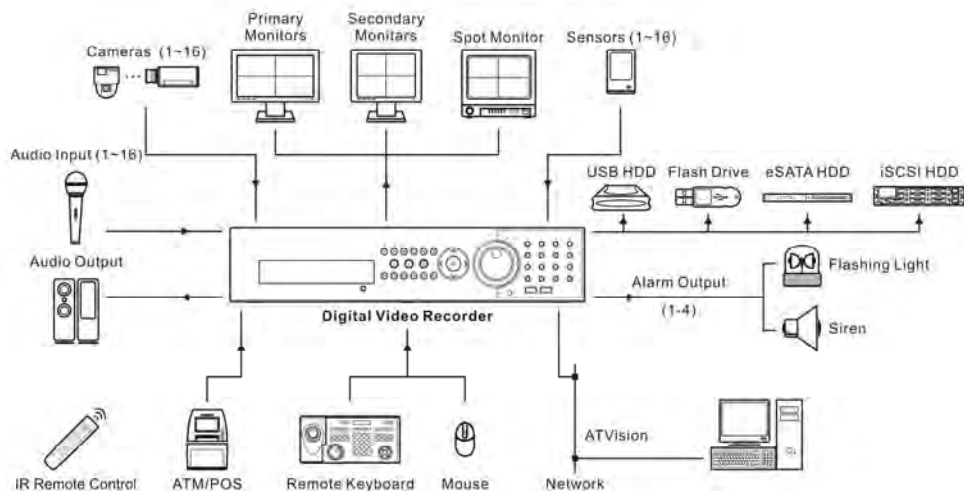


Figure 1 : Typical DVR installation.

Chapter 2 — Installation

Package Contents

The package contains the following:

- Digital Video Recorder
- Power Cord
- User's Manual (This Document)
- ATVision Software CD and User's Manual
- Rack-mount Kit
- Assembly Screws for Adding Hard Disk Drives
- SATA Cables
- Audio Extension Cable
- Infrared Remote Control

Required Installation Tools

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system.

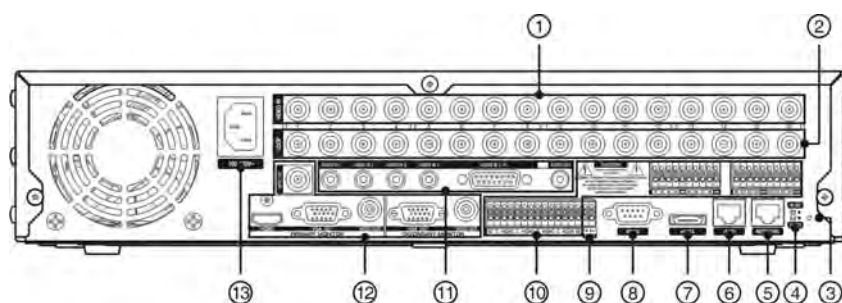


Figure 2 : DVR rear panel.

- | | | |
|------------------------|----------------------|------------------------|
| ① Video Input | ② Video Loop Through | ③ Factory Reset Switch |
| ④ HD/SD Out Selector | ⑤ Network Port | ⑥ iSCSI Port |
| ⑦ eSATA Port | ⑧ RS232C Port | ⑨ RS485 Port |
| ⑩ Alarm Input/Output | ⑪ Audio In/Out | ⑫ Video Out |
| ⑬ Power Cord Connector | | |

Your DVR can be used with either NTSC or PAL equipment.

NOTE: You cannot mix NTSC and PAL equipment. For example you cannot use a PAL camera and an NTSC monitor.

Video Input



Connect the coaxial cables from the video sources to the BNC Video In connectors.

Video Loop Through



If you would like to connect your video source to another device, you can use the Loop BNC connectors.

NOTE: The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to a terminated device because it will cause poor quality video.

Factory Reset Switch



The DVR has a Factory Reset switch to the right of the HD/SD Out selector on the rear panel. This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When using the *Factory Reset*, you will lose any settings you have saved.

To reset the unit, you will need a straightened paperclip:

1. Turn the DVR off.
2. Turn it on again.
3. While the DVR is initializing, the front panel LEDs will blink. When the front panel LEDs blink, poke the straightened paperclip into the unlabeled hole to the right of the HD/SD Out selector.
4. Hold the switch until all the LEDs on the front panel are lit.

NOTE: When the DVR successfully resets to factory defaults all the LEDs on the front panel flash five times.

5. Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

HD/SD Out Selector



An HD/SD Out selector is provided to select the monitor display mode between HD (High Definition) and SD (Standard Definition). Setting the selector to the HD OUT position sends HD video to the connected HDMI and VGA monitors, and setting to the SD OUT position sends SD video to the connected composite BNC monitor.

Network Port



The DVR can be networked using the 10Mb/1Gb Ethernet connector. Connect a Cat5 cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades. See *Chapter 3 — Configuration* for configuring the Ethernet connections.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

iSCSI Port



An iSCSI port is provided to connect external storage devices for recording video. Connect the external iSCSI hard disk drive (RAID) cable to the RJ-45 Ethernet port.

NOTE: Up to eight iSCSI volumes (or nodes) can be connected to the DVR.

CAUTION: Do NOT connect or disconnect iSCSI devices while the DVR power is on. The DVR must be powered down to connect or disconnect iSCSI devices. Power up iSCSI devices so they are ready for operation before powering up the DVR. Power down iSCSI devices after powering down the DVR and then disconnect iSCSI devices.

CAUTION: If the iSCSI device is shut down while the device is operating, the DVR system might not operate normally.

eSATA Port



An eSATA port is provided to connect external storage devices for recording or archiving video. Connect the external eSATA hard disk drive (RAID) cable to the eSATA port.

CAUTION: Do NOT connect or disconnect eSATA devices while the DVR power is on. The DVR must be powered down to connect or disconnect eSATA devices. Power up eSATA devices so they are ready for operation before powering up the DVR. Power down eSATA devices after powering down the DVR and then disconnect eSATA devices.

CAUTION: If the eSATA device is shut down while the device is operating, the DVR system might not operate normally.

RS232C Port



An RS232 port is provided to connect a remote control keyboard.

RS485 Port



The DVR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals. The RS485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the + and – (respectively) of the DVR. See *Chapter 3 – Configuration* and the PTZ camera or remote controller manufacture’s manual for configuring the RS485 connection.

Alarm Input/Output



NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

AI 1 to 16 (Alarm-In): You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the AI (Alarm-In) and GND (Ground) connectors. The threshold voltage of electrical switches for NC (Normally Closed) is above 2.4V and for NO (Normally Open) is below 0.3V, and should be stable at least 0.5 seconds to be detected. The voltage range of alarm input is from 0V to 5V. See *Chapter 3 – Configuration* for configuring alarm input.

GND (Ground): Connect the ground side of the Alarm input and/or alarm output to the GND connector.

NOTE: All the connectors marked GND are common.

NC/NO (Relay Alarm Outputs): The DVR can activate external devices such as buzzers or lights. Connect the device to the C (Common) and NC (Normally Closed) or C and NO (Normally Open) connectors. NC/NO is a relay output which sinks 2A@125VAC and 1A@30VDC. See *Chapter 3 – Configuration* for configuring alarm output.

ARI (Alarm Reset In): An external signal to the Alarm Reset In can be used to reset both the Alarm Out signal and the DVR’s internal buzzer. Mechanical or electrical switches can be wired to the ARI (Alarm Reset In) and GND (Ground) connectors. The threshold voltage is below 0.3V and should be stable at least 0.5 seconds to be detected. Connect the wires to the ARI and GND connectors.

Audio In/Out

 
 


Your DVR can record audio from up to 16 sources. Connect the audio sources to Audio In 1 to Audio In 16 as needed using RCA jacks. Connect Audio Out to your amplifier. Use the provided audio extension cable to connect the audio sources to Audio In 5 to 16.

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio.

The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The DVR does not have a pre-amplifier for audio input, so the audio input should be from an amplified source, not directly from a microphone.

Video Out



An HDMI (High-Definition Multimedia Interface) connector is provided so that you can use a HDMI monitor as your primary monitor. Use the cable supplied with your monitor to connect it to the DVR.



A VGA connector is provided so that you can use a standard, multi-sync computer monitor as your primary or secondary monitor. Use the cable supplied with your monitor to connect it to the DVR.



Connect the primary or secondary monitor to the Video Out connector.



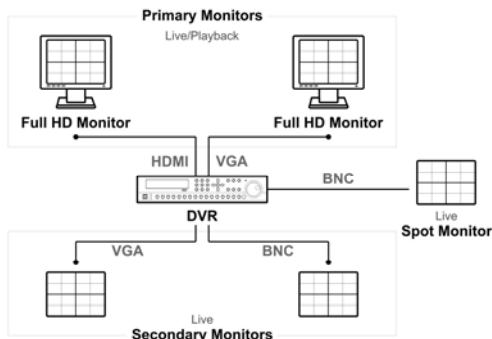
Connect the spot monitor to the SPOT connector as needed.

NOTE: When using HDMI monitors, change the monitor display mode to HD mode by setting the HD/SD Out selector on the rear panel to the **HD OUT** position. HDMI video out will only be enabled in the HD display mode.

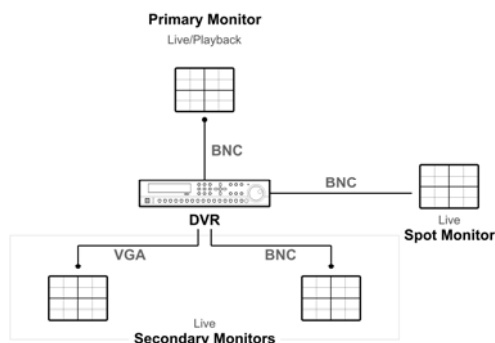
VGA video out on the primary monitor will be disabled in the SD display mode.

Composite (BNC) video out on the primary monitor will be disabled in the HD display mode.

Monitor Connection Examples:



< HD Display Mode >



< SD Display Mode >

NOTE: Connect the monitor before the DVR boots so that video can be displayed on the monitor with the resolution you have set during system setup. If you want to use both the HDMI and VGA Primary Monitor connectors, one of the monitors should be connected before the DVR boots, and the other monitor should be connected after the DVR boots.

Power Cord Connector



Connect the AC power cord to the DVR and then to a wall outlet.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.

Your DVR is now ready to operate. Refer to *Chapter 3 — Configuration* and *Chapter 4 — Operation*.

Chapter 3 — Configuration

NOTE: Your DVR should be completely installed before proceeding. Refer to *Chapter 2 — Installation*.

Front Panel Controls

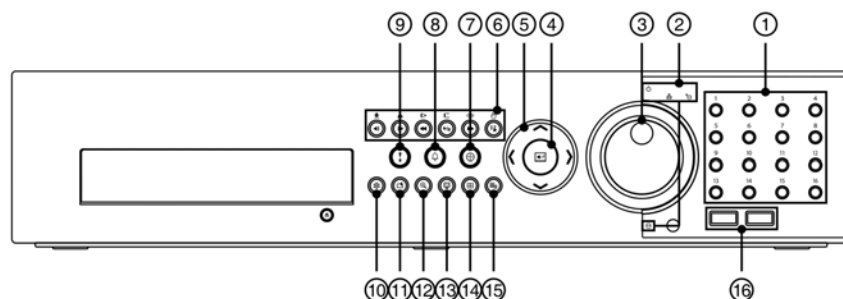


Figure 3 : DVR front panel.

- | | | | |
|------------------|--------------------|--------------------------|----------------|
| ① Camera Buttons | ② LED | ③ Jog Dial, Shuttle Ring | ④ Enter Button |
| ⑤ Arrow Buttons | ⑥ Playback Buttons | ⑦ PTZ Button | ⑧ Alarm Button |
| ⑨ Panic Button | ⑩ Freeze Button | ⑪ Bookmark Button | ⑫ Zoom Button |
| ⑬ Monitor Button | ⑭ Display Button | ⑮ Menu Button | ⑯ USB Port |

The front panel looks and operates much like a VCR combined with a multiplexer. Many of the buttons have multiple functions. The buttons on the infrared remote control, while laid out differently, perform the same functions as those on the front panel. The following describes each button and control. Take a few minutes to review the descriptions. You will use these to initially set up your DVR and for daily operations.

NOTE: The infrared sensor on the DVR is just to the left of USB ports. Make certain that nothing blocks the sensor, or the remote control will not function properly.

When you use wireless communication devices (such as Wi-Fi or Bluetooth) near the DVR, the remote control might not function properly.

You can also use a USB mouse (not supplied) to navigate through the screens and menus much like you would on a computer.

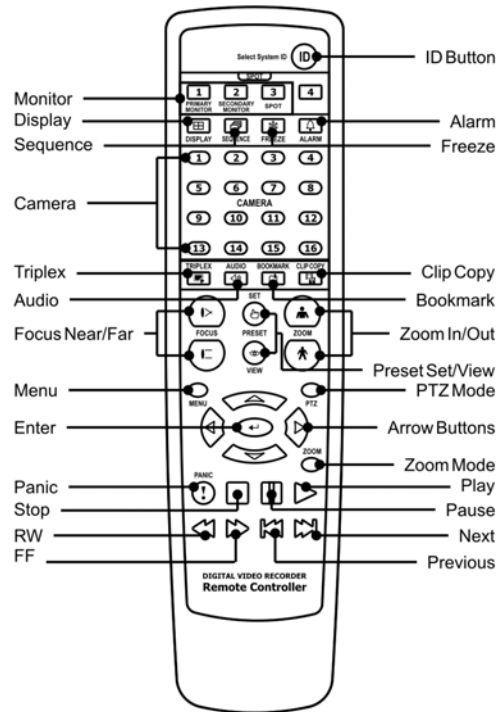


Figure 4 : Infrared remote control.

NOTE: For simplicity, the button descriptions in this manual refer to the front panel buttons.

Camera Buttons (1 to 16)

Pressing the individual camera buttons will cause the selected camera to display full screen. Buttons 1 to 9 are also used to enter passwords.

LED

- **Power LED:** The Power LED is lit when the unit is On.
- **Network LED:** The Network LED is lit when the unit is connected to a network via Ethernet.
- **iSCSI LED:** The iSCSI LED is lit when an iSCSI device is connected to the DVR.
- **HDD LED:** The HDD LED flickers when the DVR is recording or searching video on the hard disk drive.

Jog Dial, Shuttle Ring

- **Jog Dial:** When in the playback mode, you can play video forward image-by-image by turning the Jog Dial clockwise and backward image-by-image by turning the Jog Dial counterclockwise. When in the Setup mode, you can change number values by highlighting the item in the menu and turning Jog Dial clockwise or counterclockwise to increase or decrease the number.
- **Shuttle Ring:** The Shuttle Ring only functions in the Playback mode. The Shuttle Ring is spring loaded and returns to the center position when released. Turning the ring clockwise plays video forward. Turning the ring counterclockwise plays video backward. Playback speed varies with the amount the ring is turned. The playback speeds are ◀◀◀, ▶x0.5, ▶, ▶▶, ▶▶▶ and ▶▶▶▶. When you release the ring, it snaps back to the center position and the video pauses.

Arrow Buttons




 
 
 
 

 
 


 

 
These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value.

These buttons are also used to control Pan and Tilt when in the PTZ mode.


Enter Button

The  (Enter) button selects a highlighted item or completes an entry that you have made during system setup.

 
Playback Buttons

- **Backward:** When in the pause mode, pressing the  button moves to the previous image. The button is also used to Zoom Out while in the PTZ mode.
- **Forward:** When in the pause mode, pressing the  button moves to the next image. The button is also used to Zoom In while in the PTZ mode.
- **Rewind:** Pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and . The button is also used for Near Focus in the PTZ mode.
- **Play/Pause:** Pressing the  button plays back video at regular speed. The screen displays  when the DVR is in the Pause mode and the screen displays  when the DVR is playing back video. The button is also used for Far Focus in the PTZ mode.
- **Fast Forward:** Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and . The button is also used to load a Preset View in the PTZ mode.
- **Search/Stop:** Pressing the  button while in the Live Monitoring mode enters the Search mode. Pressing the  button while in the Search mode returns the DVR to the Live Monitoring mode. The button is also used to save Presets while in the PTZ mode.



PTZ Button

Pressing the  button enters the PTZ (Pan/Tilt/Zoom) mode which allows you to control properly configured cameras.


Alarm Button

The  button has two functions. First, it will reset the DVR's outputs including the internal buzzer during an alarm. Second, it will display the event log when you are in the live monitoring mode unless there is an active alarm.

Panic Button

Pressing the  button starts panic recoding of all camera channels, and displays  on the screen. Pressing the button again will stop panic recording.

Freeze Button

Pressing the  button freezes the current live screen.

Bookmark Button

When in the playback mode, pressing the  button adds the current playback point to the bookmark list or moves to the registered bookmark point.

ZOOM Button

Pressing the **ZOOM** button zooms the current image on the screen. A PIP with a rectangle temporarily displays showing what area of the screen has been enlarged. You can use the arrow buttons to move the rectangle to another area.

NOTE: Entering the zoom mode is **NOT** supported while in the SD display mode.

Monitor Button

Pressing the **MONITOR** button toggles the monitor selection between Primary (**MONITOR 1** on the remote control), Secondary (**MONITOR 2**) and Spot (**MONITOR 3**). You can select the screen format and sequence monitoring of the selected monitor.

Display Button

Pressing the **DISPLAY** button toggles between different display formats. The available formats are: 2x2, 3x2, 3x3, 4x3 or 4x4 (2x2 or 4x4 on a Spot Monitor).

Menu Button

Pressing the **MENU** button enters the **Setup** screen. You will need to enter the authorized user and password to access Setup. Pressing the button also closes the current menu or setup dialog box. In the Playback mode, pressing the button displays the Search menu. In the Search mode clip-copying can be done instantly by pressing and holding the button for three or more seconds.

USB Port

Two USB ports on the front panel are provided to connect external hard disk or flash drives for video clip copying or system upgrades. Position external drives close enough to the DVR so that you can make the cable connections, usually less than 6 feet. Use the USB cable provided with the hard disk drive to connect it to the DVR.

A USB mouse (not supplied) can be connected to one of the ports. You can use the mouse to navigate through the screens and menus much like you would on a computer.

A PostScript™ USB printer (not supplied) can be connected to one of the ports. You can print selected images resulting from a search. *Refer to Chapter 4 — Operation, Searching Video.*

A USB to Serial converter can be connected to the USB port. Multiple text-in devices can be used with a USB to Serial converter.

ID Button on Remote Control

If a DVR System ID is set to 0, the infrared remote control will control that DVR without any additional operations. (Refer to the *System General* setup screen in this chapter for further information on setting the System ID.) If the system ID is 1 to 16, you must press the **ID** button on the remote control and then press the number button (1 to 16) in order to control that DVR. If the System ID of two or more DVRs is set to 0, those DVRs will react to the infrared remote control at the same time.

Sequence Button on Remote Control

Pressing **SEQUENCE** button displays live channels sequentially.

Clip Copy Button on Remote Control






Pressing the **CLIP COPY** button allows you to copy video clips.


Turning on the Power

Connecting the power cord to the DVR turns on the unit. The unit takes approximately 60 seconds to initialize.

Initial Unit Setup

Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, display language, camera, remote control, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.

Throughout the screens you will see . Highlighting the  and pressing the  button gives you the opportunity to reset that screen to its default settings. After you are finished with any setup screen, you can highlight **Save** and press the  button to save the changes and exit the screen. If you do not wish to save the changes, highlight **Cancel** and press the  button to exit the screen.

Press the **MENU** button or move the mouse pointer to the top of the screen and then select  (Login) in the Live Monitoring menu to enter the setup screens. The Login screen appears.





Select a User and enter the password by pressing the appropriate combination of Camera number buttons and then the  button. There is no default password when logging in the admin user for the first time.

Figure 5 : Login screen.

NOTE: To assure the secure management of the system, setting up a password is strongly recommended.

If you cannot use the front panel buttons, click the  button using the mouse to enter a password, and the virtual keyboard displays. See instructions below for using the virtual keyboard.

To log the user out of the system, press the **MENU** button or move the mouse pointer to the top of the screen and then select  (Logout) in the Live Monitoring menu. The Logout screen displays asking you to confirm whether or not you want to log out the current user.

 


Figure 6 : Logout screen.

Setup Screen

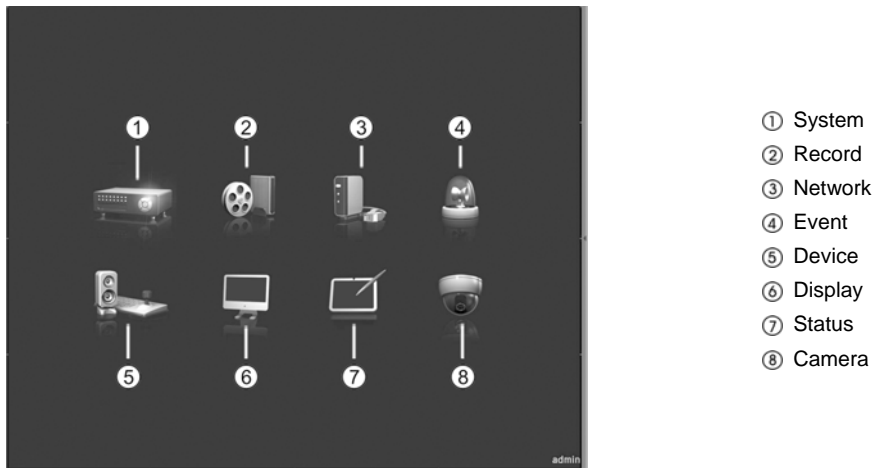


Figure 7 : Setup screen.

Press the **MENU** button or move the mouse pointer to the top of the screen and then select (Setup) in the Live Monitoring menu to enter the setup screen.

While setting up the DVR, there will be many opportunities to enter names and titles. When making these entries, a Virtual Keyboard will appear.



Use the arrow keys to highlight the character you want in the name or title and press the button. That character appears in the title bar and the cursor moves to the next position. Pressing toggles between the upper and lower case keyboards, backspaces, and deletes entered characters.

Special characters can be created using ^ and a capital letter; e.g., ^J for NL (New Line), ^M for CR (Carriage Return). Special characters are commonly used by text input devices and will be useful when performing Text-In Searches.

System Setup

General

Highlight **General** and press the button, and the General screen appears.

Figure 8 : System – General setup screen.

In the **General** screen, you can name the site location, assign a System ID number, select the language the screens are displayed in, display software version number, upgrade the software, show the System Log, display recorded time data, and clear all data.

Highlight the **Site** box and press the button. A virtual keyboard appears that you can use to enter a Site Name. Once you have entered your title, highlight **OK** and press the button.

Highlight the box beside **System ID** and press the button. Change the number by highlighting it and using the Up and Down arrow buttons to increase and decrease the number from 0 to 99.

NOTE: The System ID number is used to identify the unit when it is connected with other DVRs through the RS485 port. You cannot use the same ID number for two or more DVRs that are in the same RS485 network. It is possible to have multiple DVRs with System ID 0 that are in the same area as long as they are not part of an RS485 network. If this is the case, all will be controlled at the same time when using the infrared remote control.


 
Highlight the box beside **Language** and press button. A drop-down menu displays the available languages. Highlight the desired language and press the button.

 
The box beside **Version** displays the software version of the DVR.

To upgrade the software, connect a USB device containing the upgrade package file to the DVR. Highlight **Upgrade...** and press the button. The **Upgrade** screen appears. The screen displays the upgrade package file names that are available. The “.rui” indicates that the file is for software upgrades and “.ofi” indicates that the file is for optical drive firmware upgrades.

Select the desired file and press the button. Highlighting the **Install** button and pressing the button will install the selected software package. Highlighting the **Cancel** button and pressing the button will close the window without upgrading the software. If the upgrade package file is not installed on the DVR properly, you will get an error message. The system restarts automatically after completing the upgrade.

CAUTION: The USB device must be FAT16 or FAT32 format.



You can import saved DVR settings or export the current DVR settings. To import saved DVR settings, connect the USB device containing the setup file (.dat) to the DVR. Highlight **Setup – Import...** and press the  button. Select the desired setup file and press the **Import** button to import the selected settings and change the DVR settings accordingly. Highlight **Include Network Setup** and press the  button to toggle between On and Off. When set to Off, the network settings will not be changed.



Setup Export


File name

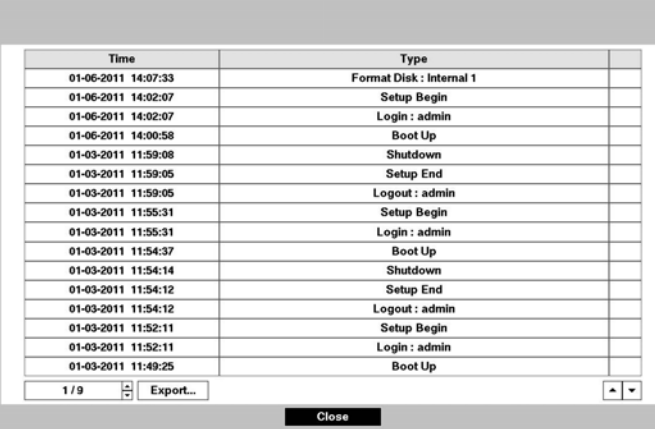
Export **Cancel**

To export the current DVR settings, connect the USB device to the DVR. Highlight **Setup – Export...** and press the  button. Highlight the box beside **File name** and press the  button. A virtual keyboard allows you to enter the file name. Selecting **Export** will save the current settings in .dat file format on the USB device.



NOTE: Even after changing the DVR settings by importing saved settings, the time-related settings (**Date/Time**, **Time Zone** and **Daylight Saving Time**) will NOT be changed.

 

CAUTION: The USB device must be **FAT16** or **FAT32** format.



Highlight **Show System Log...** and press the  button to display the System Log.

 


Time	Type
01-06-2011 14:07:33	Format Disk : Internal 1
01-06-2011 14:02:07	Setup Begin
01-06-2011 14:02:07	Login : admin
01-06-2011 14:00:58	Boot Up
01-03-2011 11:59:08	Shutdown
01-03-2011 11:59:05	Setup End
01-03-2011 11:59:05	Logout : admin
01-03-2011 11:55:31	Setup Begin
01-03-2011 11:55:31	Login : admin
01-03-2011 11:54:37	Boot Up
01-03-2011 11:54:14	Shutdown
01-03-2011 11:54:12	Setup End
01-03-2011 11:54:12	Logout : admin
01-03-2011 11:52:11	Setup Begin
01-03-2011 11:52:11	Login : admin
01-03-2011 11:49:25	Boot Up

1 / 9   **Export...** **Close**

The System Log screen lists system activities (up to 5,000 from the latest) that have occurred along with the time and date. The  icon will be displayed in the last column for system activities of the remote site. You can scroll through the log pages by using the Up and Down arrows, or you can go directly to a log page by entering the log page number in the box at the bottom left of the screen. Highlight **Close** and press the  button to exit the screen.

To export the system log information, connect the USB device to the DVR. Highlight **Export...** and press the  button. Highlight the box beside **File name** and press the  button. A virtual keyboard allows you to enter the file name. Selecting **Export** will save the log information in .txt file format on the USB device.

 


 
System Log Export

 
File name


Export **Cancel**

NOTE: When opening the saved .txt file, setting to the proper character encoding and using fixed width fonts will be required to read the file properly.

Highlighting **Clear All Data** and pressing the  button will clear all video data. You will be asked to verify that you wish to clear all data before the DVR erases the video data. **Clear All Data** will not clear the System Log.

Highlighting **System Shutdown** and pressing the  button. The Shutdown screen displays asking you to confirm whether or not you want to shut the system down.







After selecting Shutdown and pressing the  button, a screen will appear telling you when it is safe to disconnect power.



Date/Time

Highlight Date/Time and press the  button, and the Date/Time setup screen appears.


Figure 9 : System – Date/Time setup screen.



Highlight the first box beside **Date** and press the  button. The individual sections of the date will highlight. Use the Up and Down arrow buttons to change the number. Use the Left and Right arrow buttons to move between month, date and year. Once you have the correct date, press the  button.


 
Highlight the Format box beside **Date** and press the  button. Select from the three available date formats and press the  button to save your selected format.


Highlight the first box beside **Time** and press the  button. The individual sections of the time will highlight. Use the Up and Down arrow buttons to change the number. Use the Left and Right arrow buttons to move between hour, minutes and seconds. Once you have the correct time, press the  button.

 
Highlight the Format box beside **Time** and press the  button. Select from the three available time formats and press the  button to save your selected format.


NOTE: The clock will not start running until you have highlighted **Save** and pressed the  button.

Highlight the box beside **Time Zone** and press the  button. Select your time zone from the list and press the  button.


Highlight **Use Daylight Saving Time** and press the  button. Pressing the  button toggles between On and Off.

Highlighting **Time Sync...** and pressing the  button displays the Time Sync. screen. You can set up time synchronization between the DVR and standard time servers that are available in most time zones and countries, or between the DVR and another DVR.



Highlight the box beside **Automatic Sync.** and press the  button. This toggles between On and Off.

Highlight the box beside **Time Server** and press the  button. A virtual keyboard appears that you can use to enter the IP address or domain name of the time server.

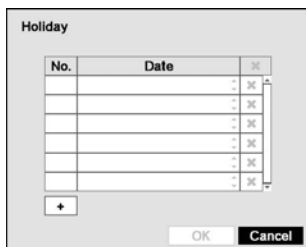
NOTE: You can use the domain name instead of IP address if you already set up the DNS Server when setting up the LAN.

Highlight the box beside **Interval** and press the  button. Set the time interval for synchronization from 30 minutes to 1 day at various time intervals.

Last Sync-Time displays the last time the DVR was synchronized with the time server.

Highlight **Run as Server** and press the  button. Pressing the  button toggles between On and Off. When it is On, the DVR you are setting up will run as a time server.


Highlighting **Holiday...** and pressing the  button displays the Holiday screen.


 


No.	Date

+


OK Cancel

You can set up holidays by highlighting + and pressing the  button. The current date appears.

Highlight the month and day and change them by using the Up and Down arrow buttons. Press the  button to add the date. Dates can be deleted by highlighting the X beside the date and pressing the  button.

NOTE: Holidays that do not fall on the same date each year should be updated once the current year's holiday has passed.

Account

Highlight **Account** and press the  button. The Account setup screen displays the authorized groups and users. You can add and delete groups and users. When adding a group, you can assign authority levels to the group.



General Date/Time **Account** Storage Monitoring


Group & User	
-	Administrator
	admin

+ Group... + User...

Auto Login: Never
Auto Logout: Never


Save Cancel


Figure 10 : System – Account setup screen.


The +/- column is used to collapse and expand user groups. If there is a + or – in this column, it indicates the item is a Group Name. If there is a – in front of the Group Name, it indicates that the group has been “expanded” and all of the User Names within that group are displayed below the Group Name. If there is a + in front of the Group Name, it indicates that the group has been “collapsed” and all of the User Names within that group are hidden. To collapse or expand a group, highlight the +/- column in front of the desired group and press the  button.

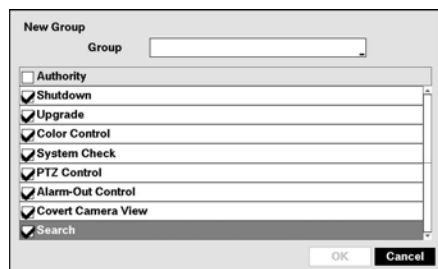
Highlighting a Group Name and pressing the  button allows you to change the authority levels assigned to the group.

CAUTION: Write down the new password and save it in a secure place. If the password is forgotten, the unit must be reset using the **Factory Reset Button** and all data settings will be lost.


 
Highlighting a User Name and pressing the  button allows you to add or change the password assigned to that user. You can also change the group to which the user is assigned.

The **X** column can be used to delete a User Name or an entire Group. If the **X** is grayed out, that Group or User cannot be deleted. Highlight the **X** and press the  button. You will be asked to confirm that you want to delete the User or Group. To delete the User currently logged into the DVR on a local system or a PC running ATVision, log the user out of the system first and then delete the user.

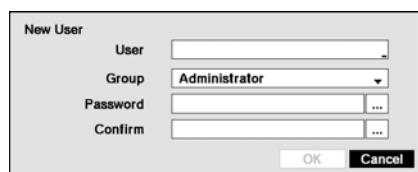
To add a Group, highlight the + Group... box and press the  button. A virtual keyboard appears allowing you to enter the Group name. You can use up to 15 characters including spaces in the group name. Enter the name and assign authority levels to the group.




The 'New Group' dialog box contains a 'Group' text field and a list of authority levels with checkboxes. The checked items are: Shutdown, Upgrade, Color Control, System Check, PTZ Control, Alarm-Out Control, Covert Camera View, and Search. There are 'OK' and 'Cancel' buttons at the bottom right.

 
Highlighting the Authority box and pressing the  button will toggle between all authority levels being turned On and Off. Highlighting the individual authority level boxes and pressing the  button will toggle between that authority level being turned On and Off. The authority levels that can be turned On and Off are:

- Shutdown – The user can shut the system down on a local system.
- Upgrade – The user can upgrade the software on a local system or a PC running ATVision.
- Color Control – The user can control brightness, contrast, hue and saturation for cameras on a local system or a PC running ATVision.
- System Check – The user can view the remote system status or check the remote system status as a batch process on a PC running ATVision.
- PTZ Control – The user can control the PTZ camera on a local system or a PC running ATVision.
- Alarm-Out Control – The user can reset the DVR's outputs including the internal buzzer during an alarm by pressing the **ALARM** button on a local system or alarm-out control button on a PC running ATVision.
- Covert Camera View – The user can view video from cameras set as Covert while in the Live Monitoring or Search mode on a local system or a PC running ATVision.
- Search – The user can access the Search mode on a local system or a PC running ATVision.
- Clip-Copy – The user can copy video clips on a local system or a PC running ATVision.
- Setup – The user without Setup authority cannot establish any system settings excluding system shutdown and logout on a local system or a PC running ATVision.
- System Time Change – The user can change the system date and time on a local system or a PC running ATVision.
- Data Clear – The user can clear all video data or format disks on a local system or a PC running ATVision.
- PTZ Setup – The user can establish all PTZ settings on a local system or a PC running ATVision.
- Alarm-Out Setup – The user can establish all Alarm-Out settings on a local system or a PC running ATVision.
- Covert Camera Setup – The user can establish all Covert Camera settings on a local system or a PC running or a PC running ATVision.
- Record Setup – The user can establish all Record settings on a local system or a PC running ATVision.
- Setup Import – The user can import saved DVR settings from a local system or a PC running ATVision.
- Setup Export – The user can export the current DVR settings to a local system or a PC running ATVision.



The 'New User' dialog box contains fields for 'User', 'Group' (set to Administrator), 'Password', and 'Confirm'. There are 'OK' and 'Cancel' buttons at the bottom right.


To add a User, highlight the + User... box and press the  button. A virtual keyboard appears allowing you to enter the User Name. Enter the name and assign the User to a Group and password. You can use camera buttons 1 to 9 on the front panel to assign the password. The password can be up to 8 digits. You will be asked to confirm the password.

NOTE: In addition to using the front panel buttons or the infrared remote control, you can use the virtual keyboard to assign the password. To display the virtual keyboard click the  button using the mouse (not supplied).

Highlighting the box beside Auto Login allows you to select a User to be automatically logged in when the DVR is powered up. It can also be set to never automatically login a user.

Highlighting the box beside Auto Logout allows you to select from a list of times that the user will be automatically logged out. The options are: Never, 1 min., 3 min., 5 min., 10 min., 15 min., 20 min., 30 min. and 1 hr.

Storage

Highlight Storage and press the  button. The Storage setup screen appears and displays information about the DVR's storage devices.

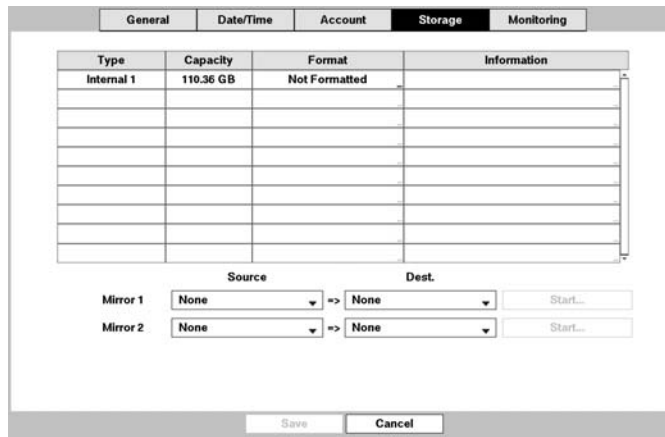


Figure 11 : System – Storage setup screen.

The information in the **Type** column describes the storage device.

The capacity of the storage device is displayed in the **Capacity** column.

The **Format** column displays whether the device is used for recording (**Record**), archiving (**Archive**) or not (**Not Using**). **Not formatted** indicates the device is not formatted. indicates when the device has temporary space set aside so that video clips can be saved on a DVD RW.



Highlight the box in the **Format** column for the desired storage device and press the button. You will be able to format the device for recording or archiving. When selecting **Not Using** from **Use As** and highlighting the **Format** button, the device will not be used for either recording or archiving. You can also set aside space to store temporary files for CD or DVD burning by selecting **Partition – CD/DVD Burn**.

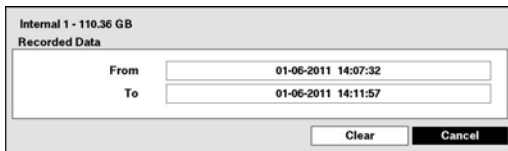
NOTE: The DVR does NOT support USB hard disk drives with a version lower than 2.0.

iSCSI devices cannot be formatted and used for archiving.

iSCSI and eSATA devices cannot be partitioned for CD or DVD burning.

The **Information** column displays whether the device is being used or not. **Other** indicates the device has been used for another DVR.

Highlight the box in the **Information** column for the desired storage device and press the button. You will be able to check the time information about recorded data.



If you want to erase recorded data on the selected device, highlight **Clear** and press the button. You will be asked whether or not you want to delete the data.

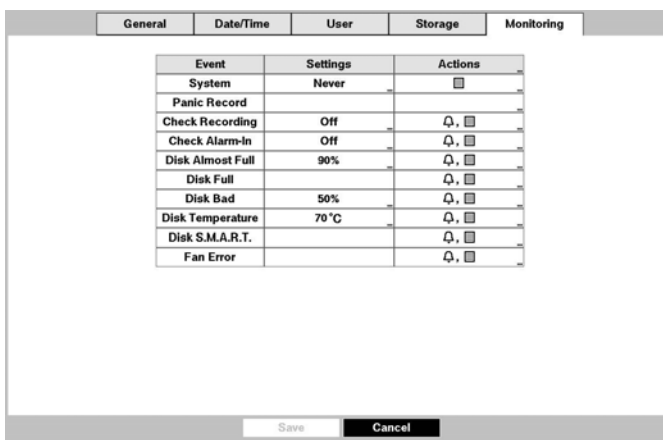
If you want to use a USB hard disk drive, highlight **Use** and press the button after connecting the device. Highlight **Don't Use** and press the button if you want to stop using the device.


















CAUTION: Do NOT disconnect the USB cable or the power from the device while copying video clips. If the USB cable is disconnected while copying video clips, archived data might be lost.

Highlight the boxes beside **Mirror** and press the button. The DVR can be set up to mirror **Source** disks to designated **Dest.** (destination) disks selected from internal hard disk drives. Refer to the *Chapter 4 – Disk Mirroring* for further information on setting up disk mirroring.

Monitoring

Highlight Monitoring and press the  button, and the Monitoring setup screen appears.





Event	Settings	Actions
System	Never	
Panic Record		
Check Recording	Off	 
Check Alarm-In	Off	 
Disk Almost Full	90%	 
Disk Full		 
Disk Bad	50%	 
Disk Temperature	70 °C	 
Disk S.M.A.R.T.		 
Fan Error		 

Save Cancel

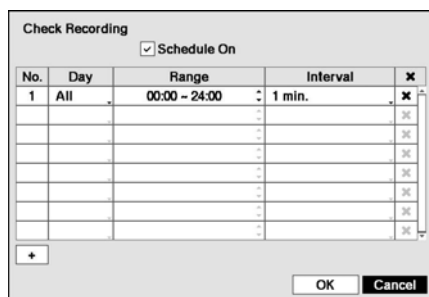
Figure 12 : System – Monitoring setup screen.

The DVR can be configured to run self-diagnostics and report the results.

Highlight the Settings box beside the desired event (System, Check Recording, Check Alarm-In, Disk Almost Full, Disk Bad, or Disk Temperature), and press the  button.







Highlight the Settings box beside System and press the  button. You can select the interval that you want the DVR to run self-diagnostics on the system. You can select from 1 hr. to 30 days or Never.

Highlight the Settings box beside Check Recording and press the  button. The Check Recording screen appears.







Check Recording


☒ Schedule On


No.	Day	Range	Interval	
1	All	00:00 - 24:00	1 min.	
				
				
				
				
				


+ OK Cancel


Highlighting Schedule On and pressing the  button toggles On and Off. When set to On, you can select the day, time range and interval that you want the DVR to run self-diagnostics on the recorder. The Interval can be selectable from 1 min. to 7 days or Never. Highlight the + and press the  button to add a schedule item. The  box allows you to delete a check recording schedule.

Highlight the Settings box beside Check Alarm-In and press the  button. You can select the interval that you want the DVR to run self-diagnostics on Alarm Inputs. You can select from 1 hr. to 30 days or Never.

Highlight the Settings box beside Disk Almost Full, and press the  button. Select the percentage level of disk usage at which you want the DVR to trigger an alert. Percentage levels range from 80% to 99%.

Highlight the Settings box beside Disk Bad, and press the  button. Select percentage level of bad disk sectors at which you want the DVR to trigger an alert. Percentage levels range from 10% to 90%.

Highlight the Settings box beside Disk Temperature, and press the  button. Select the temperature of hard disk drive at which you want the DVR to trigger an alert if the temperature exceeds the defined threshold. Refer to the hard disk drive manufacturer's documentation for the correct temperature setting.

The DVR can be set to react to system events. Highlight the Actions box beside the desired event and press the  button. System events can be associated with an Alarm-Out connector, sound the DVR's internal buzzer, and/or notify a number of different devices.

NOTE: *Alarm-Out* action cannot be set to *System* and *Panic Record* events.

Mail notify is the only option available for the *System* event.

For the Notify action to work, the DVR should be registered in the ATVision (Remote Administration System).


Recording Setup


General

Highlight General and press the  button, and the General setup screen appears.



Figure 13 : Record – General setup screen.

Highlighting **Recycle** and pressing the  button toggles between On and Off. In the Recycle mode, the DVR records over the oldest video data once all available storage space has been used. When Recycle is turned off, the DVR stops recording once all available storage space has been used.

Highlighting **Use De-Interlace** and pressing the  button toggles between On and Off. When set to On, the DVR will turn the de-interlace filter on while recording video with Very High (D1) resolution.

NOTE: The video signal has a time difference of 1/60 second (1/50 second for PAL) between odd and even fields because it is composed of 60 interlaced fields per second (50 fields for PAL). When recording video with Very High (D1) resolution, video is made up of frame units combining two fields – one odd field and one even field. This can cause horizontal scan lines or flashes in areas with motion because of the time difference between the two fields. Turning on the de-interlace filter provides clearer video by eliminating these horizontal scan lines and flashes.

Highlight the **Event Record Dwell** box and set the length of time you would like to record for the associated event. You can set the dwell from 5 seconds to 15 minutes. Refer to *Event Actions* screen in this chapter for information regarding event recording.


Highlight the slide bar beside **Auto Deletion**, and use the Left and Right arrow buttons or Up and Down arrow buttons to adjust the length of time recorded data will be kept from 1 to 999 days. The DVR automatically deletes video recorded earlier than the user-defined period under three conditions: at midnight, whenever the system reboots or whenever the user changes the Auto Deletion settings. Selecting **Never** will disable the Auto Deletion function.

Highlight the slide bar beside **Limit Time-Lapse Recording**, and use the Left and Right arrow buttons to adjust the length of the maximum storage time for time-lapse recording from 1 to 99 days. The Limit Time-Lapse Recording feature will function when the storage device has enough space to record video data longer than the preset period. When this feature is On, the DVR records over the oldest “time-lapse” video once all available storage has been used in the Recycle mode, so more event video can be saved. Selecting **Never** will disable the Limit Time-Lapse Recording function.


NOTE: When the storage device does not have enough space to record video data longer than the preset Limit Time-Lapse Recording period, the DVR records over the oldest video data (time-lapse or event video) as it would in the Recycle mode even if this feature is turned On.

 
The maximum storage time is only an estimate because the amount of space required to store video varies depending on many factors such as motion and image complexity.


CAUTION: When more than one disk is installed in the unit, the DVR records video on the disks sequentially based on time. And these sequentially recorded videos have the advantage that you can search recorded video easily even though a disk is removed from the unit. However, video recorded in the same time range might be saved on different disks by channel and by the type of recording mode. Once the Limit Time-Lapse Recording is set to On, the DVR will maintain this recording limitation even after disabling the function. If you want the DVR to record video on the disks sequentially based on time again, you must format all disks that are currently used for recording.

Highlighting Use Panic Recording and pressing the  button toggles between On and Off.

Highlight the Panic Recording – Duration box and set the duration of panic recording. Panic recording will stop automatically after the preset duration as long as the **PANIC** button is not pressed to stop the panic recording. You can set the dwell from 5 minutes to 1 hour. Select No Limit if you want to stop panic recording manually.

Highlighting the Panic Recording – ips and pressing the  button allows you to set the images per second for Panic recording. You can select from 1.00 to 30.00 ips (25.00 ips PAL).

Highlighting the Panic Recording – Quality and pressing the  button allows you to set the recorded image quality for Panic recording. You can select from: Very High, High, Standard and Basic.

Highlighting the Panic Recording – Resolution and pressing the  button allows you to set the recorded image resolution for Panic recording. You can select from: Very High (D1), High (Half D1) and Standard (CIF).

Schedule

Highlight Schedule and press the  button, and the Schedule setup screen appears.

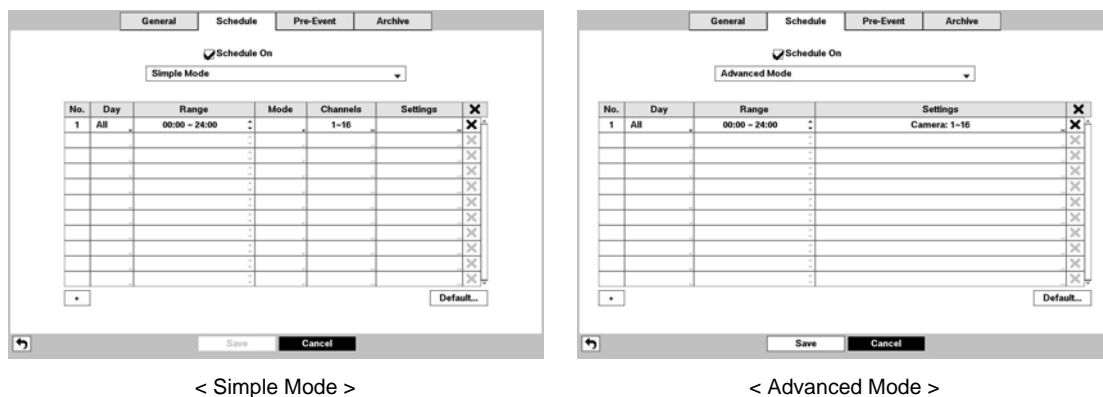





Figure 14 : Record – Schedule setup screen.


You can program the DVR to record only during certain times based on time, day of the week, and holidays. The smallest time segment you can use is 15 minutes.

Highlighting Schedule On and pressing the  button toggles between On and Off. In the Schedule On mode, the DVR records video based on the schedule established in the Schedule screen. When turning Schedule recording Off, you will be asked to confirm your decision, and  displays at the top-left corner of each camera screen. Panic recording will function even when Schedule is turned off.  displays during panic recording.

Highlight the **Schedule Mode** box and press the button. You can select between **Simple Mode** and **Advanced Mode**. Selecting **Advanced Mode** allows you to set up individual recording schedule for each event.

NOTE: Changing the schedule mode will reset all event and action statuses.

Highlight the + and press the button to add a schedule item.

Highlight the box under the **Day** heading and press the  button to change the days that the scheduled recording will take place. Choose from: Sun, Mon, Tue, Wed, Thu, Fri, Sat, M~F, Hol and All.



Highlight the box under the **Range** heading and press the button to change the time range that the scheduled recording will take place. The smallest time segment you can use is 15 minutes.


Highlight the box under the **Mode** heading and press the  button to change the recording mode that will be used. Choose from: No Record, Time, Event and Time & Event. (Simple Mode Only)


When the DVR is in the **No Record** mode, it will not record during the preset day and time range as long as the **PANIC** button is not pressed. Use the **No Record** mode when you do NOT want the DVR to record during certain times.

When the DVR is in the Time mode, the icon displays at the top-left corner of the screen. The DVR will record and displays the icon at the top-left corner of the screen during the scheduled times.

When the DVR is in the **Event** mode, the red 🌸 icon displays at the top-left corner of the screen. The DVR will record and displays the 🟠 icon at the top-left corner of the screen when any event occurs. When the DVR is in the **Pre-Event** recoding mode, the yellow 🌻 icon displays when there is no event, and the DVR is not recording. When the DVR is in the **Pre-Event** mode, the red 🌸 and 🟠 display when any event occurs and the DVR starts recoding.

When the DVR is in the **Time & Event** mode, the DVR will follow the Time settings and the  icon displays at the top-left corner of the screen. The DVR follows the Event settings and the  icon displays.

Highlight the box under the **Channels** heading and press the  button to select which cameras will be recorded. (Simple Mode Only)

Highlight the box under the **Settings** heading and press the  button to define the recording settings.

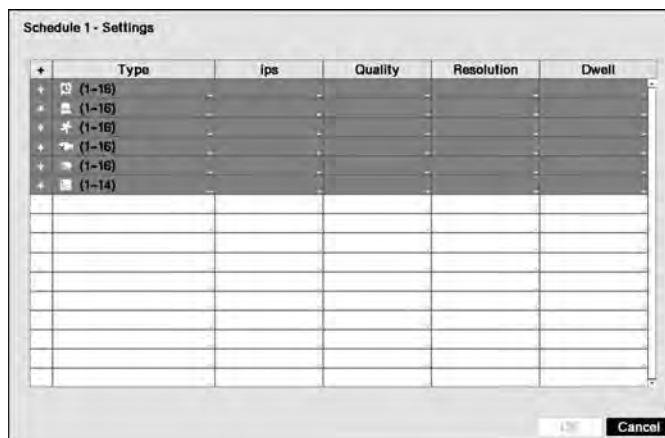


Figure 15 : Schedule – Settings (Advanced Mode) setup screen.

You can set the ips, Quality and Resolution (ips, Quality, Resolution and Dwell for Advanced Mode setup) of the recording for any modes you set up in the Mode column. If you do not set the ips, Quality, Resolution and Dwell in the Settings column, the DVR will follow the default settings. See below for details.

NOTE: Descriptions of the Record icons in the *Type* column are as follows:

Time-lapse (Time) Alarm-In Motion
Video Loss Video Blind Text-In


Channels that are not defined will use the setting values of the previous schedule item.


NOTE: When multiple events are detected at the same time from a specific channel, the DVR will record event video with the high setting values if the ips, Quality, Resolution and Dwell values of events are different from each other. However, the ips will be reset to the supported maximum value when the ips, Quality, Resolution and Dwell are all set to the highest value. (Advanced Mode Only)


Highlight the box under the **X** heading and press the  button to delete the recording settings. You will be asked to confirm that you want to delete the settings.


Highlight Default... and press the  button. The Default screen appears.


Default				
Mode	ips	Quality	Resolution	Dwell
Time	30.00 ips	High	High	
Event	30.00 ips	Very High	Very High	5 sec.

 OK Cancel


Highlighting boxes under ips and pressing the  button allows you to set the images per second for Time and Event recording. You can select from 1.00 to 30.00 ips (25.00 ips PAL).

Highlighting boxes under Quality and pressing the  button allows you to set the recorded image quality for Time and Event recording. You can select from: Very High, High, Standard and Basic.

Highlighting boxes under Resolution and pressing the  button allows you to set the recorded image resolution for Time and Event recording. You can select from: Very High (D1), High (Half D1) and Standard (CIF).

Highlighting boxes under Dwell and pressing the  button allows you to set the length of time you would like to record for the associated event. (Advanced Mode Only)

Pre-Event

Highlight Pre-Event and press the  button, and the Pre-Event setup screen appears. If you do not have Event set up in the Record Schedule, a message will display alerting you to this fact.

General		Schedule		Pre-Event		Archive	
No.	ips	Quality	Resolution	Dwell			
<input type="checkbox"/> 1. CAM1	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 2. CAM2	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 3. CAM3	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 4. CAM4	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 5. CAM5	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 6. CAM6	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 7. CAM7	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 8. CAM8	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 9. CAM9	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 10. CAM10	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 11. CAM11	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 12. CAM12	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 13. CAM13	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 14. CAM14	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 15. CAM15	30.00 ips	High	Standard	00 min. 05 sec.			
<input type="checkbox"/> 16. CAM16	30.00 ips	High	Standard	00 min. 05 sec.			


 Save Cancel

Figure 16 : Record – Pre-Event setup screen.

When the DVR is in the Event Record mode it is possible to have it record images before the event occurs. The Pre-Event screen allows you to define how to handle pre-event recording.

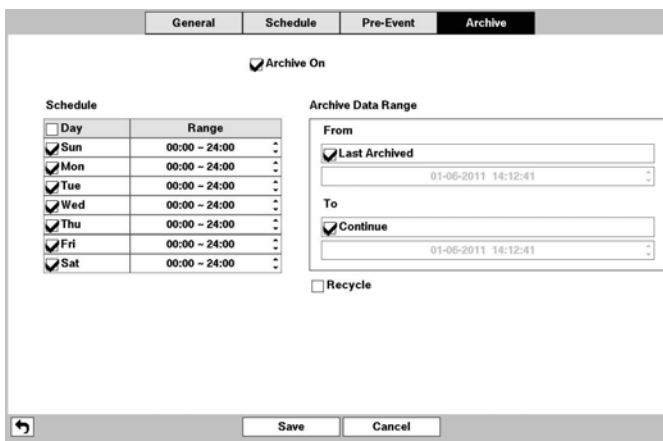
You can turn individual cameras On or Off for pre-event recording. The image speed can be set from 1.00 to 30.00 ips (25.00 ips PAL), image quality can be selectable from Very High, High, Standard and Basic, and image resolution can be selectable from Very High (D1), High (Half D1) and Standard (CIF).

You can set the amount of time to record prior to the event by adjusting the Dwell. You can set the Dwell from 5 seconds to 30 minutes. The longer the dwell set, the fewer maximum ips can be set.

NOTE: When the DVR is in the Time or Time & Event mode, it ignores the pre-event settings and follows the time settings.

Archive

Highlight Archive and press the  button, and the Archive setup screen appears.



The Archive setup screen has tabs for General, Schedule, Pre-Event, and Archive. The Archive tab is selected. At the top, there is a checkbox for 'Archive On' which is checked. Below this is a 'Schedule' section with a table of days and ranges. To the right is an 'Archive Data Range' section with 'From' and 'To' fields, each with a 'Last Archived' or 'Continue' checkbox. At the bottom right is a 'Recycle' checkbox. Navigation buttons (back, save, cancel) are at the bottom.

Day	Range
<input checked="" type="checkbox"/> Sun	00:00 ~ 24:00
<input checked="" type="checkbox"/> Mon	00:00 ~ 24:00
<input checked="" type="checkbox"/> Tue	00:00 ~ 24:00
<input checked="" type="checkbox"/> Wed	00:00 ~ 24:00
<input checked="" type="checkbox"/> Thu	00:00 ~ 24:00
<input checked="" type="checkbox"/> Fri	00:00 ~ 24:00
<input checked="" type="checkbox"/> Sat	00:00 ~ 24:00

Archive Data Range

From: ☒ Last Archived
01-06-2011 14:12:41

To: ☒ Continue
01-06-2011 14:12:41

☐ Recycle


Figure 17 : Record – Archive setup screen.

Highlight Archive On and press the  button to toggle between On and Off.

NOTE: If you have not set up a storage device for archiving, a message appears notifying you of this.

Select the Days and Time Range you want archived.

You can accept the Archive Data Range by leaving the default checkmarks in the Last Archived and Continue boxes. If you wish to enter specific times and dates in From and To, toggle the checkmarks Off and then enter the time and date.

Highlight Recycle and press the  button to toggle between On and Off. When Recycle is On and the storage device is full, the newest archived video data will overwrite the oldest archived data. When Recycle is Off, the DVR will stop archiving video data until more space is made available.

CAUTION: When the Recycle is On, changing the start date and time for archiving will delete all archived data after the changed start date and time.

Network Setup

General

Highlight General and press the  button, and the General setup screen displays.

Figure 18 : Network – General setup screen.

You can limit the network bandwidth settings so that system does not consume too much network bandwidth. Highlight the box beside Network Bandwidth Limit and press the Up and Down arrow buttons to set the desired maximum bandwidth from 50Kbps to 1Gbps.

NOTE: When limiting the network bandwidth, the remote watch image on the PC running ATVision might not be displayed properly.

The DVR supports two-way audio communication between a local system and a PC running ATVision. Highlighting the box beside Remote Audio Channel and pressing the button allows you to select the audio channel that sends audio to the remote site. Selecting Select From ATVision will send audio of the channel selected from ATVision.

NOTE: Depending on network conditions, audio might be interrupted or out of synchronization during transmission.

Highlight Use SSL for Transferring Data and press the button to toggle between On and Off. When it is On, the security of data except video and audio transmitted for remote monitoring or remote recording can be enhanced by using the SSL (Secure Sockets Layer) authentication. When using the SSL function, the DVR cannot be connected with a remote program or a network keyboard which does not support the SSL function.

CAUTION: The remote connection will be disconnected temporarily after changing the SSL settings.

NOTE: This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

Highlight the first box beside Remote Watch – bps/ips. Press the Up and Down arrow buttons to set the Transfer Speed from 50Kbps to 1Gbps.

Highlight the second box beside Remote Watch – bps/ips. You can select the unit of measure for the transfer speed between: bps and ips. Press the button to set the transfer speed.

Highlight the box beside Remote Watch – Quality and press the button. You can select the Quality from: Very High, High, Standard and Basic. Press the button to set the Quality.

Highlight the box beside Remote Watch – Resolution and press the button. You can select the Resolution from: High (Half D1) and Standard (CIF). Press the button to set the Resolution.

NOTE: The higher Quality and Resolution settings require higher Transfer Speed settings. The transfer speed you set is the maximum speed. Depending on the network environment, this speed may not be achieved.

Highlight Use ATVision Service and press the button to toggle between On and Off. See *Appendix – ATVision* for detailed descriptions of the ATVision service.

Highlight the box beside Port and press the button. Set the port number used when accessing ATVision by using the Up and Down arrow buttons to increase or decrease the numbers.

IP Address

Highlight IP Address and press the  button, and the IP Address setup screen displays.

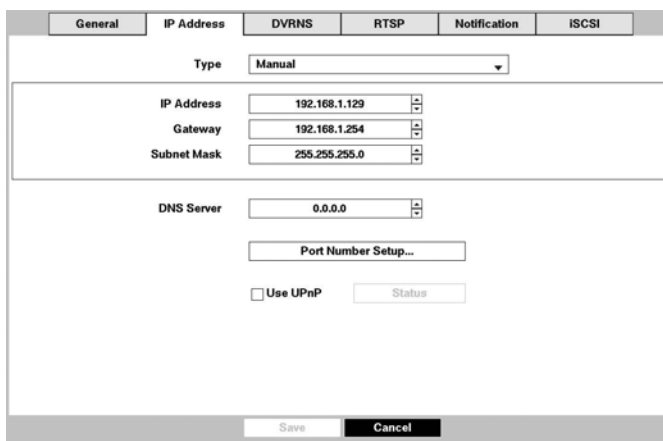

 


Figure 19 : Network – IP Address (Manual) setup screen.

Highlight the box beside Type and press the  button. You can select the type of network configuration from: Manual, DHCP and ADSL (with PPPoE). Select the desired type and press the  button.


Selecting Manual from the Type allows you to set up LAN parameters manually.

Change the numbers by highlighting them and using the Up and Down arrow buttons to increase or decrease the number. The factory default LAN settings are:

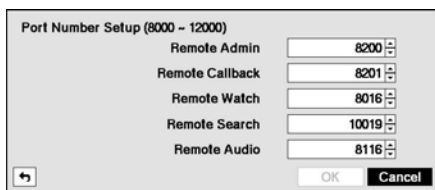
IP Address: 192.168.1.129
 Gateway: 192.168.1.254
 Subnet Mask: 255.255.255.0

NOTE: You will need to get the appropriate IP Address, Gateway and Subnet Mask from your network administrator.

Highlight the box beside DNS Server. Press the Up and Down arrow buttons to set the IP address of the DNS server.

Highlight the Port Number Setup... box and press the  button. The Port Number Setup screen appears.

NOTE: You will need to get the appropriate Port Numbers for each ATVision related program (Admin, Callback, Watch, Search and Audio) from your network administrator.




Change the numbers by highlighting them and using the Up and Down arrow buttons to increase or decrease the number. The factory default Port settings are:

Remote Admin: 8200
 Remote Callback: 8201
 Remote Watch: 8016
 Remote Search: 10019
 Remote Audio: 8116

NOTE: The system restarts automatically after changing the port settings.


Do NOT use the same port number for two different programs, otherwise, the DVR cannot be connected with the PC running ATVision.

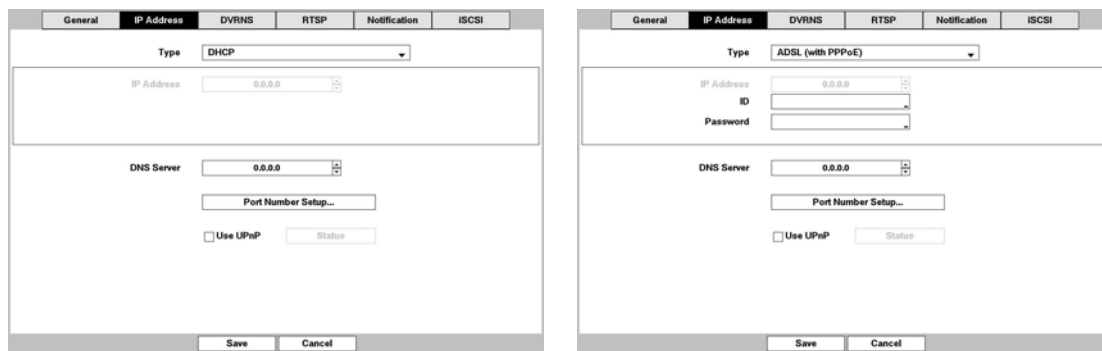
CAUTION: When changing the port settings, you must change the port settings on the PC running ATVision as well. Refer to the ATVision manual for details.

Highlight Use UPnP and press the  button to toggle between On and Off. When it is On, port forwarding from the NAT (Network Address Translation) device to the DVR will be enabled automatically via UPnP (Universal Plug and Play) service. This function will be especially useful when accessing a port on a private IP address.

NOTE: For the UPnP service to work, the NAT device should support the UPnP Port Forwarding function and the function should be set to enabled.


You cannot change the port settings when *Use UPnP* is On.


Highlight the **Status** box and press the  button to display the port numbers forwarded from the NAT device via UPnP service.



Selecting DHCP from the Type and highlighting **Save** button reads the current IP address of the DVR configured by DHCP (Dynamic Host Configuration Protocol) network.

Selecting ADSL (with PPPoE) allows you to set up the ADSL network.

Highlight the box beside **ID** and press the  button. A virtual keyboard appears allowing you to enter the ID for ADSL connection.

Highlight the box beside **Password** and press the  button. A virtual keyboard appears allowing you to enter the password for ADSL connection.

NOTE: Entering the *ID* and *Password* and highlighting **OK** reads the current IP address of the DVR configured by the ADSL network.

If the DVR is configured for DHCP or an ADSL network, the IP address of the DVR might change whenever the unit is turned on.

DVRNS

Highlight DVRNS and press the  button, and the DVRNS setup screen displays.

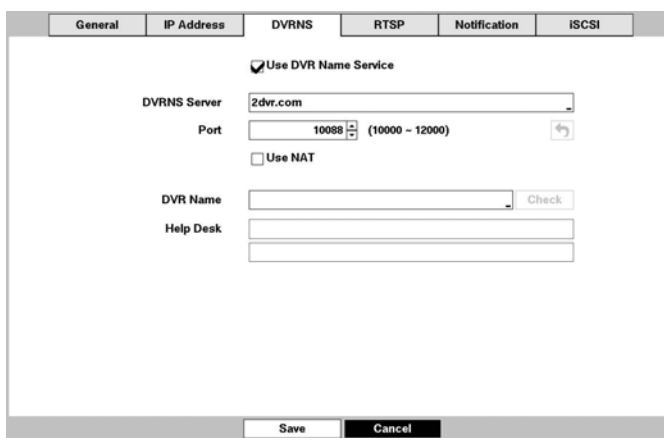




Figure 20 : Network – DVRNS setup screen.

Highlight **Use DVR Name Service** and press the  button to toggle between On and Off.

NOTE: The DVRNS (DVR Name Service) allows the DVR to use Dynamic IP addresses for remote connection. When this feature is On, you can access your DVR remotely using the DVR name instead of its IP address. For the DVRNS feature, the DVR should be registered on the DVRNS server.


Highlight the box beside DVRNS Server and press the  button. A virtual keyboard appears allowing you to enter the IP address or domain name of the DVRNS server.


NOTE: You will need to get the IP Address or domain name of the DVRNS Server from your network administrator. You can use the domain name instead of IP address if you already set up the DNS Server when setting up the LAN.

Highlight the box beside Port and press the  button. Set the port number of the DVRNS server using the Up and Down arrow buttons to increase or decrease the numbers.

Highlight Use NAT and press the  button to toggle between On and Off.


NOTE: When using the NAT (Network Address Translation) device, refer to the NAT manufacturer's instructions for the proper network settings.

Highlight the box beside DVR Name and press the  button. A virtual keyboard appears allowing you to enter the DVR name to be registered on the DVRNS server.


Highlight the Check box and press the  button to check whether or not the name you entered can be used.

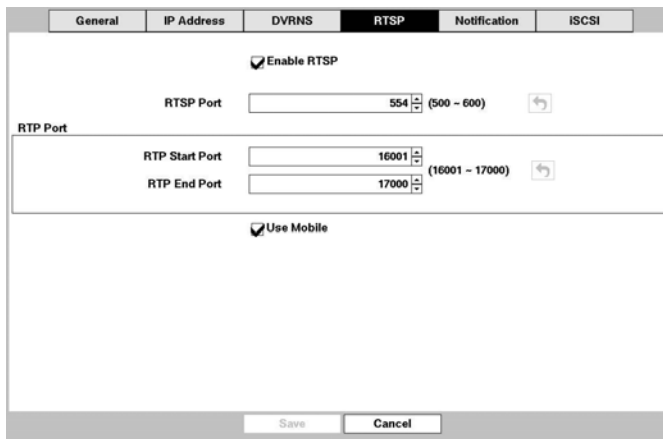
NOTE: The DVR name you entered should be checked by selecting Check, otherwise the DVRNS changes will not be saved.

When entering no name or a name already registered on the DVRNS server, an error message displays.

Highlighting Save and pressing the  button registers the DVR on the DVRNS server. Proper DVRNS settings will display the help desk information of the DVRNS server in the box beside Help Desk.

RTSP


Highlight RTSP and press the  button. The RTSP setup screen displays.




The image shows the RTSP setup screen with the following elements:

- Tabs: General, IP Address, DVRNS, **RTSP**, Notification, iSCSI
- ☒ Enable RTSP
- RTSP Port: 554 (500 ~ 600)
- RTP Port section:
 - RTP Start Port: 16001 (16001 ~ 17000)
 - RTP End Port: 17000
- ☒ Use Mobile
- Buttons: Save, Cancel


Figure 21 : Network – RTSP setup screen.

Highlight Enable RTSP (Real-Time Streaming Protocol) and press the  button to toggle between On and Off. You will be able to change the settings if Enable RTSP is enabled.

Highlight the box beside RTSP Port and press the  button. Set the port number of the RTSP server obtained from your system administrator.

Highlight the box beside RTP Start Port and press the  button. Set the start port number of the RTP server obtained from your system administrator.

Highlight the box beside RTP End Port and press the  button. Set the end port number of the RTP server obtained from your system administrator.

Highlight Use Mobile and press the  button to toggle between On and Off. When set to on, you can access a remote DVR using a Blackberry or other mobile devices.

NOTE: Selecting *Use Mobile* sets the ATVision service to be enabled automatically regardless of your ATVision settings.


When using NAT (Network Address Translation) or firewall services, opening all UDP ports allows you to access a DVR using Blackberry and Android devices.

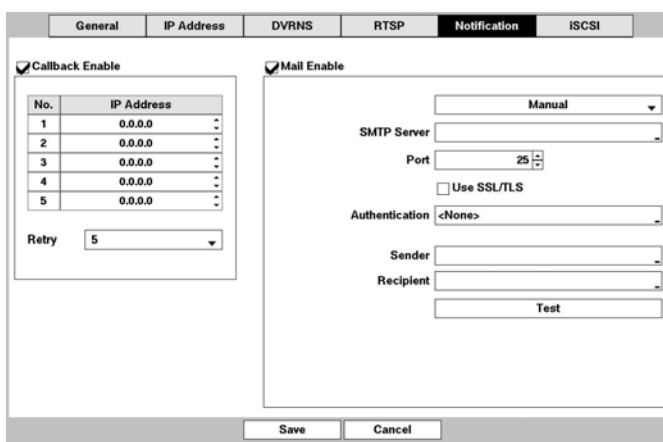
You can access a remote DVR and monitor live video images using media players, such as VLC Player, supporting RTSP service. Start the media player on your local PC and enter “rtsp://ID:Password@IP address:RTSP port number/track ID=‘channel number’”, or start Internet Explorer on your Blackberry or other mobile devices and enter “http://IP address:ATVision port number/”.

Some media players might play video properly depending on network conditions.

RTSP service might not be supported, depending on the type of media player.

Notification

Highlight Notification and press the  button. The Notification setup screen displays. The DVR can be set up to contact a computer running ATVision (Remote Administration System) or to send an email when an event occurs.



No.	IP Address
1	0.0.0.0
2	0.0.0.0
3	0.0.0.0
4	0.0.0.0
5	0.0.0.0

Retry: 5

Mail Enable: Manual

SMTP Server: []

Port: 25

Use SSL/TLS: []

Authentication: <None>


Sender: []


Recipient: []

Test: []


Save Cancel

Figure 22 : Network – Notification setup screen.

Highlight Callback Enable and press the  button to toggle between On and Off. You will only be able to change the IP addresses if Callback is enabled.


Highlight the IP Address box that you want to change and press the  button. Use the arrow buttons to enter the IP address of the computer you want contacted during an event. You can enter up to five IP addresses.


Highlight the box beside Retry and enter the number of times you would like the DVR to try contacting the computer. You can select from 1 to 10 retries.

Highlight Mail Enable and press the  button to toggle between On and Off. You will only be able to change the settings if Mail is enabled.


 

Highlight the box beside SMTP Server and press the  button. A virtual keyboard appears that you can use to enter the IP address or domain name of the SMTP server.

 
NOTE: You will need to get the IP Address or domain name of the SMTP Server from your network administrator. You can use the domain name instead of IP address if you already set up the DNS Server when setting up the LAN.

Highlight the box beside Port and press the  button. Use the arrow buttons to enter the SMTP Server port number obtained from your system administrator. The default port number is 25.

Highlight Use SSL/TLS and press the  button to toggle between On and Off. When it is On, the DVR can send an email via an SMTP server requiring SSL (Secure Sockets Layer) authentication.



Highlight the box beside Authentication and press the  button. An Authentication screen appears. Highlight Use and press the  button to toggle between On and Off. Highlight the box beside User/Password and press the  button. A virtual keyboard appears allowing you to enter the user ID and password.


NOTE: In addition to using the front panel buttons or the infrared remote control, you can use the virtual keyboard to assign the password. To display the virtual keyboard click the  button using the mouse (not supplied).

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).


Highlight the box beside Sender and enter the sender's e-mail address. Use the virtual keyboard to enter the e-mail address.

NOTE: The e-mail address must include the "@" character to be a valid address.

Highlight the box beside Recipient and enter the recipient's e-mail address. Use the virtual keyboard to enter the e-mail address.

Highlight the Test box and press the  button to test emailing with the current settings you made.

iSCSI

Highlight iSCSI and press the  button. The iSCSI setup screen displays.

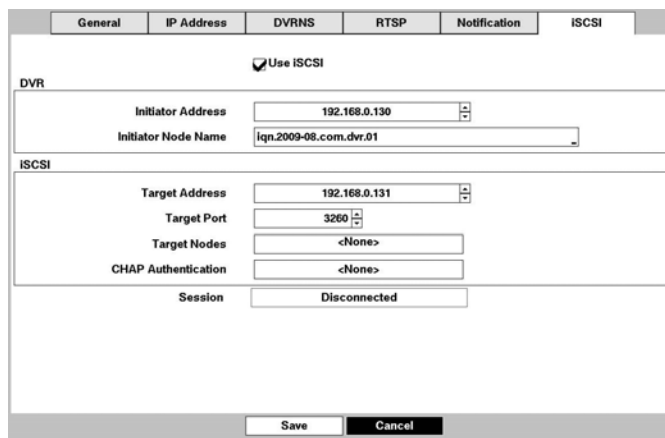





Figure 23 : Network – iSCSI setup screen.


Highlight Use iSCSI Name Service and press the  button to toggle between On and Off.

Highlight the DVR – Initiator Address box and press the  button. Use the arrow buttons to enter the IP address of DVR.


NOTE: You will need to get the IP address from your network administrator.

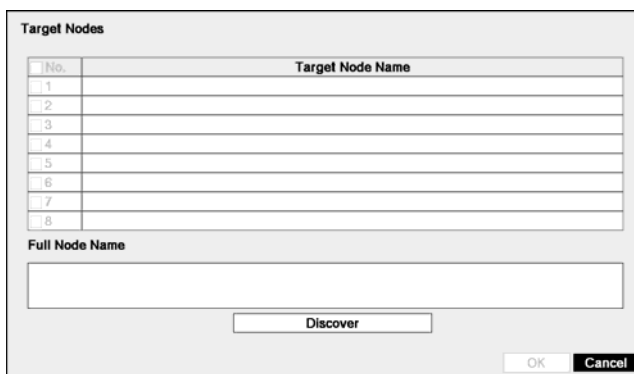
Do NOT use the same IP address for the Initiator Address set here and IP address set during Network – IP Address setup, otherwise the iSCSI changes will not be saved.

Highlight the DVR – Initiator Node Name box and press the  button. A virtual keyboard appears allowing you to enter the DVR name to be registered on the iSCSI device.

 
Highlight the iSCSI – Target Address box and press the  button. Use the arrow buttons to enter the IP address of the iSCSI device that you are connecting to the DVR.


Highlight the iSCSI – Target Port box and press the  button. Use the arrow buttons to enter the port number of the iSCSI device that you are connecting to the DVR.

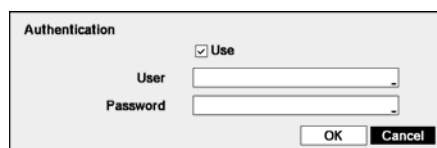
Highlight the iSCSI – Target Nodes box and press the  button, and the Target Nodes screen appears.





The Target Nodes screen displays a table with two columns: 'No.' and 'Target Node Name'. The 'No.' column contains numbers 1 through 8. The 'Target Node Name' column is empty. Below the table is a text box labeled 'Full Node Name'. At the bottom of the screen are three buttons: 'Discover', 'OK', and 'Cancel'.

Highlight Discover and press the  button. Proper iSCSI settings will display the list of iSCSI hard disk drives currently connected to the DVR in the Target Node Name list, and selecting a specific device from the list displays its full name in the Full Node Name box. Selecting a desired device and selecting OK allows you to use the selected device for recording.

Highlight the box beside iSCSI – CHAP Authentication and press the  button. An Authentication screen appears.



The Authentication screen has a title 'Authentication'. It contains a checkbox labeled 'Use' which is checked. Below this are two text boxes labeled 'User' and 'Password'. At the bottom are 'OK' and 'Cancel' buttons.

Highlight Use and press the  button to toggle between On and Off. Highlight the box beside User/Password and press the  button. A virtual keyboard appears allowing you to enter the user ID and password.

NOTE: Setting up the Authentication will be required to access the iSCSI device that uses the CHAP Authentication function.

The box beside Session displays the current connection status between the DVR and iSCSI device.

NOTE: The system restarts automatically after changing the iSCSI settings.

When using an iSCSI device, refer to the device manufacturer's instructions for proper settings.

Recorded video and audio on an iSCSI device might play properly depending on network conditions.

CAUTION: The iSCSI device should be connected directly to the iSCSI connector on the rear panel of the DVR.

Event Setup

Motion

Highlight Motion and press the  button, and the Motion setup screen appears.

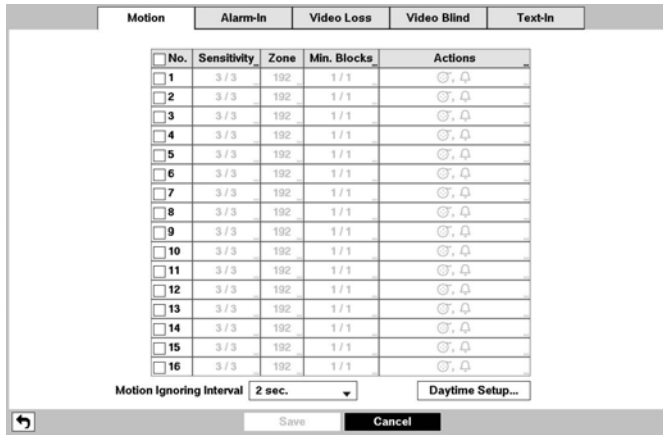
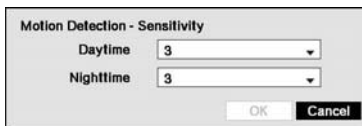


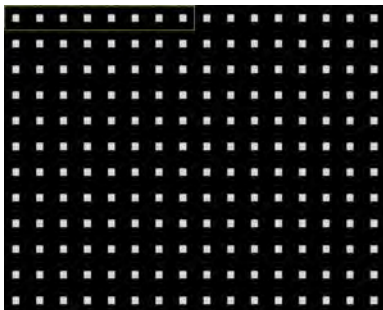
Figure 24 : Event – Motion setup screen.

Your DVR has built-in video motion detection. Video motion detection can be turned On or Off for each camera.



Highlighting the box under the **Sensitivity** heading and pressing the [←] button allows you to adjust the DVR's sensitivity to motion for Daytime and Nighttime independently. There are five settings with 1 being the least sensitive and 5 being the most sensitive.

 
You can define the area of the image where you want to detect motion; e.g., a doorway. Highlight the box under the **Zone** heading, and press the [←] button. The Motion Detection Zone screen displays.



The Motion Detection Zone screen is laid over the video for the selected camera. You can set up motion detection zones by selecting or clearing blocks.

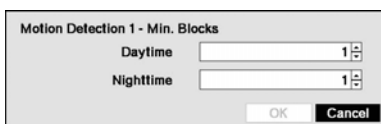
NOTE: You can set up motion zones one block at a time in groups of 8 individual block groups. A block group is positioned within the image area using the Up and Down arrow buttons, and individual blocks within the block groups are selected or cleared using the camera buttons.

Press the [←] button to display the menu screen. The menu on the setup screen has the following functions:





- Select — Activates highlighted blocks to detect motion.
- Clear — Deactivates highlighted blocks so that they will not detect motion.
- Reverse — Activates inactive highlighted blocks and deactivates active highlighted blocks.
- Select All — Activates all blocks to detect motion.
- Clear All — Deactivates all blocks so that they will not detect motion.
- Reverse All — Activates inactive blocks and deactivates active blocks.
- Zone View — Displays any detected motion within the zone in red.
- OK — Accepts changes and closes Zone setup.
- Cancel — Exits Zone setup without saving changes.

NOTE: Displaying the detection zone is supported only in the HD display mode.



You can adjust the minimum number of detection blocks that must be activated to trigger a motion alarm. Highlighting the box under the **Min. Blocks** heading and pressing the [←] button allows you to adjust the minimum number of detection blocks for Daytime and Nighttime independently. Smaller numbers provide greater sensitivity because fewer detection blocks must be activated.

Highlighting the box under the **Actions** and pressing the  button. The DVR can be set to react to motion detection differently for each camera. Each camera can be associated with another camera, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, move PTZ cameras to preset positions, and/or display a camera on a SPOT monitor.

You can control excessive event logging and remote notification of motions detected after the motion dwell time by adjusting the motion ignoring dwell intervals. Highlight the box beside **Motion Ignoring Interval** and press the  button. A list of intervals ranging from 1 to 5 seconds or **Never** appears. The DVR will not log and notify motion events occurred during the preset interval range.

NOTE: The record action for motion events will not be affected by the Motion Ignoring function.


Highlighting **Daytime Setup** and pressing the  button allows you to set up the Daytime range.



Daytime Setup

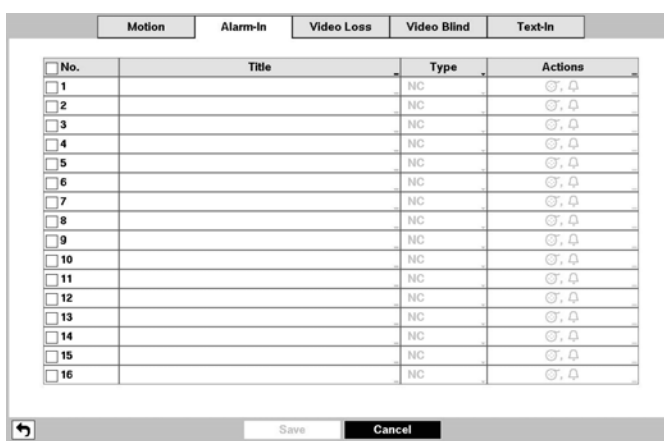
Daytime 07:00 - 18:00

























 


 




OK Cancel

Highlight the box beside **Daytime** and press the  button. Use the Up and Down arrow buttons to set the Daytime range. The DVR will consider the remaining time range as the Nighttime.

Alarm-In


Highlight Alarm-In and press the  button, and the Alarm-In setup screen appears.




No.	Title	Type	Actions
1		NC	 
2		NC	 
3		NC	 
4		NC	 
5		NC	 
6		NC	 
7		NC	 
8		NC	 
9		NC	 
10		NC	 
11		NC	 
12		NC	 
13		NC	 
14		NC	 
15		NC	 
16		NC	 


Save Cancel

Figure 25 : Event – Alarm-In setup screen.

The alarm terminal strip on the back of the DVR has inputs associated with each alarm. You can set up each input on the **Alarm-In** screen. You can turn each input On or Off by highlighting the alarm number and pressing the  button.

Each input can be given a title. Highlight the desired Title box and press the  button. A virtual keyboard appears allowing you to enter a title name.

Each input can be set as **NO** (normally open) or **NC** (normally closed).

Highlighting the box under the **Actions** and pressing the  button. You can set the actions the DVR will take whenever it senses an input on one of its alarm input connectors. Alarm input can be associated with cameras, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, move PTZ cameras to preset positions, and/or display a camera on a SPOT monitor.

Video Loss

Highlight Video Loss and press the  button, and the Video Loss setup screen appears.

No.	Actions
1	🔔
2	🔔
3	🔔
4	🔔
5	🔔
6	🔔
7	🔔
8	🔔
9	🔔
10	🔔
11	🔔
12	🔔
13	🔔
14	🔔
15	🔔
16	🔔

Check Obscuration: Never

Save Cancel

Figure 26 : Event – Video Loss setup screen.

Highlighting the box under the **Actions** and pressing the button. The DVR can be set to react to video loss differently for each camera. Each camera can be associated with another camera, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, move PTZ cameras to preset positions, and/or display a camera on a SPOT monitor.

The DVR checks to see if anything is obscuring the camera. Highlight the box beside **Check Obscuration**, and press the button. A list of sensitivity ranging from 1 to 10 or **Never** appears. The sensitivity can be set from **Never** to 10 (extremely sensitive).

Video Blind

Highlight **Video Blind** and press the button, and the Video Blind setup screen appears. The DVR checks to see if anything is blinding a camera.

<input type="checkbox"/>	No.	Sensitivity	Activation Time	Actions
<input type="checkbox"/>	1	1	5 sec.	🔔, 📺
<input type="checkbox"/>	2	1	5 sec.	🔔, 📺
<input type="checkbox"/>	3	1	5 sec.	🔔, 📺
<input type="checkbox"/>	4	1	5 sec.	🔔, 📺
<input type="checkbox"/>	5	1	5 sec.	🔔, 📺
<input type="checkbox"/>	6	1	5 sec.	🔔, 📺
<input type="checkbox"/>	7	1	5 sec.	🔔, 📺
<input type="checkbox"/>	8	1	5 sec.	🔔, 📺
<input type="checkbox"/>	9	1	5 sec.	🔔, 📺
<input type="checkbox"/>	10	1	5 sec.	🔔, 📺
<input type="checkbox"/>	11	1	5 sec.	🔔, 📺
<input type="checkbox"/>	12	1	5 sec.	🔔, 📺
<input type="checkbox"/>	13	1	5 sec.	🔔, 📺
<input type="checkbox"/>	14	1	5 sec.	🔔, 📺
<input type="checkbox"/>	15	1	5 sec.	🔔, 📺
<input type="checkbox"/>	16	1	5 sec.	🔔, 📺

☐ Use Ignoring Time Time Setup...

Save Cancel

Figure 27 : Event – Video Blind setup screen.

You can turn individual cameras On or Off for video blind detection by highlighting the camera number and pressing the button.

Video Blind 1 - Settings


Sensitivity: 1



OK Cancel

Highlighting the box under the **Sensitivity** heading allows you to adjust the DVR's sensitivity to video blind from 1 (least sensitive) to 10 (most sensitive).

NOTE: Video blind might NOT be detected for a camera with a very noisy image especially when set for low sensitivity values.

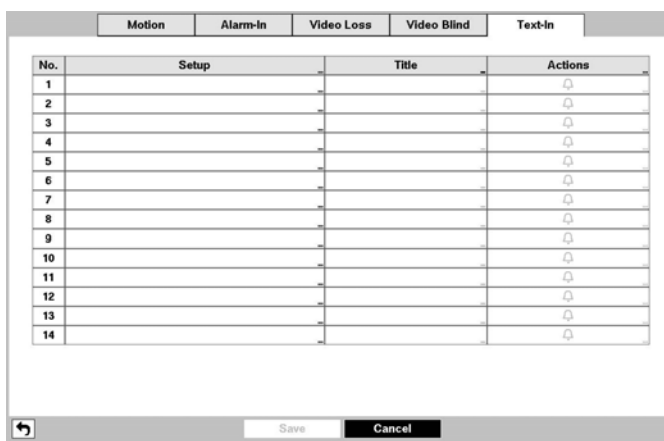
Highlighting the box under the Activation Time heading allows you to set the duration before the DVR will report a Video Blind. The DVR will not consider any blinded camera to be a Video Blind if the detected blindness is less than the Activation Time set on this screen.

Highlighting the box under the Actions and pressing the  button. The DVR can be set to react to video blind differently for each camera. Each camera can be associated with another camera, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, move PTZ cameras to preset positions, and/or display a camera on a SPOT monitor.

Highlight Use Ignoring Time and press the  button to toggle between On and Off. When set to On, the DVR will ignore video blind events occurred during the preset period. Highlighting Time Setup and press the  button allows you to set up event ignoring time.

Text-In


Highlight Text-In and press the  button, and the Text-In setup screen appears.



No.	Setup	Title	Actions
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			

Figure 28 : Event – Text-In setup screen.

The DVR can be set to react to text input from devices such as ATMs (Automated Teller Machines) and POS (Point of Sale; i.e., cash registers). This screen allows you to configure the DVR for each text-in device.

Highlight the box under the Setup heading, and press the  button. Selecting the Setup heading changes all the parameters excluding Port settings of all the text input channels.

NOTE: The system performance might be affected when a large quantity of text inputs are detected from several channels at the same time.

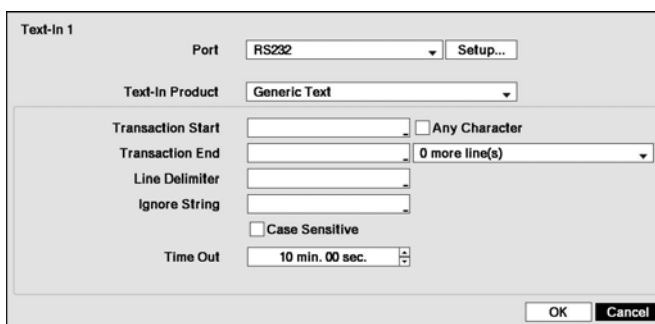




Figure 29 : Text-In Device screen.

Highlight the box beside Port, and press the  button. Select from None, RS232, RS485, USB-Serial (1~8) and LAN (1~16).


NOTE: If you have set the Port as None, you will not be able to make any changes to the screen.


When using the USB to serial text-in device, do NOT remove the USB cable from the port while the system is running.

Highlight Setup..., and press the  button. Use the ATM or POS manufacturer's recommended settings when configuring the RS232, RS485, USB-Serial or LAN ports.


Highlight the box beside Text-In Product, and press the  button. Select your device from the list.


NOTE: The following description is for a Generic Text Device. The screen changes for different types of text input devices, and there will be different parameter boxes for you to enter information.


Highlight the box beside Transaction Start, and press the  button. Use the virtual keyboard to enter the Transaction Start string. Refer to the device manufacturer's documentation for the text string that the device first sends when a transaction starts.


If you want the DVR to react to any character sent from the text input device, you will want to turn On Any Character. Highlight Any Character, and press the  button to toggle between On and Off.


NOTE: If Any Character is turned On, you will not be able to enter any text in the *Transaction Start* box.


Highlight the box beside Transaction End, and press the  button. Use the virtual keyboard to enter the Transaction End string. Refer to the device manufacturer's documentation for the text string that the device sends when a transaction ends.


Highlight the more line(s) box, and press the  button. Select the number of additional lines of text that you want the DVR to record. You can choose from 0 to 10.

Highlight the box beside Line Delimiter, and press the  button. Use the virtual keyboard to enter the character(s) that the device uses to indicate the end of a line. Special characters can be created using ^ and a capital letter; e.g., ^J for NL (New Line), ^M for CR (Carriage Return). Refer to the device manufacturer's documentation for Line Delimiter character(s).

Highlight the box beside Ignore String, and press the  button. Use the virtual keyboard to enter any strings of text that you want the DVR to ignore. Refer to the device manufacturer's documentation for text strings that the device sends during transactions, so you will know which ones you do not want recorded.

Highlight the Case Sensitive box, and press the  button to toggle between On and Off. Refer to the device manufacturer's documentation to determine if the text strings are Case Sensitive. If the device distinguishes between upper and lower case letters, make certain the Case Sensitive box is turned On.

Highlight the box beside Time Out, and press the  button. Set the length of time to wait for the new text string. The DVR will consider a transaction complete if no new text strings are entered between the last text input and the dwell time out. You can adjust the Time Out dwell from 5 seconds to 15 minutes.

Highlighting the box under the Actions and pressing the  button. The DVR can be set to react to text input. Text input can be associated with cameras, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, move PTZ cameras to preset positions, and/or display a camera on a SPOT monitor.

Device Setup

Audio

Highlight Audio and press the  button, and the Audio setup screen appears.

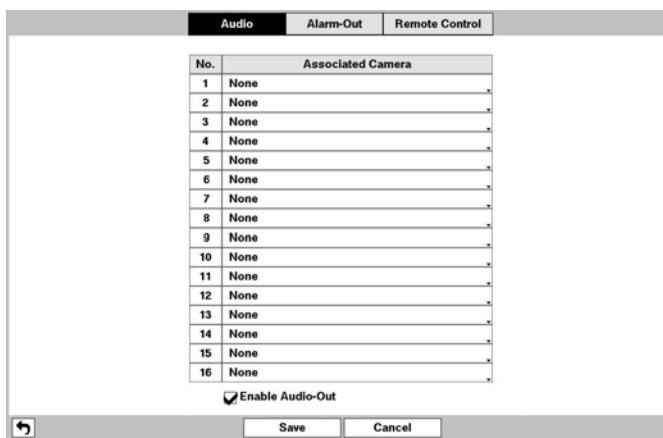


Figure 30 : Device – Audio setup screen.

The DVR can record up to 16 audio inputs. Highlight the box beside the input and press the button. A list of cameras appears, and you can select which camera you want associated with that audio input.

Highlight Enable Audio-Out and press the button. This toggles between enabling and disabling audio out.

Alarm-Out

Highlight Alarm-Out and press the button. The Alarm-Out screen allows you to change the settings and establish a schedule for each alarm output from the DVR.

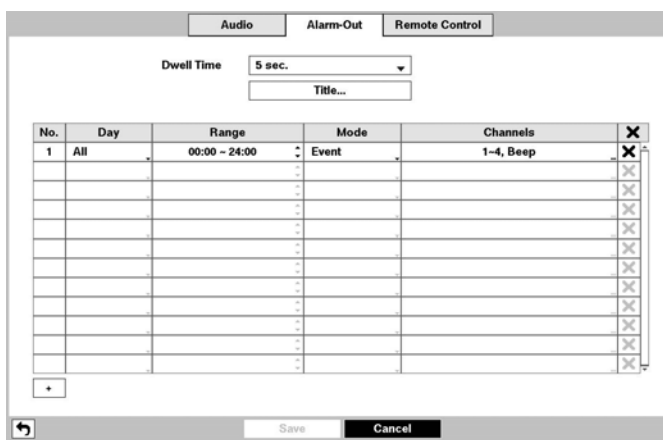



Figure 31 : Device – Alarm-Out setup screen.


Highlighting the box beside Dwell Time and pressing the button allows you to set the dwell time of the alarm output. Dwell times range from 5 seconds to 15 minutes.

 
Each alarm output can be given its own title by highlighting Title... and pressing the button. A virtual keyboard appears allowing you to enter the title.


You can add and edit alarm output schedules. Highlight the + and press the button to add a schedule. Highlighting the boxes under the Column heading and pressing the button allows you to edit the information in those boxes.

Highlighting the boxes under the Day box and pressing the button allows you to select the days that the alarm schedule will be active. The choices are: Sun, Mon, Tue, Wed, Thu, Fri, Sat, M~F, Hol and All.

Highlighting the boxes under the **Range** box and pressing the  button allows you to set the time that the alarm schedule will be active in 15-minute increments from 00:00 to 24:00.

Highlighting the boxes under the **Mode** box and pressing the  button allows you to set how the alarm reacts during the scheduled time. When set to **On**, the Alarm-Out is active during the scheduled time. When set to **Event**, the Alarm-Out is only active when there is an Event during the scheduled time.

Highlighting the boxes under the **Channels** box and pressing the  button allows you to set which alarm outputs will be active. You can also select the DVR's internal buzzer.

The  box allows you to delete an alarm output schedule. You will be asked to confirm whether or not you really wish to delete the schedule.

Remote Control

Highlight **Remote Control** and press the  button. The Remote Control setup screen allows you to select a port and make correct settings for a remote keyboard.



Figure 32 : Device – Remote Control setup screen.


Highlight the box beside **Port** and select from None, RS232 and RS485. If the RS232 port and RS485 port are in use for PTZ control, networking or text input, the remote keyboard cannot be configured.

Highlight **Setup...** and select the correct Baud Rate, Parity, Data Bits and Stop Bits for the device you are connecting to the DVR.

Highlight the box beside **Remote Control Product** and select the device from the list.

Display Setup

OSD

Highlight **OSD** and press the  button. The OSD screen allows you to select what information will be displayed on the monitor.

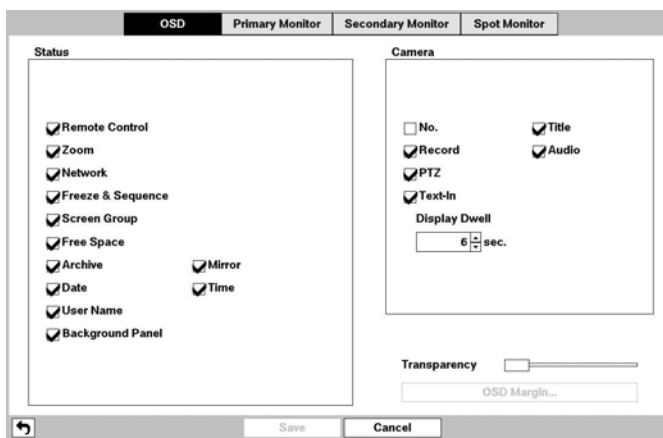

 
 
 
 

 
 

 
 

 



Figure 33 : Display – OSD setup screen.

Highlighting an item and pressing the  button toggles that item On and Off. When an item is On, there is a checkmark in the box beside it. The following items can be turned On or Off:

- Remote Control – The icon  displays when the DVR can be controlled by the infrared remote control.
- Zoom – The icon  displays on the enlarged video.
- Network – The icon  displays when the unit is connected to a network via Ethernet. The icon  displays on each camera when audio communication is available between the DVR and a PC running ATVision via Ethernet.
- Freeze & Sequence – The icon  displays while in the Freeze mode, and the icon  displays while in the Sequence mode.
- Screen Group – The number of screen group displays when the DVR is not in the 4x4 display mode.
- Free Space – The icon  displays when the DVR is in the Recycle mode, and the percentage of available storage space displays when the DVR is not in the Recycle mode.
- Archive – The icon  displays when the DVR is archiving recorded data.
- Mirror – The icon  displays when the DVR is disk mirroring.
- Date/Time – The current date and time information displays.
- User Name – The name of the current user logged in displays.
- Background Panel – The background panel at the bottom of the screen displays in black.
- Camera No. – The camera number displays at the top-left corner of each camera screen.
- Camera Title – The camera title displays at the top-left corner of each camera screen.
- Record – The record related icons display on each camera screen.
- Audio – The icon  displays on each camera screen for which the DVR can play live audio.
- PTZ – The icon  displays on each PTZ camera screen.
- Text-In – The text input strings display on the screen. You can adjust the Display Dwell time (sec.) for the text input strings displayed on the screen.

You can adjust the transparency of the setup screens by highlighting Transparency and using the Left and Right arrow buttons.



Highlighting OSD Margin... and pressing the  button displays how OSD text will be displayed on the monitor. You can adjust the horizontal and vertical margins so that text and icons will not be hidden beyond the edges of the monitor.

NOTE: Adjusting the OSD margin is supported only in the SD display mode.

Primary Monitor

Highlight Primary Monitor and press the  button, and the Primary Monitor setup screen appears.



Figure 34 : Display – Primary Monitor setup screen.

Highlight the box beside **Mode** and press the button. You can select between Full Sequence and Cameo Sequence.

Pressing the **SEQUENCE** button on the remote control or selecting (Sequence) in the Live Monitoring menu causes the DVR to sequence cameras, and the DVR can sequence cameras in two modes: “Full” and “Cameo”. In the Full mode, the DVR sequences through the cameras and displays them full screen. In the Cameo mode, the bottom right window in a multi-screen format sequences through the cameras.

NOTE: Any cameras that are Off, have lost video or are set to Covert (unless the user has authority to view covert cameras) will be excluded from the Cameo sequence.

You can define the screen layout in a variety of formats and set the DVR to sequence through the different screen layouts (pages) so that all the cameras will be displayed. You can also set up the DVR to display one camera or a group of cameras all the time while cycling through the remaining cameras in a “cameo” window. This can be done with one camera displayed full screen while displaying the cameras in a grid pattern with the bottom right window as the cameo.

NOTE: Sequence cannot be used in the 4x4 display mode.

You can adjust the display dwell time by highlighting the box beside **Interval** and pressing the button. You can select dwell intervals ranging from 1 second to 1 minute.

Highlight **Event Monitoring On** and press the button. Pressing the button toggles between On and Off. When it is On, the DVR will display the camera associated with the event when an event occurs.

Highlight the box beside **Resolution** and press the button. You can select from 1280x1024, 1440x900, 1600x900, 1680x1050 and 1920x1080 for NTSC video, and 1280x1024, 1440x900, 1600x900, 1680x1050 and 1920x1080 (@ 60Hz or 50Hz) for PAL video.

Highlight the box beside **Hide Unsupported Resolution** and press the button. Pressing the button toggles between On and Off. When it is On, the unsupported resolution on the connected monitor will not be shown.

NOTE: When selecting unsupported resolution, video might NOT be displayed on the monitor screen. In this case, pressing the **DISPLAY** button for more than five seconds will change to the different frequency (Hz) resolution or restart the system and display video with the maximum resolution supported on the monitor.

Highlight **Fit To Screen** and press the button. Pressing the button toggles between On and Off. When it is On, the DVR will resize video to fit the primary monitor screen.

Highlight the box beside **Apply Monitor Information** and press the button. Pressing the button toggles between On and Off. When it is On, the DVR will provide clearer display by applying the monitor information.

Highlight the box beside **HDMI Mode** and press the button. Pressing the button toggles between On and Off. When it is On, the DVR will optimize the HDMI video out.

NOTE: The system restarts automatically after changing the resolution settings. If the system restarts when the monitor is not connected, the resolution will be set to 1280x1024@60Hz as default without saving your changes.

When the individual primary monitors are connected to the HDMI and VGA connectors for simultaneous operation, it is recommended to use monitors supported with the same resolution. If monitors unsupported with the same resolution are connected, video might not be displayed on either of the two monitors.

Secondary Monitor

Highlight Secondary Monitor and press the  button, and the Secondary Monitor setup screen appears.

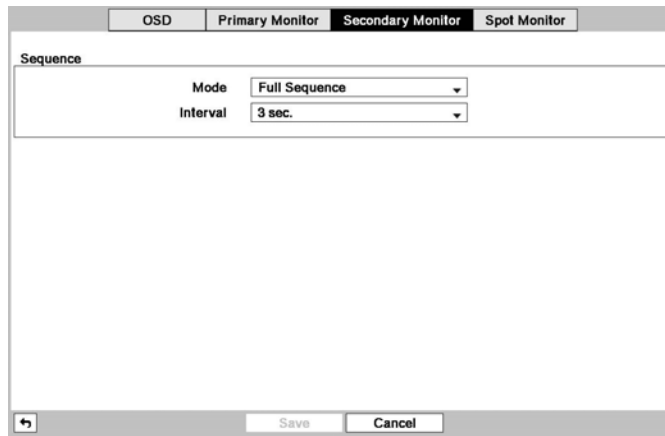




Figure 35 : Display – Secondary Monitor setup screen.


Highlight the box beside Mode and press the  button. You can select between Full Sequence and Cameo Sequence.

Pressing the **SEQUENCE** button on the remote control or selecting  (Sequence) in the Live Monitoring menu causes the DVR to sequence cameras, and the DVR can sequence cameras in two modes: “Full” and “Cameo”. In the Full mode, the DVR sequences through the cameras and displays them full screen. In the Cameo mode, the bottom right window in a multi-screen format sequences through the cameras.

NOTE: Any cameras that are Off, have lost video or are set to Covert (unless the user has authority to view covert cameras) will be excluded from the Cameo sequence.

You can define the screen layout in a variety of formats and set the DVR to sequence through the different screen layouts (pages) so that all the cameras will be displayed. You can also set up the DVR to display one camera or a group of cameras all the time while cycling through the remaining cameras in a “cameo” window. This can be done with one camera displayed full screen while displaying the cameras in a grid pattern with the bottom right window as the cameo.

NOTE: Sequence cannot be used in the 4x4 display mode.

You can adjust the display dwell time by highlighting the box beside Interval and pressing the  button. You can select dwell intervals ranging from 1 second to 1 minute.

Spot Monitor

Highlight Spot Monitor and press the  button, and the Spot Monitor setup screen appears.

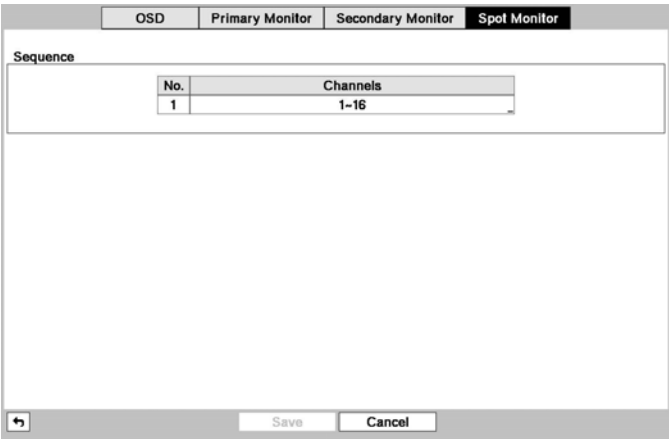
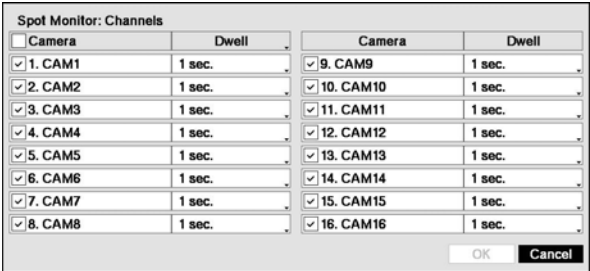


Figure 36 : Display – Spot Monitor setup screen.

Highlight the box in the Channels column and press the button.



You can define which cameras display sequentially on the Spot Monitor when in the single-screen display format. Highlighting the box under the **Camera** and pressing the button toggles between On and Off.

You can adjust the display dwell time by highlighting the box under the **Dwell** and pressing the button. You can select dwell intervals ranging from 1 to 20 seconds.

Pressing the **SEQUENCE** button on the remote control or selecting (Sequence) in the Live Monitoring menu causes the DVR to sequence cameras.

NOTE: Sequence cannot be used in the 4x4 display mode.

Status Setup

Event

Highlight Event and press the button, and the Event setup screen appears.

Figure 37 : Status – Event setup screen.

The Event Status screen displays the status of the DVR's systems and inputs. Events will be highlighted, and related channels or events will flicker for five seconds when detected.

Alarm-In, Motion, Video Loss, Video Blind and Text-In will be highlighted when each event is detected based on the settings you made in the Alarm-In, Motion, Video Loss, Video Blind and Text-In setup screen on the Event menu.

Check Alarm-In and Check Recording will be highlighted when each event is detected based on the settings you made in the Monitoring setup screen on the System menu.

Panic Record will be highlighted while the DVR is in the panic recording mode.

Disk Almost Full will be highlighted when the DVR is not in the Recycle mode and the level of disk usage reaches the Disk Almost Full percentage you made in the System Event setup screen on the Event menu. Disk Full will be highlighted when the DVR is not in the Recycle mode and all available storage space has been used.

Fan Error will be highlighted when the cooling fan to the left of the power cord on the rear panel is not working for more than four seconds.

Storage

Highlight Storage and press the  button, and the Storage setup screen appears.

Type	Disk Bad	Temperature	S.M.A.R.T.
Internal 1	Good (0%)	Good (0°C)	Good

Recorded Data

From: 01-06-2011 11:16:44

To: 01-06-2011 14:17:47

Figure 38 : Status – Storage setup screen.

The **Type** column displays the type of storage device.

The **Disk Bad** column displays the percentage of bad sectors. **Not formatted** indicates the device is not formatted.

The **Temperature** column displays the temperature of the storage device.

The **S.M.A.R.T.** column displays "Good", "Bad" or "N/A", depending on storage conditions.

- **Good** – The storage condition is normal.
- **Bad** – Data cannot be written on or read from the storage device.
- **N/A** – Storage conditions are normal, however, the S.M.A.R.T. monitoring is not working or supported.

NOTE: When the storage condition is "Bad", the **Event Status – Storage** screen displays and you can check the storage condition for details. Once the "Bad" message displays, replacing the hard disk drive is recommended, usually within 24 hours.

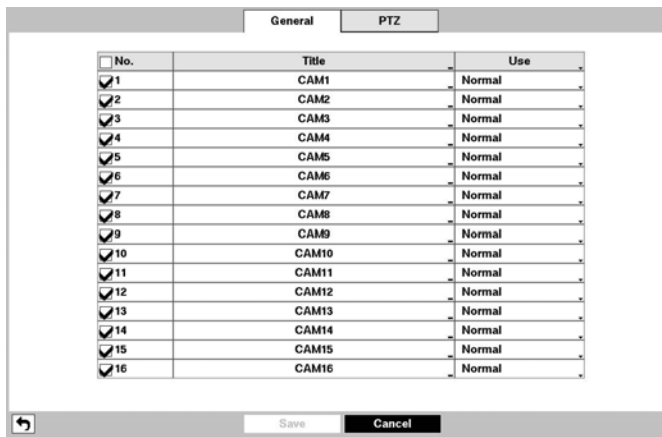
Temperature and S.M.A.R.T. information will be available only for internal hard disk drives supporting the SMART (Self-Monitoring Analysis and Reporting Technology) monitoring program.

The box beside **Recorded Data – From / To** displays the time information of recorded data.

Camera Setup

General

Highlight **General** and press the  button, and the General setup screen appears.



No.	Title	Use
<input checked="" type="checkbox"/> 1	CAM1	Normal
<input checked="" type="checkbox"/> 2	CAM2	Normal
<input checked="" type="checkbox"/> 3	CAM3	Normal
<input checked="" type="checkbox"/> 4	CAM4	Normal
<input checked="" type="checkbox"/> 5	CAM5	Normal
<input checked="" type="checkbox"/> 6	CAM6	Normal
<input checked="" type="checkbox"/> 7	CAM7	Normal
<input checked="" type="checkbox"/> 8	CAM8	Normal
<input checked="" type="checkbox"/> 9	CAM9	Normal
<input checked="" type="checkbox"/> 10	CAM10	Normal
<input checked="" type="checkbox"/> 11	CAM11	Normal
<input checked="" type="checkbox"/> 12	CAM12	Normal
<input checked="" type="checkbox"/> 13	CAM13	Normal
<input checked="" type="checkbox"/> 14	CAM14	Normal
<input checked="" type="checkbox"/> 15	CAM15	Normal
<input checked="" type="checkbox"/> 16	CAM16	Normal

Figure 39 : Camera – General setup screen.

You can turn the camera number On or Off, and you can change the Title of each camera using the virtual keyboard. You can also determine which cameras will display on the monitors by selecting **Normal**, **Covert 1** or **Covert 2** from a drop-down list in the **Use** column.

NOTE: When selecting the **Covert 1**, the DVR displays the camera title and status icons on the covert video. When selecting the **Covert 2**, the DVR displays only camera title on the covert video.

A user who does not have **Covert Camera View** authority cannot view video from cameras set to **Covert 1** or **Covert 2** in both the live monitoring and playback modes.

PTZ

Highlight **PTZ** and press the  button, and the PTZ setup screen appears.

No.	Product	ID
1	None	0
2	None	0
3	None	0
4	None	0
5	None	0
6	None	0
7	None	0
8	None	0
9	None	0
10	None	0
11	None	0
12	None	0
13	None	0
14	None	0
15	None	0
16	None	0

Port: None Setup...

Save Cancel

Figure 40 : Camera – PTZ setup screen.

NOTE: You will only be able to set up PTZ devices if the PTZ port is set to RS232 or RS485.

None

- AUTODOME (BOSCH)
- G-CC501 (TOA)
- CDC 2500 (Costar)
- CDC2400 (DynaColor)
- CRD-J6416 (Chilsung)
- CRR-1660s (Fine)

Highlight the box in the Product column for the PTZ camera you wish to configure and press the button. A list of PTZ devices appears. Select your camera from the list and press the button. You will need to connect the camera to the RS232 or RS485 connector on the back of the DVR following the camera manufacturer's instructions.

You can assign IDs to each camera by highlighting the box under the ID heading and pressing the button. Change the number by highlighting it and using the Up and Down arrow buttons to increase and decrease the number. The PTZ ID number can be set from 0 to 256.

Highlight the Setup... box and press the button. The Port Setup window appears.

Port Setup - RS232

Baud Rate: 9600

Data Bit: 8

Stop Bit: 1

Parity: None

OK Cancel

Configure the port's setting based on the PTZ camera manufacturer's instructions.

Chapter 4 — Operation

NOTE: This chapter assumes your DVR has been installed and configured. If it has not, please refer to Chapters 2 and 3.

The DVR's controls are similar to a VCR. As with a VCR, the main functions are recording and playing back video. However, you have much greater control over recording and playing back video. You can establish recording schedules based on time of day and day of the week. The DVR allows you to search through the recorded video using much more sophisticated tools than those available with VCRs. Additional DVR features that are not available with VCRs are remote control and viewing, and recording video at the same time you are watching previously recorded video.

The front panel controls are described in *Chapter 3 — Configuration*.

Turning on the Power

Once you have installed the DVR following the instructions in *Chapter 2 — Installation*, it is ready to record.

NOTE: Depending on the monitor display mode between HD mode and SD mode, the menu layout of monitor screen will be different. For simplicity, the menus and descriptions in this manual refer to the HD display mode.

Live Monitoring

As soon as the DVR completes its initialization process, it will begin showing live video on the attached monitor and playing live audio through the attached speaker. The default mode is to display all cameras at once. Pressing any camera button will cause that camera to display full screen. It displays live video and plays live audio until the user enters another mode.

While in the live monitoring mode, pressing the **MENU** button displays the following Live Monitoring menu at the top of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.





Figure 41 : Live Monitoring menu.

 



NOTE: The Live Monitoring menu also can be displayed by moving the mouse pointer to the right edge of the screen.

Live Monitoring Menu


 

 
 

Login/Logout

Selecting  (Login) in the Live Monitoring menu accesses the Login screen, and you will be asked to select a User and enter the password to log into the system. Selecting  (Logout) in the Live Monitoring menu displays the Logout screen asking you to confirm whether or not you want to log out the current user.




Monitor

Selecting  (Monitor) in the Live Monitoring menu will allow you to select the monitor from Primary, Secondary and Spot. It is the same as pressing the **MONITOR** button. Selecting Primary displays , Secondary displays  and Spot displays . You can select the screen format and sequence monitoring of the selected monitor.


Display

- **Camera:** Selecting  (Display) → **Camera** and choosing the camera number displays the selected camera full screen. It is the same as pressing the individual camera buttons on the front panel or clicking the left mouse button on a camera image when in one of the multiview formats (i.e., 2x2, 3x2, 3x3, 4x3 or 4x4). Clicking the left mouse button on the screen again returns to the previous display mode.
- **Screen Format:** Selecting  (Display) → **Screen Format** and choosing the screen mode displays the cameras in the selected multiview screen mode (2x2, 3x2, 3x3, 4x3 or 4x4). Selecting each display mode is the same as pressing the **DISPLAY** button or scrolling the mouse wheel up and down when in one of the multiview formats.
- **Previous Group, Next Group:** Selecting  (Display) → **Previous Group** or **Next Group** moves to the previous or next page.
- **Edit Group:** Selecting  (Display) → **Edit Group** enters to the Active Cameo mode. It is the same as pressing the  button in any multiview formats. Refer to the following *Active Cameo Mode* section for details.
- **Camera OSD, Status OSD:** Selecting  (Display) → **Camera OSD** or **Status OSD** toggles Camera OSD or Status OSD On and Off.



Freeze

Selecting  (Freeze) in the Live Monitoring menu will freeze the current image on the screen until you select  again. It is the same as pressing the **FREEZE** button. While in the Freeze mode, the icon  displays in bottom-left corner if Freeze is selected in the Display setup screen (OSD tab).




Alarm

 
Selecting  (Alarm) in the Live Monitoring menu resets the DVR's outputs including the internal buzzer during an alarm. It is the same as pressing the **ALARM** button.

Panic

 
Selecting  (Panic) in the Live Monitoring menu starts panic recording of all cameras, and selecting  again stops panic recording. It is the same as pressing the **PANIC** button.

Sequence



Selecting  (Sequence) in the Live Monitoring menu causes the cameras to display sequentially. It is the same as pressing the **SEQUENCE** button on the remote control. When in one of the multi-view formats, selecting  will cause the DVR to go through predefined screen layouts (Full Sequence). Or, the bottom, right screen will display live cameras sequentially (Cameo Sequence). For example, if you select  in the 2x2 format, the DVR changes pages as follows:



< Full Sequence >









< Cameo Sequence >

Selecting  again in the Live Monitoring menu exits the Sequence mode. While in the Sequence mode, the  icon displays in bottom-left corner if Sequence is selected in the Display setup screen (OSD tab). If all the cameras in a page are Off, or have lost video or are set to Covert (unless the user has authority to view covert cameras), that page will be excluded from the sequence.

NOTE: The *Full Sequence* for the full sequence monitoring and the *Cameo Sequence* for the cameo sequence monitoring should be selected in the Display setup screen (Primary Monitor tab).

Camera Menu

- **PTZ:** Selecting  (Camera Menu) → PTZ and choosing the camera number allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. It is the same as pressing the  button. Refer to the following *PTZ Mode* section for details.
- **Zoom:** Selecting  (Camera Menu) → Zoom and choosing the camera number zooms the current image of the selected camera on the screen. It is the same as pressing the  button. Selecting Zoom again in the Camera Menu again exits the Zoom mode. Refer to the following *Zoom Mode* section for details.
- **Audio:** Selecting  (Camera Menu) → Audio toggles audio output On and Off.
- **Color Control:** Selecting  (Camera Menu) → Color Control and choosing the camera number allows you to control brightness, contrast, hue and saturation for each camera for the selected camera if a user who has Color Control authority logs into the system. It is the same as pressing and holding a camera button for a few seconds.



NOTE: It is important that cameras and monitors are correctly installed and adjusted prior to making any image adjustments using the DVR's controls.

Any image adjustments you make will be applied to both the live video on the monitors and the recorded video.


The *Camera Menu* also can be displayed by clicking the right mouse button on the screen while in the live monitoring mode.

- **Spot Monitor:** Selecting Spot Monitor allows you to select the camera you want to display on a Spot monitor. Refer to the following *Spot Monitoring* section for details.

 

 
Search

Selecting  (Search) in the Live Monitoring menu exits the live monitoring mode and enters the search mode. It is the same as pressing the  (Search/Stop) button.

Setup



Selecting  (Setup) in the Live Monitoring menu enters the Main Setup screen. Refer to *Chapter 3 — Configuration* for detailed descriptions of system setup.

Active Cameo Mode

You can enter the Active Cameo mode by selecting Edit Group from the Live Monitoring – Display menu or pressing the  button on the front panel in any multi-view format. The yellow outline surrounding the video indicates the active cameo, and pressing the arrow buttons moves the active cameo. Pressing the  button exits the Active Cameo mode. Selecting Exit Group Edit in the cameo menu displayed when pressing the  button also exits the Active Cameo mode. The active cameo mode will remain in effect for 15 seconds if there is no further operation.

In active cameo mode, press the button for the camera you want to display in the active cameo. After setting the camera number to active cameo, the DVR moves the active cameo to the next cameo. When the camera number exists on the current screen, the active cameo is changed with the existing camera number. When the camera number does not exist on the current screen, the active cameo is replaced by the camera number. You can change the screen layout in this way.

Zoom Mode

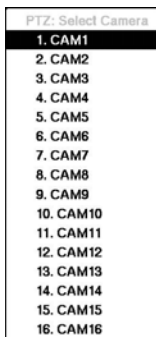
You can enlarge an area of the video by pressing the **ZOOM** button. For a few seconds after pressing the **ZOOM** button, a rectangle displays on the screen. A rectangle shows the area that will be enlarged. You can move the rectangle around using the arrow buttons. Pressing the  button or turning the Jog Dial counterclockwise in the Zoom mode toggles the zoom size between 2x, 3x and 4x. Exit the Zoom mode by pressing the **ZOOM** button. While in the Zoom mode, the icon  displays if Zoom is selected in the Display setup screen (OSD tab).



 
 
NOTE: Entering the zoom mode is NOT supported while in the SD display mode.


PTZ Mode

If a user who has PTZ Control authority logs into the system, the user can control PTZ cameras. The DVR will control cameras with Pan, Tilt and Zoom capabilities. Press and hold the **PTZ** button to display the PTZ camera menu and enter the PTZ mode, and press the button again to exit the PTZ mode.

Select the PTZ camera you wish to control by selecting it from the menu. The icon  displays on the PTZ camera screen.



To use the front panel buttons, press the Left and Right arrow buttons to pan left and right. Press the Up and Down arrow buttons to tilt the camera up and down. Press the  button to zoom in, and press the  button to zoom out. You can use the  and  buttons to focus the image.

You can establish preset positions for PTZ cameras. Press the  to establish Presets.


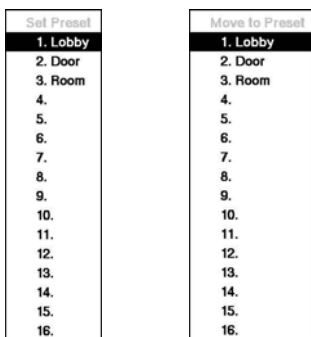
You can quickly move PTZ cameras to Preset positions. Press the  to view an established camera Preset position.


 
Figure 42 : PTZ Select Camera menu.





< Set Preset > < Move to Preset >


Figure 43 : PTZ Preset menu.

You can save camera position settings as “presets” so that you can go directly to desired views.

Once you have the camera at the desired settings, press the  button, and the Set Preset dialog box will appear. Select the number you want to assign to the preset and press the  button. Use the virtual keyboard to enter the preset name.

 
Press the  button to load the PTZ preset and the Move to Preset dialog box will appear. Select the desired preset and press the  button to load the preset.

 


While in the PTZ mode, pressing the **MENU** button and selecting  (Advanced PTZ) in the menu displaying at the top of the screen displays the Advanced PTZ menu.

Set the feature you wish to control by selecting it from the menu. Refer to the camera manufacturer's instructions for the proper settings. Depending on the camera specifications, some features may not be supported.


You can use a mouse for convenient PTZ control. Click the left mouse button on the image and move that image in the direction you want to by dragging the mouse. Use the mouse wheel to zoom in and out. Position the mouse pointer at the bottom of the screen, and the following PTZ toolbar will display.



Clicking  on the left side exits the toolbar. If you want to display the toolbar again, position the mouse pointer at the bottom of the screen. Change the toolbar location by clicking the empty space on the left side of the toolbar and drag it to where you want it located on the screen. Use the arrow buttons on the toolbar to pan or tilt the camera in the direction you want. The other controls on the toolbar perform as described below:



Event Monitoring

When an event occurs, the DVR will display the camera associated with the event and the icon  displays on screen if Event Monitoring On is selected in the Display setup screen (Primary Monitor tab).

How the cameras are displayed depends on the number of cameras associated with the event. If one camera is associated with the event, the DVR will display the camera full screen. If two to four cameras are associated with the event, the DVR will display the cameras on a 2x2 screen. If five to nine cameras are associated with the event, the DVR will display the cameras on a 3x2 or 3x3 screen. If 10 or more cameras are associated with the event, the DVR will display the cameras on a 4x3 or 4x4 screen.

Event monitoring lasts for the dwell time set for event recording. After the dwell time has elapsed, the monitor returns to the previous screen unless another event has occurred. If you want to return to the live monitoring mode before the dwell time has elapsed, press the **DISPLAY** button or one of the camera buttons.

Covert Camera


If a camera is set up as Covert 1 in the Camera setup screen (General tab), that camera will not be displayed unless a user with Covert Camera View authority logs into the system. However the camera title and status icons will be displayed on the monitor.

If a camera is set up as Covert 2 in the Camera setup screen (General tab), that camera appears to be Off unless a user with Covert Camera View authority logs into the system. The camera title will be grayed out and status icons will not be displayed on the monitor.



NOTE: When a camera is set up as Covert 1, the DVR displays the camera title and status icons on the covert video. When set up as Covert 2, the DVR displays only the camera title on the covert video.

If a user who has Covert Camera View authority logs into the system, the user can view video from cameras set to Covert 1 or Covert 2 including the camera titles and status icons.

Spot Monitoring

The multiview screen display (2x2 or 4x4) and sequence monitoring is supported on a Spot Monitor. Selecting Spot after pressing the **MONITOR** button or selecting  (Monitor) in the Live Monitoring menu allows you to control a Spot Monitor.

Select  (Display) → Screen Format in the Live Monitoring menu and then select the screen mode between 2x2 and 4x4 you want to display on a Spot Monitor.

Selecting  (Sequence) in the Live Monitoring menu causes the cameras to display sequentially, and selecting  again stops sequencing on a Spot Monitor. Any cameras that are Off, have lost video or are set to **Covert** (unless the user has authority to view covert cameras) will be excluded from the sequence. When the Spot Monitor is in the sequence mode, you can set the camera's display dwell time. Refer to *Chapter 3 – Configuration – Display Setup* section for details.

NOTE: Sequence cannot be used in the 4x4 display mode.




Recording Video

Once you have installed the DVR following the instructions in *Chapter 2 — Installation*, it is ready to record. The DVR will start recording based on the settings you made in the Record setup screen. See *Chapter 3 — Configuration*.

Recycle On or Recycle Off. The factory default is **Recycle On**. It does this by recording over the oldest video once the hard disk is full. Setting the DVR to **Recycle Off** causes it to stop recording once the hard disk is full.

Although you will be able to record without changing the unit from its original factory settings, you will want to take advantages of the DVR's many tools. See *Chapter 3 — Configuration* for detailed descriptions of the recording mode options.

Panic Recording

Selecting  (Panic) in the Live Monitoring menu or Search menu, or pressing the **PANIC** button starts panic recording of all cameras. Selecting  or pressing the button again stops panic recording. If you set the Panic Recording Duration in the Panic Record setup screen, panic recording will stop automatically according to the preset duration as long as  is not selected or the **PANIC** button is not pressed.


NOTE: When the DVR is not in the Recycle mode and all available storage space has been used, panic recording will not operate.


Recording Audio

 
If the DVR was set up to record audio, it will record audio from up to 16 inputs when video is recording.

NOTE: Make certain you comply with all local and federal laws and regulations when recording audio.

Playing Recorded Video

If a user who has **Search** authority logs into the system, the user can view recorded image. Once video has been recorded, you can view it by pressing the  (Play/Pause) button.

The DVR supports the Triplex function: monitoring, recording and playing back at the same time. Pressing the  (Search/Stop) button when in one of the multi-view formats enters the Triplex mode and displays the Select Playback Camera menu.



Selecting All Channels plays back video of all cameras. The DVR maintains the same display format as it does in the live mode. You can also change the screen layout in the same way as you do in the live mode.

Selecting the camera number under Triplex enters the Triplex mode and plays back video of the selected camera. When in the single-screen display format, the camera currently displayed on the screen will be selected for the search channel. During the Triplex mode, the DVR maintains the same display format as it does in the live mode. A red outline surrounding the video and the camera title indicates the search channel. While in the Triplex Mode, the DVR continues recording cameras as they were set up in the recording schedule. Also, live monitoring will continue except for the camera that has been selected for playback.


 
 


 
 
 
 
 


 
 

Figure 44 : Select Playback Camera menu.

When playing video for the first time, the DVR will display the most recent image. When playing video subsequent times, the DVR will start playing video from the last recalled image. Recorded audio will be played when the DVR displays a camera with recorded audio in full screen mode.

 
 

 

 
NOTE: Only the administrator and users with **Covert Camera View** authority can view video from covert cameras. The covert cameras in the playback mode are determined by the current camera settings.

Camera Buttons (1 to 16): Pressing the individual camera buttons will cause the selected camera to display full screen.


Playback Buttons

- **Backward:** When in the pause mode, pressing the  button moves to the previous image.
- **Forward:** When in the pause mode, pressing the  button moves to the next image.
- **Rewind:** Pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and .
- **Play/Pause:** Pressing the  button plays back video at regular speed. The screen displays  when the DVR is in the Pause mode and the screen displays  when the DVR is playing back video.
- **Fast Forward:** Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and .
- **Search/Stop:** Pressing the  button while in the Live Monitoring mode enters the Search mode. Pressing the  button while in the Search mode returns the DVR to the Live Monitoring mode.

Jog Dial, Shuttle Ring

- **Jog Dial:** The Jog Dial only functions when playback video has been paused. By turning the jog dial clockwise, you can play video forward image-by-image. By turning the jog dial counterclockwise, you play video backward image-by-image.
- **Shuttle Ring:** The Shuttle Ring only functions in the Playback mode. The Shuttle Ring is spring loaded and returns to the center position when released. Turning the ring clockwise plays video forward. Turning the ring counterclockwise plays video backward. Playback speed varies with the amount the ring is turned. The playback speeds are , , , ,  and . When you release the ring, it snaps back to the center position and the video pauses.

ZOOM Button: Pressing the  button zooms in the current image on the screen.

DISPLAY Button: Pressing the  button toggles different display formats. The available formats are: 2x2, 3x2, 3x3, 4x3 and 4x4.

You can use a mouse for convenient playback control. Position the mouse pointer on the playback screen, and the following Record Table Search (Compact View Mode) screen will display. The individual controls on the toolbar perform the following functions as described below:



- ◀ Go to the previous image
⏮ Fast backward play

- ▶ Play/Pause
⏭ Fast forward play

- ▶ Go to the next image

Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu at the top of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.



Figure 45 : Search menu.

NOTE: The Search menu also can be displayed by moving the mouse pointer to the right edge of the screen.

Search Menu

Search


- **Event Log Search:** Selecting (Search) → Event Log Search selects video from the event log. See the following *Event Log Search* section for details.
- **Record Table Search:** Selecting (Search) → Record Table Search selects using a recording table. See the following *Record Table Search* section for details.
- **Motion Search:** Selecting (Search) → Motion Search selects motion events. See the following *Motion Search* section for details.
- **Text-In Search:** Selecting (Search) → Text-In Search selects text input strings. See the following *Text-In Search* section for details.

Go To


 

 


- **Go to the First:** Selecting (Go To) → Go to the First displays the first recorded image.
- **Go to the Last:** Selecting (Go To) → Go to the Last displays the last recorded image.
- **Go to the Date/Time:** Selecting (Go To) → Go to the Date/Time displays the Go to the Date/Time screen.

Move the cursor over the date and time and press the button. You can use the Left and Right arrow buttons to highlight the year, month, day, hours, minutes and seconds. Use the Up and Down arrow buttons to change to the date and time you want to search for video.


Once you have set the date and time you want, press the button. Then highlight **Go** and press the button. The selected date and time will display. (If no video was recorded during the selected time, a message appears alerting you that no image was recorded at that time.) The playback buttons, Jog and Shuttle can now be used to review the surrounding video.

- **Bookmark:** Selecting  (Go To) → **Bookmark** adds the current playback point to the bookmark list. See the following *Bookmarks* section for details.



Display

- **Camera:** Selecting  (Display) → **Camera** and choosing the camera number displays the selected camera full screen. It is the same as pressing the individual camera buttons on the front panel or clicking the left mouse button on a camera image when in one of the multiview formats (i.e., 2x2, 3x2, 3x3, 4x3 or 4x4). Clicking the left mouse button on the screen again returns to the previous display mode.
- **Screen Format:** Selecting  (Display) → **Screen Format** and choosing the screen mode displays the cameras in the selected multiview screen mode (2x2, 3x2, 3x3, 4x3 or 4x4). Selecting each display mode is the same as pressing the **DISPLAY** button or scrolling the mouse wheel up and down when in one of the multiview formats.
- **Previous Group, Next Group:** Selecting  (Display) → **Previous Group** or **Next Group** moves to the previous or next page.
- **Edit Group:** Selecting  (Display) → **Edit Group** enters to the Active Cameo mode. It is the same as pressing the  button in any multiview formats. Refer to the previous *Live Monitoring – Active Cameo Mode* section for details.
- **Camera OSD, Status OSD:** Selecting  (Display) → **Camera OSD** or **Status OSD** toggles Camera OSD or Status OSD On and Off.


Alarm

Selecting  (Alarm) in the Search menu resets the DVR's outputs including the internal buzzer during an alarm. It is the same as pressing the **ALARM** button.


 
Panic

Selecting  (Panic) in the Search menu starts panic recording of all cameras, and selecting  again stops panic recording. It is the same as pressing the **PANIC** button.

Camera Menu

- **Zoom:** Selecting  (Camera Menu) → **Zoom** and choosing the camera number zooms the current playback image of the selected camera on the screen. It is the same as pressing the **ZOOM** button. Selecting **Zoom** again exits the Zoom mode.



 
 
NOTE: Entering the zoom mode is NOT supported while in the SD display mode.

- **Audio:** Selecting  (Camera Menu) → **Audio** toggles audio playback On and Off. Recorded audio will be played when the DVR displays a camera with recorded audio in full screen mode.
- **Show/Hide Text-In:** Selecting  (Camera Menu) → **Show Text-In** or **Hide Text-In** shows or hides the text-in data on the screen if the video was recorded with text-in data.


NOTE: The *Camera Menu* also can be displayed by clicking the right mouse button on the screen while in the search mode.

- **Spot Monitor:** Selecting **Spot Monitor** allows you to select the camera you want to display on a Spot monitor. Refer to the previous *Live Monitoring – Spot Monitoring* section for details.


Export

- **A-B Clip-Copy:** Selecting  (Export) → **A-B Clip-Copy** will set the starting point of the video to be clip copied, and the  icon displays at the bottom-left corner of the screen. Selecting **A-B Clip-Copy** again will set the ending point of the video to be clip copied and displays the **Clip-Copy** screen. See the following *Clip Copy* section for details.
- **Clip-Copy:** Select  (Export) → **Clip-Copy**, and the **Clip-Copy** screen appears to allow clip copy setup. See the following *Clip Copy* section for details.
- **Print:** Selecting  (Export) → **Print** allows you to print a selected image. See the following *Print* section for details.

Data Source

Selecting  (Data Source) in the Search menu allows you to select the data source to be searched. Selecting **Record** searches recorded data on primary storage installed in the DVR, and selecting **Archive** searches archived data on secondary storage installed in the DVR.

Exit

Selecting  (Exit) in the Search menu exits the search mode and enters the live monitoring mode.

Event Log Search



 


Time	Type
01-06-2011 14:22:53	Panic Off
01-06-2011 14:22:52	Panic On
01-06-2011 14:22:50	Alarm-In 15:
01-06-2011 14:22:50	Alarm-In 11:
01-06-2011 14:22:48	Panic Off
01-06-2011 14:22:48	Panic On
01-06-2011 14:22:46	Alarm-In 3:
01-06-2011 14:22:46	Alarm-In 5:
01-06-2011 14:22:46	Alarm-In 7:
01-06-2011 14:22:33	Alarm-In 16:
01-06-2011 14:22:33	Alarm-In 15:
01-06-2011 14:22:33	Alarm-In 14:
01-06-2011 14:22:33	Alarm-In 13:
01-06-2011 14:22:33	Alarm-In 12:
01-06-2011 14:22:33	Alarm-In 11:
01-06-2011 14:22:33	Alarm-In 10:

Figure 46 : Event Log Search screen.

The DVR maintains a log of each time the Alarm Input port is activated. The Event Log Search screen displays this list. Use the arrow buttons to highlight the event for which you would like to see video.

The Event Log Search screen can also be accessed by pressing the **ALARM** button unless there is an alarm. There is no determined user authority to display the Event Log Search screen, however, the event video will not be played unless a user with **Search** authority logs into the system.

Pressing the  button will extract the event video and display the first image of the event. Pressing the  (Play/Pause) button will start playing the “event” video segment. Pressing  (Search/Stop) returns to live monitoring.

NOTE: It is possible that no recorded image displays on the current screen. Press the **DISPLAY** button and change the screen mode to 4x4. You will be able to easily see the camera have recorded video during target time.

You can also narrow your event search by selecting the Option... button and setting up the new search condition.



Event Log Search Option

From ☒ First 01-06-2011 14:23:44

To ☒ Last 01-06-2011 14:23:44

☒ Check Time Overlap

Alarm-In 1-16

Motion 1-16

Video Loss 1-16

Video Blind 1-16

Text-In 1-14

Record Channels 1-16

☒ Panic Record

☒ Check Recording

☒ Check Alarm-In

☒ Disk Almost Full

☒ Disk Bad


☒ Disk Temperature


☒ Disk S.M.A.R.T.


☒ Fan Error


Search Cancel


You can search video from the first to last recorded images, or you can set the start and stop times and dates.

Highlight the box beside **From** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the first recorded image.

Highlight the box beside **To** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the last recorded image.


Highlight the box beside **Check Time Overlap** and press the  button. It toggles between On and Off. You will only be able to turn the Check Time Overlap on or off if a user-defined date and time is set to From and To. If the DVR's date and time have been reset, it is possible for the DVR to have more than one overlapping start and stop time. When set to On, you will be asked to select one of the overlapping start and stop time. When set to Off, the DVR will display search results from all start times to all stop times.


Highlight the box beside **Alarm-In** and press the  button. You can select the alarm inputs that you want to include in your search.

Highlight the box beside **Motion** and press the  button. You can select the cameras for which you want any reports of motion detection.

Highlight the box beside **Video Loss** and press the  button. You can select the cameras for which you want any reports of lost video.


Highlight the box beside **Video Blind** and press the  button. You can select the cameras for which you want any reports of blind video.

Highlight the box beside **Text-In** and press the  button. You can select the text-in devices which you want any reports of text input.

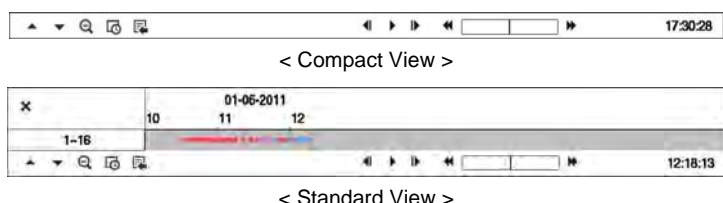
Highlight the box beside **Record Channels** and press the  button. You can select the cameras that you want to search for any reports of event recorded data. The DVR will display the events (not the camera channels) that occurred and that also are recorded on the camera channel that you selected. If you do not select a camera channel in this field, the DVR will search events that are not associated with cameras.

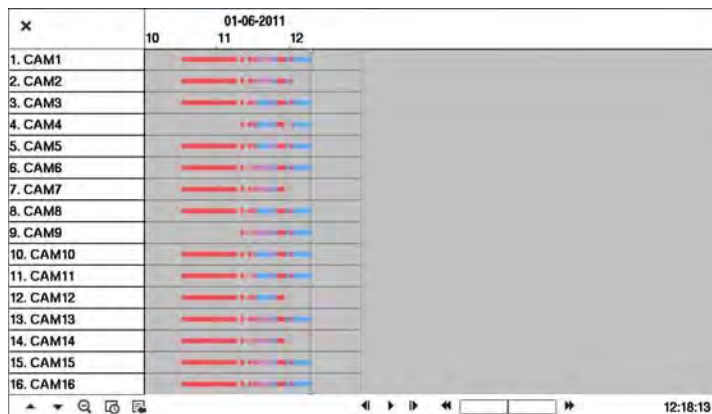
You can also toggle On and Off self-diagnostic System Events as part of your search. The choices are:

- Panic Record
- Check Recording
- Check Alarm-In
- Disk Almost Full
- Disk Bad
- Disk Temperature
- Disk S.M.A.R.T.
- Fan Error

Once you set your desired search conditions, highlight **Search** and press the  button to display the search results in the **Event Log Search** screen. Selecting **Cancel** exits the screen without saving the changes.

Record Table Search





< Expanded View >

Figure 47 : Record Table Search screen.

Recording information about video images currently displayed on the screen displays on the recording status bar. A grey vertical line indicates the current search position. To search specific video, move the vertical line by using the Left or Right arrow buttons on the front panel or by clicking the mouse on the desired segment.

If the DVR's time and date have been reset to a time that is earlier than some recorded video, it is possible for the DVR to have more than one video stream in the same time range. In this case, the overlapping time range in the record table will be separated by a yellow vertical line.

NOTE: The recorded data in the time range located after the white vertical line is the latest.

There are three view modes. Standard view, Expanded view and Compact view. Standard view (default) displays combined recording information of all camera channels currently displayed on the screen. In the Standard view mode, selecting the ▲ icon located at the bottom switches to the Expanded view mode. The Expanded view displays the recording information of each camera channel currently displayed on the screen. Selecting the ▼ icon in the Standard view mode switches to the Compact view mode which displays only the toolbar. Selecting the ▲ icon in the Compact view mode switches to the Standard view mode, and selecting the ▼ icon in the Expanded view mode switches to the Standard view mode.

Selecting ⌕ or 🔍 located at the bottom zooms the record table. Selecting ⌕ displays eight hours (1-minute based), and selecting 🔍 displays 24 hours (3-minute based) at once. To move to earlier or later times that are not shown in the current record table screen, select the arrows located at the end of the times by using the arrow buttons on the front panel.

 
NOTE: If the DVR has images recorded in more than one recording mode in the same time range, the recording status bar displays recording information in the following priority order: Panic → Pre-Event → Event → Time. The color of the bar indicates different recording modes: Red for Panic, Yellow for Pre-Event, Purple for Event, and Blue for Time.

Selecting 📅 located at the bottom displays the Calendar Search screen.








Days with recorded video display on the calendar with white numbers. You can highlight the days with recorded video by using the arrow buttons. Once you have highlighted a day, press the ⏪ button to select it. The first recorded image of the selected date will pause on the screen. Once you have selected the date you want to search, review the surrounding video by using the playback controls located at the bottom of the Record Table Search screen.


Selecting  located at the bottom displays the Search menu.



- **Go To:** Displays the first or last recorded image, searches by date and time, or adds the current playback point to the bookmark list (see the previous *Searching Video – Go To* and *Bookmarks* sections of this chapter for more details).
- **Clip-Copy:** Clips a video segment and saves it (see the following *Clip Copy* section for more details).
- **Print:** Prints the current playback image.
- **Zoom:** Zooms the current playback image.
- **Slow Play:** Plays video at low speed (x1/2, x1/3, x1/4, x1/6 and x1/8).

The individual playback controls at the bottom perform the following functions as described below:

- | | | |
|--|---|--|
|  Go to the previous image |  Play/Pause |  Go to the next image |
|  Fast backward play |  Fast forward play | |

Selecting  in the top-left corner exits the Record Table Search screen.

Motion Search

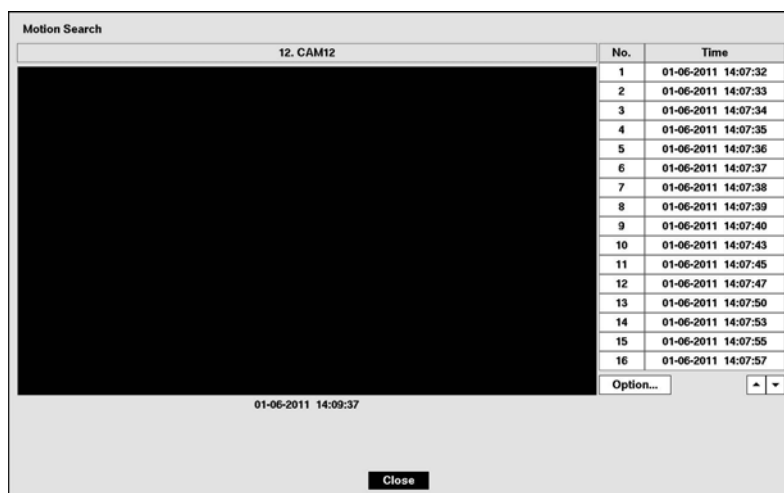


 
 


Figure 48 : Motion Search screen.

The Motion Search... can be selected from the Search menu while the DVR displays the camera full screen. The Motion Search screen displays a list of motion events. Use the arrow buttons to highlight the event for which you would like to see video and press the  button to display the video associated with the selected event on the small search screen.

Highlighting Close and pressing the  button will extract the video associated with the Motion event and display the first image of the event. Pressing the  (Play/Pause) button will start playing the “event” video segment. Pressing  (Search/Stop) returns to live monitoring.

You can also narrow your event search by selecting the Option... button and setting up the new search condition.

Motion Search Option

From: ☒ First

To: ☒ Last


Type:


Zone:

Sensitivity:


Min. Blocks:

You can search video from the first to last recorded images, or you can set the start and stop times and dates.

Highlight the box beside **From** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the first recorded image.

Highlight the box beside **To** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the last recorded image.

Highlight the box beside **Type** and press the button. You can select between **Motion Search** and **Museum Search**. **Motion Search** detects motion in the defined area. **Museum Search** detects if a defined object has moved.


Highlight the box beside **Zone** and press the  button. An image from the video appears with a grid overlaid. You can turn sensor blocks On and Off to define the area of the picture in which you want to search for motion.


NOTE: Defining the area of the image in which you want to search for motion is nearly identical to setting up the DVR for Motion Detection. Please refer to *Motion Setup Screen* in *Chapter 3 — Configuration* for more detailed instructions on setting up the detection blocks.

When setting the Museum Search Zone, the zone should be placed inside of the border line of the target object. If the selected block is placed on the border line, the sensitivity of the Museum Search may decrease.

The zone should be placed or focused on the centre or, at least, within the outline of targeted object.

Highlight the box beside **Sensitivity** and press the  button. You will be able to select from 1 (low sensitivity) to 5 (high sensitivity).

Highlight the box beside **Min. Blocks** and press the  button. You will be able to set the number of sensor blocks that must be activated. Setting the Min Blocks will only be available if Motion Search is selected.

Once you set your desired search conditions, highlight **Search** and press the  button to display the search results in the **Motion Search** screen. Selecting **Cancel** exits the screen without saving the changes.




When you search for motion events of another camera, you will be asked whether or not you want to delete the previous search results from the list.

Text-In Search

[illegible]

Figure 49 : Text-In Search screen.

The DVR maintains a log of each time there is Text Input. The **Text-In Search** screen displays this list. Use the arrow buttons to highlight the event for which you would like to see video.

Pressing the  button will extract the video associated with the Text Input and display the first image of the event. Pressing the  (Play/Pause) button will start playing the “event” video segment. Pressing  (Search/Stop) returns to live monitoring.

NOTE: It is possible that no recorded image displays on the current screen. Press the **DISPLAY** button and change the screen mode to 4x4. You will be able to easily see the camera have recorded video during target time. Text Input information will be overlaid on the image while the recorded video is played at regular speed.

You can also narrow your event search by selecting the Option... button and setting up the new search condition.

Text-In Search Option

From ☒ First 01-06-2011 14:26:30

To ☒ Last 01-06-2011 14:26:30

Channels 1-14

Generic Text

No.	-	Name	Comp.	Value	Column	Line	X

☐ Case Sensitive

Load Save Search Cancel

You can search video from the first to last recorded images, or you can set the start and stop times and dates.

Highlight the box beside **From** and press the button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the first recorded image.

Highlight the box beside **To** and press the button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the last recorded image.

Highlight the **Channel** and press the button. Select the text-in devices that you want to search for text input.

Highlight the **Text Input Device** box and press the button. Select your Text Input Device from the list.

Highlighting the **+** and pressing the button allows you to add a new set of search parameter. Set up the desired search parameter. Refer to the *Appendix – Text-In Search Examples* for further information on setting up search parameters. The **X** column can be used to delete a set of search parameter or entire sets of search parameters.

Highlight **Case Sensitive** and press the button. This will toggle between On and Off. When this feature is On, the search will find only those text strings in which the case matches.

Highlight **Load** and press the button to load saved search option settings. Select the desired search option settings.

Highlight **Save** and press the button to save the current search option settings. A virtual keyboard appears that you can use to enter the search option name.

Once you set your desired search conditions, highlight **Search** and press the button to display the search results in the **Text-In Search** screen. Selecting **Cancel** exits the screen without saving the changes.

Bookmarks

The **Bookmarks** screen can also be accessed by pressing the **BOOKMARK** button when in playback mode.

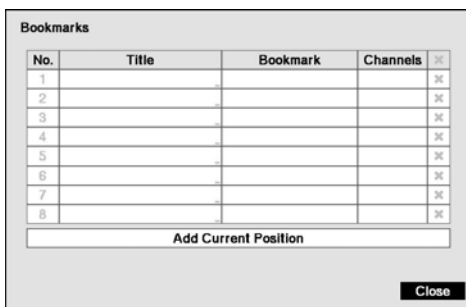


Figure 50 : Bookmarks screen.

Highlight the Add Current Position box and press the button to add the current playback point to the bookmark list. Highlight the Title box and enter the name of the registered bookmark. Use the virtual keyboard to enter the bookmark name.

NOTE: Up to eight bookmarks can be registered.

Use the arrow buttons to highlight the bookmark point for which you would like to see video. The selected bookmark will display on the screen. The playback buttons, Jog and Shuttle can now be used to review the surrounding video.

Clip-Copy

Video clips can be copied on an internal DVD RW drive, or external USB hard disk or flash drive. The copied video clips can be viewed on computers running Microsoft Windows 98, ME, 2000, XP, Vista or 7. Refer to the *Appendix – USB Hard Disk Drive Preparation* for information on preparing the external drive for clip copy.

Selecting A-B Clip-Copy in the Search – Export menu or pressing the **CLIP COPY** button on the remote control during playback will set the starting point of the video to be clip copied, and the icon displays at the bottom-left corner of the screen. Selecting A-B Clip-Copy in the Search – Export menu or pressing the **CLIP COPY** button on the remote control again will set the ending point of the video to be clip copied by displaying the Clip-Copy screen.

Pressing and holding the **MENU** button on the front panel or the **CLIP COPY** button on the remote control for more than three seconds while in the Search mode or Live Monitoring mode initiates the One-Touch Clip Copy function. The last recorded image will be the ending point of video to be clip copied, and the system will automatically begin to calculate the possible video data size that the selected storage media can handle.

Select Clip-Copy in the Search – Export menu or press the **CLIP COPY** button on the remote control while in the Search mode or Live Monitoring mode, and the Clip-Copy screen appears to allow clip copy setup.

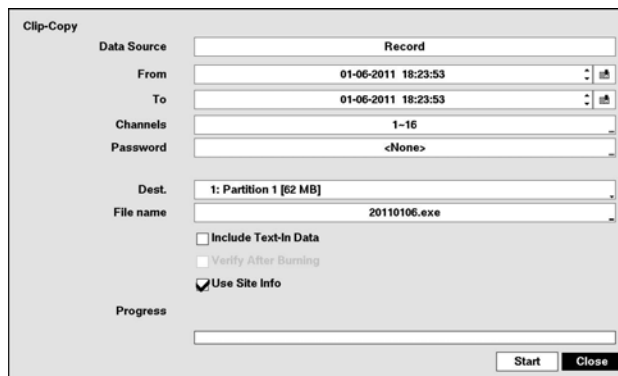




Figure 51 : Clip-Copy screen.

 
The Data Source box displays the source from which you make a video clip copy. The data source can be selected from Record or Archive in the Search menu.

 
Highlight the box beside From and press the button to set a starting Date and Time. When highlighting and pressing the button the bookmark list displays and the bookmark point you selected will be the starting date and time.

Highlight the box beside To and press the button to set an ending Date and Time. When highlighting and pressing the button the bookmark list displays and the bookmark point you selected will be the ending date and time.

Highlight the box beside **Channels** and press the  button. You can select the cameras that you would like to include in your video clip.

Highlight the box beside **Channels** and press the  button. You can select the cameras that you would like to include in your video clip.


Highlight the box beside **Password** and press the  button. A virtual keyboard appears allowing you to enter the password for reviewing the video clips.

Highlight the box beside **Dest.** and press the  button. You can select the storage device on which you would like to record the video clip. You can choose from Internal DVD RW and USB Storage.


CAUTION: The USB device for clip copy must be FAT 16 or FAT32 format.


NOTE: While copying video clips on the DVD RW, the recording speed might decrease.


When the error message “Firmware update of the optical drive is required” displays, update the firmware of the installed DVD RW drive. Please follow the instructions described in *Chapter 3 – Configuration – System Setup* section.

The DVR automatically assigns a file name to the video clip. However, you can give the video clip file a different name. Highlight the box beside **File Name** and press the  button. A virtual keyboard appears. Enter a file name for the video you are backing up and select **Close**. The DVR will automatically add the camera number (for example “01”) and “.exe” to the file name.



NOTE: When naming a file, you cannot use the following characters: \, /, :, ;, *, ?, !, “, <, >, |.

Highlight **Include Text-In Data** and press the  button. This will toggle between On and Off. When this feature is On, you can include text-in data when copying video if the video was recorded with text-in data.

Highlight **Verify After Burning** and press the  button. This will toggle between On and Off. When this feature is On, you can verify that the data is written on the DVD RW properly.

Highlight **Use Site Info** and press the  button. This will toggle between On and Off. When this feature is On, you can add the site name to the file name for the video you are backing up.

NOTE: When the site name is added to the file name, some special characters (\, /, :, ;, *, ?, !, “, <, >, |) in the site name will be converted to “_”.


Once you have given the video clip a file name, highlight the **Start** button and press the  button. The confirmation screen displaying data size will appear. When the storage device does not have enough space, the DVR will ask if you want to copy as much of the video clip as possible in the available space. Highlight the **Continue** button and press the  button to continue clip copy.

Once the clip copy starts, you can cancel it by selecting **Cancel** or hide the screen by selecting **Close**. When selecting **Close**, Clip Copy continues and a confirmation screen will display when complete.

NOTE: Only 4.7GB DVD media is available. To clip copy video on DVD media using remaining space, the size of previously recorded data on the DVD media should be less than 4GB.

Select the Full Erase option when erasing recorded data on DVD media, otherwise the media will not operate properly when rewritten.

The file size for clip copy is limited to 30GB. When copying video clips larger than 2GB, the video clips will be save in units of 2GB. For example, 3 individual 2GB files will be created when saving a 6GB video clip. However, the file size for the One-Touch Clip Copy is limited to 2GB.

You can use other functions on the DVR while video is being backed up. To do this, highlight the **Close** button and press the  button. You can return to the Clip-Copy screen at any time to check the progress.

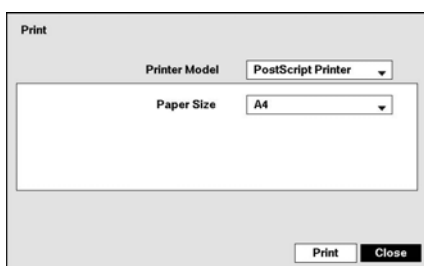
You do not need to install any special software on your personal computer to review the video clips. Refer to ATVision manual for instructions on how to review video clips you have copied.

NOTE: During Clip Copy, you cannot shut the system down, clear data on the storage device, or format the storage device.

CAUTION: Do NOT disconnect the USB cable or the power from the external drive while copying video clips. If the external drive is shut down or the USB cable is disconnected while copying video clips, THE DVR SYSTEM MAY NOT WORK NORMALLY OR THE EXTERNAL DRIVE COULD BE DAMAGED, and you will get an error message the next time you try to copy video clips. You will need to power down the DVR and restart it to get rid of the error message. Once the file system of the USB hard disk drive has been corrupted, this error message cannot be dismissed. Even after restarting the DVR it may automatically restart while preparing to clip copy. You must recover the file system using the recovery program, or you must reformat the hard disk drive.

Print

You can print images on a printer. Connect a PostScript™ printer, or external hard disk drive or flash drive to one of the USB ports.



Highlight the box beside **Printer Model** and press the button. Selecting PostScript Printer will print images on a PostScript™ printer connected to the DVR. Selecting File Printer will save the current image as a PDF file on an external USB hard disk drive or flash drive.

NOTE: Images saved as PDF files can be printed on any printer connected to your PC.

Highlight the box beside **Paper Size** and press the button. You can select the paper size.

Figure 52 : Print screen.

Once you have selected the printer model and paper size, highlight the **Print** button and press the button. A message appears asking you if you want to print the current image. Highlight the **Continue** button and press the button to print.

NOTE: If your printer only supports an LPT connection (parallel), use an LPT to USB converter cable. The printer cable is not provided.

Disk Mirroring

The DVR supports disk mirroring to prevent unexpected loss of recorded video data that might be caused by disk damage or corruption. You can set up disk mirroring by highlighting **Storage** in the System menu and pressing the button.

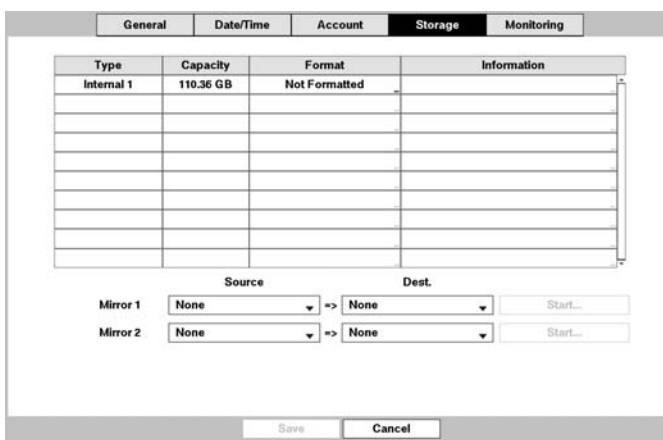



Figure 53 : System – Storage setup screen.

You can enable mirroring between two disks by designating the source disk and the destination disk from a list of internal hard disk drives. Up to two Mirrors are supported.


Highlighting the boxes under **Source** and **Dest.** and pressing the  button allows you to select the source disk and the destination disk for the selected Mirror.

NOTE: The source disk can be designated only from devices formatted for recording.


A device formatted for archiving cannot be used for disk mirroring.

The manufacturer, model and capacity of the source disk and the destination disk should be same for the proper mirroring between two disks.

CAUTION: Any existing data on the Destination Disk will be erased once it is designated as a mirror destination disk.

Highlighting **Start** and pressing the  button displays a confirmation screen asking you to confirm whether or not you want to start mirroring the selected disk. Once you start mirroring, the two disks will be resynchronized. Any data on the destination disk will be erased, and the data on the source disk will be copied to the destination disk. If the source disk is formatted and has no data, the disks will not be resynchronized. Resynchronization takes about 40 minutes per each 10GB of capacity. After resynchronization is complete, disk mirroring (writing data on the two disks at the same time) will start.

NOTE: Resynchronization will pause while searching video.

Once disk mirroring starts, you can cancel it by highlighting **Stop** and pressing the  button. Selecting **Stop** displays a confirmation screen asking you to confirm whether or not you want to stop mirroring for the selected disk.

NOTE: Once disk mirroring stopped, the destination disk will be set to *Not Used*. If resynchronization has been finished, the destination disk cannot be used for recording or archiving, but it can be used for searching. If you want to use the disk for recording or archiving, you must reformat it.

CAUTION: Disk mirroring will NOT automatically restart from an interrupted state. Once mirroring is stopped, you must restart it by following the mirroring setup procedures.

Appendix

USB Hard Disk Drive Preparation

Preparing the USB hard disk drive in Windows 2000

NOTE: Preparing a USB hard disk drive under Windows XP, Window Vista and Window 7 is almost identical to Windows 2000.

1. Connect the USB hard disk drive to your computer using the USB Cable.
2. Turn on your computer.
3. The USB device icon should display on the Taskbar.
4. If the USB hard disk drive is partitioned or has data, it will show up in *My Computer* as a hard disk drive icon. Check the file system by right clicking on the icon and checking under *Properties > General > File System*. If the file system is NOT FAT32 format, format the USB hard disk drive using the FAT32 format.
5. If the USB hard disk drive is not partitioned, go to *Administrative Tools* in *Control Panel* and launch *Computer Management*. Open *Disk Management* in *Storage* and right click an unallocated region of the USB hard disk drive. Then, click *Create Partition*.
6. In the *Create Partition* wizard, click *Next* then *Primary Partition*, and follow the instructions on the screen. Make sure that the FAT32 is selected for the file system.

NOTE: The partition size should be less than 32GB because of Microsoft limitations.

After formatting is complete, the USB hard disk drive will be added to *My Computer*.

7. Connect the USB hard disk drive to the DVR.

Preparing the USB hard disk drive in Windows 98

NOTE: Preparing a USB hard disk drive under Windows ME is almost identical to Windows 98.

1. Connect the USB hard disk drive to your computer using the USB Cable.
2. Turn on your computer. The *Add New Hardware wizard* window will appear.
3. Install the device driver for the USB backup device following the instructions provided with your USB hard disk drive.
4. If the USB hard disk drive is partitioned or contains data, it will show up in *My Computer* as a hard disk drive icon. Check the file system in *Properties > General > File System*. If the file system is NOT FAT32 format, format the USB hard disk drive with FAT32 format.
5. Run the FDISK utility by clicking *Start* then *RUN*. Type "fdisk" and click OK.
6. When the MS-DOS command prompt appears, type "Y" and hit the enter key.
7. In the FDISK Option menu, choose "5. Change current fixed disk drive."
8. Choose the appropriate letter corresponding to the USB hard disk drive.
9. In the FDISK Option menu, choose "1. Create DOS partition or Logical DOS Drive."
10. In the Create DOS Partition or Logical DOS Drive menu, choose "1. Create Primary DOS Partition." And Type "Y" to use all available space and hit the enter key. Hit ESC to exit the screen after the USB hard disk drive partition is created.
11. Restart your computer and verify the newly created drive is in *My Computer*.
12. Right click the newly created hard disk drive icon and select "Format".
13. In the Format Screen, select "Full" as the "Format type" and click "Start".
14. After formatting is complete, connect the USB hard disk drive to the DVR.

Text-In Search Examples

Search Example I

1 2 3 4 5 6
12345678901234567890123456789012345678901234567890

Item	Unit price	Qty	amount
Coke	\$ 2.20	1(s)	\$ 2.20
Fanta	\$ 2.20	1(s)	\$ 2.20
Hotdog	\$ 3.50	3(s)	\$ 10.50
Pepsi	\$ 1.95	1(s)	\$ 1.95
total : \$			16.85

Thank you~~

In the above text-in data, you can find that the comparison value is located at 17th (Unit price, \$ mark will be ignored automatically), 28th (Qty) and 40th (amount) characters (including spaces) from the left. In this case, you can enter "17", "28" and "40" in each Column box.

For example, if you want to search for Coke with a Qty (Quantity) of more than 1 and Hotdog with an amount totaling over \$8, the following search condition can be set.

Text-In Search Option

From: ☒ First 01-06-2011 14:26:30

To: ☒ Last 01-06-2011 14:26:30

Channels: 1-14

Generic Text

No.	-	Name	Comp.	Value	Column	Line	X
1		Coke	>	1	28	0	X
2	AND	Hotdog	>	8	40	0	X
					0	0	X
					0	0	X
					0	0	X

☐ Case Sensitive

Load Save Search Cancel

Search Example II

1 2 3 4 5 6
12345678901234567890123456789012345678901234567890

Item	Unit price	Qty	amount
Coke	\$ 2.20	1(s)	\$ 2.20
Fanta	\$ 2.20	1(s)	\$ 2.20
Hotdog	\$ 3.50	3(s)	\$ 10.50
Pepsi	\$ 1.95	1(s)	\$ 1.95
total : \$			16.85

Thank you~~

In the above text-in data, you can find that the comparison value is located at 17th (Unit price, \$ mark will be ignored automatically), 28th (Qty) and 40th (amount) characters (including spaces) from the left, but the value of amount category is located on a different line from Item. In this case, you can enter “17”, “28” and “40” in each Column box and enter “1” in the Line box for the next line.

For example, if you want to search for Coke with a Qty (Quantity) of more than 1 and Hotdog with an amount totaling over \$8, the following search condition can be set.

Text-In Search Option

From: ☒ First 01-06-2011 14:26:30

To: ☒ Last 01-06-2011 14:26:30

Channels: 1-14

Generic Text

No.	-	Name	Comp.	Value	Column	Line	X
1		Coke	>	1	28	0	X
2	AND	Hotdog	>	8	40	1	X
					0	0	X
					0	0	X
					0	0	X

☐ Case Sensitive

Load Save Search Cancel

ATVision

ATVision allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Computer system requirements for using the ATVision program are:

- Operating System: Microsoft® Windows® XP x86 (32 Bit) (Service Pack 3), Microsoft® Windows® Vista x86 (32 Bit) (Service Pack 1), Microsoft® Windows® 7 x86 (32 Bit)
- CPU: Intel Pentium III (Celeron) 600MHz or faster
- RAM: 128MB or higher
- VGA: 8MB or higher (1024x768, 24bpp or higher)
- Internet Explorer: Version 6.0 or later

Start Internet Explorer on your local PC. You can run the ATVision program by entering the following information in the address field.

- “http://IP address:port number” (The DVR IP address and the ATVision port number (default: 12088) set in the Network setup screen (ATVision tab))
- Or, “http://DVRNS server address/DVR name” (The DVRNS server address and the DVR name registered on the DVRNS server)
- Or, “http://www.dvronline.net” (Entering the DVR IP address or the DVR name will be required when logging in)

NOTE: You will need to get the appropriate IP address for the DVR you want to connect to and the ATVision port number from your network administrator.

ATVision only works with Microsoft Internet Explorer and will NOT work with other browsers.



Select between the ATVISION LIVE (Web monitoring) and ATVISION SEARCH (Web search) modes. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode.

You will need to enter the DVR IP address in the DVR ADDRESS field when running the ATVision program by entering <http://www.dvronline.net>. Selecting the Use DVRNS option allows you to enter the DVR name registered on the DVRNS server instead of the IP address. You must enter the DVRNS server address and port number in the SETUP setting when selecting the Use DVRNS option.

NOTE: Do NOT close the LOGIN window during the ATVision operation, otherwise, it will cause a script error when switching between Web monitoring and Web search modes, and you will need to restart the ATVision program.

When running the updated ATVision for the first time, Internet Explorer might occasionally load the information of the previous version. In this case, delete the temporary internet files by selecting Tools → Internet Options → General tab, and then run ATVision again.

There might be a problem that the bottom of ATVision page is cropped due to the address or status bars in Microsoft Internet Explorer 7.0. In this situation, it is recommended that websites open windows without address or status bars by changing the internet setting. (Go to the Tools → Internet Options → Security tab → Click the Custom level... button → Select *Enable* for the *Allow websites to open windows without address or status bars* option)

When running ATVision in the Microsoft Windows Vista or higher operating system, it is recommended to start Internet Explorer with elevated administrator permissions. Click the right mouse button on the Internet Explorer icon and select the *Run as administrator* option from the context menu. Otherwise, some functions of the ATVision might be limited to use.

There might be a problem with screen display or screen update due to low image transmission speed when using the Microsoft Windows Vista or higher operating system. In this situation, it is recommended that you disable the Auto Tuning capability of your computer.






Run the *Command Prompt* with elevated administrator permissions (Go to the Start Menu → Accessories → Command Prompt → Click the right mouse button and select the *Run as administrator* option). Then enter "netsh int tcp set global autotuninglevel=disable" and hit the enter key. Restart your computer to apply the changes.

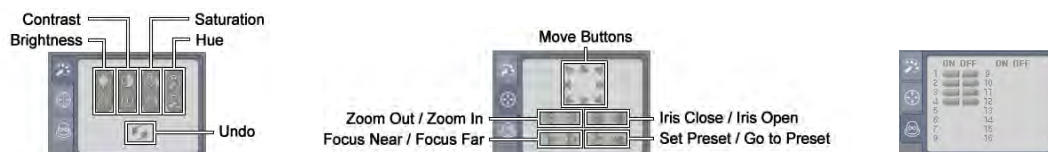
If you want to enable the Auto Tuning capability again, enter "netsh int tcp set global autotuninglevel=normal" after running the Command Prompt with elevated administrator permissions. Restart your computer to apply the changes.



Web Monitoring Mode

ATVISION LIVE is a remote web monitoring program that allows you to monitor live video transmitted in real-time from the remote DVR.


 
 

 


- ① Click the  to log out the ATVision program.
- ② Click the  to access to the web search mode.
- ③ Position the mouse pointer on the ATVISION logo to see the version of the ATVision program.
- ④ The DVR information window displays the login information of ATVision.
- ⑤ Click the screen format to select the desired display mode. When changing the screen format, the selected camera on the current screen will be located in the first cell of the new layout.
- ⑥ Click the camera button to select the camera to be viewed.
- ⑦ Click the  to adjust the brightness, contrast, saturation and hue of monitoring image.
- ⑧ Click the  to control pan, tilt and zoom of the camera from a remote site.
- ⑨ Click the  to control alarm out devices at the remote site.




- ⑩ Click the  to save the current image as a bitmap or JPEG file format.
- ⑪ Click the  to set up the image drawing mode and OSD display. You can adjust the display speed by changing the image drawing mode, and select OSD information to be displayed on the screen.
- ⑫ The event status window at the bottom displays a list of events that were detected from the remote site.
- ⑬ Selecting a camera on the screen and clicking the right mouse button displays the text menu screen.



- **Change Camera Title:** Changes the camera name.
- **Enable Audio:** Enables audio communication with the remote site. When the audio control panel displays, click the  to send audio to the connected remote site and click the button again to stop sending audio. Click the  to monitor live audio from the connected remote site through the attached speaker and click the button again stop monitoring live audio. Clicking both  and  allows two-way communication. Clicking the  disables audio communication.
- **Aspect Ratio:** Changes the image aspect ratio.
- **Deinterlacing:** Using a deinterlace filter for interlaced video enhances image display quality by eliminating horizontal scan lines and noise in areas with motion.
- **Anti-Aliasing Screen:** Enhances image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTE: A camera name change in the Web Watch mode does not affect the camera name set up on the remote site. Leaving the Camera Title blank causes the camera name set up on the remote site to display.

The  icon will display on each camera screen when audio communication is available between the ATVision system and a DVR.

Web Search Mode

ATVISION SEARCH is a remote web search program that allows you to search recorded video on the remote DVR.

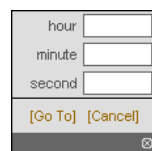
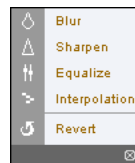
NOTE: The remote site connection in the Web Search mode will automatically be disconnected if there is no activity for 30 minutes.



- ① Click the to log out the ATVision program.
- ② Click the to access to the web monitoring mode.
- ③ Position the mouse pointer on the ATVISION logo to see the version of the ATVision program.
- ④ The DVR information window displays the time information of recorded data on the remote DVR and login information of ATVision.
- ⑤ Click the to blur, sharpen, equalize and interpolate playback images. Click the to zoom out or zoom in the recorded image. Click the to adjust the brightness of the recorded images.

NOTE: Image processing works only in the pause mode.

- ⑥ The playback function buttons include fast backward, pause, play, fast forward, go to the first image, go to the previous image, go to the next image, and go to the last image.
- ⑦ Click the screen format to select the desired display mode.
- ⑧ Click the to enter the time-lapse search mode which allows you to search for recorded data by time and then play back images found within the time parameters. The Timetable window located at the bottom displays the time information for the image of the date selected on the calendar. If more than one video stream in the same time range, you can select the video stream you want to search. Clicking a specific time displays the image recorded at that time on the screen. Selecting the allows you to display an image from a specific time.
- ⑨ Click the to enter the event search mode which allows you to search for event log entries using specific conditions and play back the images associated with those event entries.
- ⑩ Click the to save any video clip of recorded data as an executable file, or click the to save the current image in a bitmap or JPEG file format. Click the to print the current image on a printer connected to your computer.
- ⑪ Click the to set up the image drawing mode and OSD display. You can adjust the display speed by changing the image drawing mode, and select OSD information to be displayed on the screen.
- ⑫ Click the to reload the recording data.
- ⑬ The Timetable displays recorded data of the selected camera by time (in hour segments).



- ⑭ Selecting a camera on the screen and clicking the right mouse button displays the text menu screen.

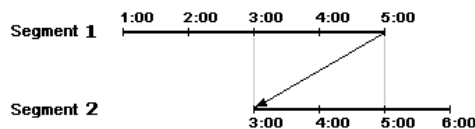
Change Camera Title	
Enable Audio	
Aspect Ratio	▶
Deinterlacing	▶
Anti-Aliasing Screen	

- **Change Camera Title:** Changes the camera name.
- **Enable Audio:** Plays audio while playing back recorded video that has recorded audio. (Single-Screen Layout Only)
- **Aspect Ratio:** Changes the image aspect ratio.
- **Deinterlacing:** Using a deinterlace filter for interlaced video enhances image display quality by eliminating horizontal scan lines and noise in areas with motion.
- **Anti-Aliasing Screen:** Enhances image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTE: A camera name change in the Web Search mode does not affect the camera name set up on the remote site. Leaving the Camera Title blank causes the camera name set up on the remote site to display.

Time Overlap

If the DVR's time and date have been reset to a time that is earlier than the existing recorded video, it is possible for the DVR to have more than one video stream in the same time range. In this case, you can search overlapping video streams individually by selecting a specific segment. For example, when the DVR has recorded video from one to five o'clock and the user changes the time backward from five to three o'clock and then continues recording until six o'clock, there will be two video streams and segments from three to five o'clock.



You can search overlapping video streams by selecting a specific time or time range. If you want to search recorded video at four o'clock during the overlapping time range using a search menu such as **Go to the Date/Time**, select the segment you want to search.

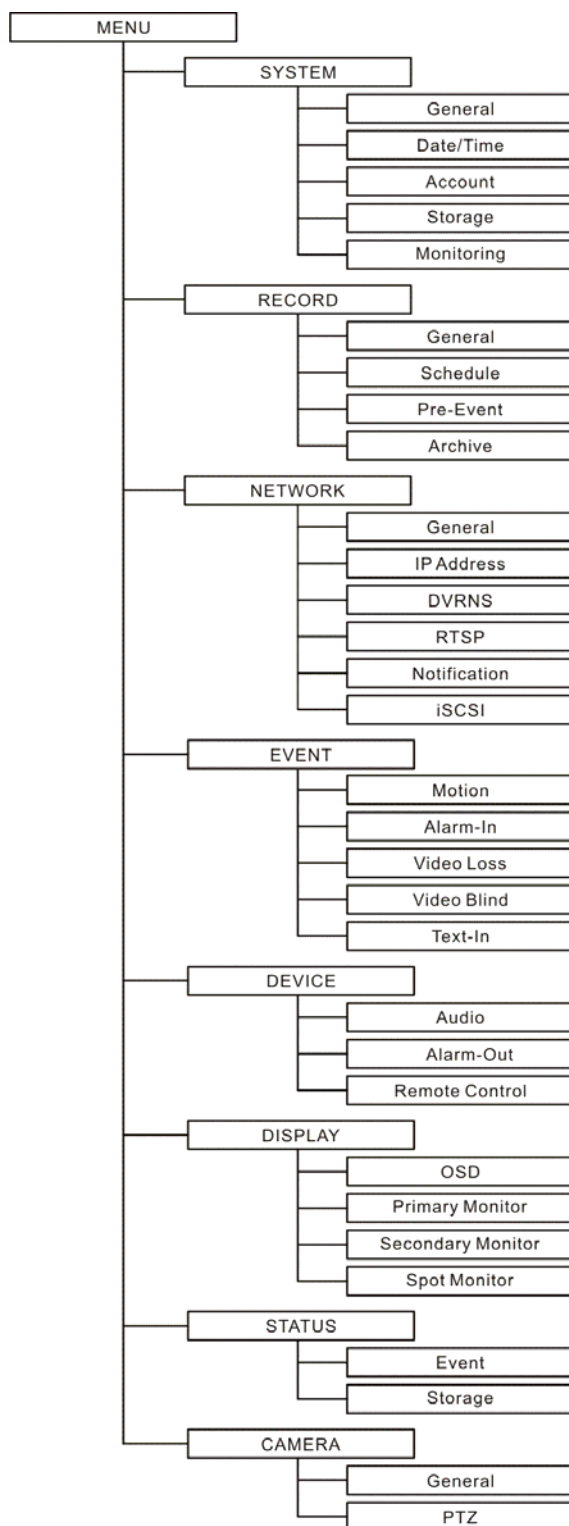
Select a Segment
1: Segment 2
2: Segment 1

If you want to search recorded video from four to five o'clock during the overlapping time range using a search menu such as **Event Log Search**, **Text-In Search** or **Motion Search**, it is possible for the DVR to have two overlapping start and stop times. You will be asked to select one of the overlapping start and stop times from the search time ranges as follows:







- From four o'clock of the first segment to five o'clock of the first segment
- From four o'clock of the first segment to five o'clock of the second segment
- From four o'clock of the second segment to five o'clock of the second segment

Select a Range
1: Scope 1 ~ 1
2: Scope 1 ~ 2
3: Scope 2 ~ 2

Map of Screens



Troubleshooting

Problem	Possible Solution
No Power	<ul style="list-style-type: none"> • Check power cord connections. • Confirm that there is power at the outlet.
No Live Video	<ul style="list-style-type: none"> • Check camera video cable and connections. • Check monitor video cable and connections. • Confirm that the camera has power. • Check camera lens settings.
No Video on the Primary Monitor	<ul style="list-style-type: none"> • Check the current primary monitor resolution. • Check the position of the HD/SD Out selector on the rear panel of the DVR. <ul style="list-style-type: none"> - HDMI video out on the primary monitor will only enable in the HD display mode. - VGA video out on the primary monitor will disable in the SD display mode. - Composite (BNC) video out on the primary monitor will disable in the HD display mode.
Changing the screen format is not applied on the monitor screen	Check the current monitor mode by pressing the MONITOR button on the front panel or by selecting the  (Monitor) in the Live Monitoring menu. Changing the screen format will be applied only on the selected monitor.
Live Video Very Bright	If a cable is attached to the “Loop” connector, make certain it is connected to a properly terminated device.
DVR has stopped recording	If hard disk drive is full, you will either need to delete video or set the DVR to the Overwrite Mode.
The icon  displays, however, the DVR is not recording.	When the DVR is in the Pre-Event recording mode, the yellow  and  display when there is no event, and the DVR is not recording. The red  and  display when any event occurs and the DVR starts recording.
While upgrading the system, the DVR keeps rebooting and the upgrade fails.	If the current system version is higher than the upgrade package file version, you should reset the DVR first using the Factory Reset. When using the Factory Reset, you will lose any settings you have saved.

System Log Notices

Boot Up	Setup Import Failure	Clip-Copy Fail
Shutdown	Setup Exported	Clip-Copy User:
Restart	Setup Export Failure	Clip-Copy From:
Upgrade	Setup Export Cancel	Clip-Copy To:
Upgrade Fail	Schedule On	Clip-Copy Duration of Video:
Power Failure	Schedule Off	Clip-Copy Camera:
Time Change	Panic On	Callback Fail
Time Zone Change	Panic Off	Print Begin
Time Sync	Clear All Data	Print End
Time Sync Fail	Clear Disk	Print Cancel
Disk Bad	Format Disk	Archive On
Login	Disk Full	Archive Off
Logout	Auto Deletion	Mirror 1 (2) Started
Setup Begin	Search Begin	Mirror 1 (2) Start Failed
Setup End	Search End	Mirror 1 (2) Stopped
Remote Setup Change	Clip-Copy Begin	Mirror 1 (2) Stop Failed
Remote Setup Failure	Clip-Copy End	Factory Reset
Setup Imported	Clip-Copy Cancel	

Error Code Notices

System Upgrade Related		Clip Copy Related	
No.	Description	No.	Description
0	Unknown error.	0	Unknown error.
1	File version error.	1	Device error.
2	Operating system version error.	2	Mounting failed.
3	Software version error.	3	No media.
4	Kernel version error.	4	Invalid media.
100	Upgrade device mounting failed.	5	File already existed.
101	Package is not found.	6	Not enough space.
102	Extracting package failed.	7	Creating temporary file failed.
103	LILO failed.	8	Opening disk failed.
104	Rebooting failed.	9	Formatting disk failed.
105	Invalid package.	10	Database has been changed.
106	ODD firmware upgrade failed.	11	Appending failed.
300	Remote connection failed.	12	Bad sector.
301	Remote network error.	13	No executable file.
302	Remote upgrade is not authorized.	14	Opening executable file failed.
303	Saving remote package failed.	15	Writing executable file failed.
304	Remote upgrade is cancelled by the user.	16	Creating image failed.
400	USB device mounting failed.	17	Burning failed.
401	Reading upgrade package on the USB device failed.	18	Burning is out of time.
402	Copying upgrade package on the USB device failed.	19	Connecting device failed.
403	USB device is not connected.	20	Device is busy.
404	USB device is being used.	21	Unsupported file system.
405	Unsupported file system.	22	Verify failed.
500	System is busy clip copying.		

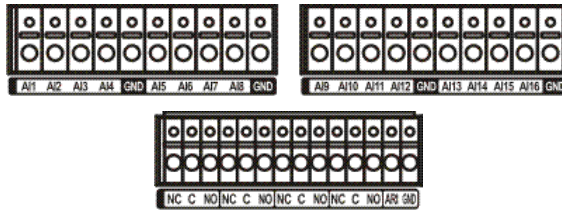
Connector Pin Outs

RS485 Connector Pin Outs



Master Unit		Slave Unit	
+	→	To	→ TX+/ RX+
-	→	To	→ TX-/ RX-

I/O Connector Pin Outs



AI (1 to 16)	Alarm Inputs 1 to 16
GND	Chassis Ground (5 connectors)
NC	Relay Alarm Output (Normally Closed)
C	Relay Common
NO	Relay Alarm Output (Normally Open)
ARI	Alarm Reset In

Specifications

VIDEO	
Signal Format	NTSC or PAL (Auto Detect)
Video Input	Composite: 16 looping inputs, 1 Vp-p, auto-terminating, 75 Ohms
Monitor Outputs	Primary Monitor HDMI: 1 HDMI VGA: 1 Composite: 1 BNC, 1 Vp-p, 75 Ohms
	Secondary Monitor VGA: 1 Composite: 1 BNC, 1 Vp-p, 75 Ohms
	SPOT: 1 BNC, 1 Vp-p, 75 Ohms
Video Resolution	Primary Monitor HDMI: 1920x1080, 1680x1050, 1600x900, 1440x900, 1280x1024 VGA: 1920x1080, 1680x1050, 1600x900, 1440x900, 1280x1024 Composite: 720x480 (NTSC), 720x576 (PAL)
	Secondary Monitor VGA: 800x600 Composite: 720x480 (NTSC), 720x576 (PAL)
	Composite (SPOT): 720x480 (NTSC), 720x576 (PAL)
Record Speed (images per second)	Real-time: 480ips (NTSC), 400ips (PAL) @ D1
Playback Speed (images per second)	Full Duplex: 480ips (NTSC), 400ips (PAL) @ CIF

INPUTS/OUTPUTS	
Alarm Input	16 terminal, programmable as NC or NO, 2.4V (NC) or 0.3V (NO) threshold, 5VDC
Alarm Output	4 relay output, programmable as NC or NO, 2A@125VAC, 1A@30VDC
Alarm Reset Input	1 TTL, terminal block
Internal Buzzer	80dB at 10cm
Network Connectivity	10Mbps/1Gbps Ethernet (RJ-45)
Audio Input	RCA Input: 16 Line In
Audio Output	RCA Output: 1, Line Out
Text Input	POS Interface, ATM Interface

CONNECTORS	
Video Input	Composite: 16 BNC
Video Loop	Composite: 16 BNC (Auto Terminating)
Monitor Output	HDMI: 1 HDMI Composite: 1 BNC VGA: 1 VGA SPOT (Composite): 1 BNC
Audio In	16 RCA connector
Audio Out	1 RCA connector
Alarm Input/Output	Terminal Blocks
Ethernet Port	2 RJ-45
eSATA Port	eSATA
RS232C Serial Port	DB9 (P)
RS485 Serial Port	Two-connector terminal block
IR Port	1 Remote Control
USB Port	2 (USB 2.0)

STORAGE	
Primary Storage	SATA hard disk drive (up to 5) (up to 4 with an eSATA hard disk drive)
Secondary Storage*	eSATA hard disk drive (RAID) iSCSI hard disk drive (RAID) Built-in DVD RW drive USB hard disk drive or flash drive

* When installing an internal DVD RW drive, connect the SATA I/O cable to the SATA ODD socket.

GENERAL	
Dimensions (W x H x D)	16.9" x 3.5" x 19.3" (430mm x 88mm x 490mm)
Unit Weight	22.9 lbs. (10.4kg)
Shipping Weight	30.9 lbs. (14.0kg)
Shipping Dimensions (W x H x D)	26.9" x 10.7" x 21.2" (683mm x 271mm x 538mm)
Operating Temperature	41°F to 104°F (5°C to 40°C)
Operating Humidity	0% to 90%
Power	100 to 240 VAC, 2.0 – 1.0 A, 50/60Hz
Power Consumption	Max. 100W
Approvals	FCC, UL**, CB, CE

** CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions. This equipment is indoor use and all the communication wiring are limited to inside of the building.

Specifications are subject to change without notice.