

About This Document

This document contains instructions for DVR configuration and operation.

Package Contents

The package contains the following:

- Digital Video Recorder
- Power Cord
- Quick User Guide (This Document)
- Software CD (User's Manual included)
- Rack-mount Kit
- Assembly Screws for Adding Hard Disk Drives
- SATA Cables
- Audio Extension Cable
- USB Mouse
- Infrared Remote Control



Notice

Specifications are subject to change without prior notice.

The information contained herein is to be considered for reference only.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (*OpenSourceGuide\OpenSourceGuide.pdf*).

Warning

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Ventilation

Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.

7. Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.

This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

8. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

9. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

10. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

11. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

12. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

13. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

14. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

B. If liquid is spilled, or objects have fallen into the equipment.

C. If the equipment has been exposed to rain or water.

D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

E. If the equipment has been dropped, or the cabinet damaged.

F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

15. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

16. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

17. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

18. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

19. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

21. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

22. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

Disposal

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Specifications

Video

Signal Format	NTSC or PAL (Auto Detect)
Video Input	Local (Composite): 16 looping inputs, 1 Vp-p, auto-terminating, 75 Ohms Network: 16 network devices (100Mbps/1Gbps Ethernet)
Monitor Outputs	Primary Monitor HDMI: 1 HDMI / VGA: 1 / Composite: 1 BNC, 1 Vp-p, 75 Ohms Secondary Monitor VGA: 1 / Composite: 1 BNC, 1 Vp-p, 75 Ohms SPOT: 1 BNC, 1 Vp-p, 75 Ohms
Video Resolution	Primary Monitor HDMI: 1920x1080, 1680x1050, 1600x900, 1440x900, 1280x1024 VGA: 1920x1080, 1680x1050, 1600x900, 1440x900, 1280x1024 Composite: 720x480 (NTSC), 720x576 (PAL) Secondary Monitor VGA: 800x600 / Composite: 720x480 (NTSC), 720x576 (PAL) Composite (SPOT): 720x480 (NTSC), 720x576 (PAL)
Record Speed	480ips (NTSC), 400ips (PAL) @ D1 (Real-time) Network Device: 70ips @ 1920x1080, 110ips @ 1280x720
Playback Speed	480ips (NTSC), 400ips (PAL) @ CIF (Full Duplex)

Inputs/Outputs

Alarm Input	16 terminal, programmable as NC or NO, 2.4V (NC) or 0.3V (NO) threshold, 5VDC
Alarm Output	4 relay output, programmable as NC or NO, 2A@125VAC, 1A@30VDC
Alarm Reset Input	1 TTL, terminal block
Internal Buzzer	80dB at 10cm
Network Connectivity	10Mbps/1Gbps Ethernet (RJ-45)
Audio Input	Local: RCA Input, 16 Line In / Network: 16, 100Mbps/1Gbps Ethernet
Audio Output	RCA Output: 1, Line Out
Text Input	POS Interface, ATM Interface

Connectors

Video Input	Local (Composite): 16 BNC Network: RJ-45 (100Mbps/1Gbps Ethernet)
Video Loop	Composite: 16 BNC (Auto Terminating)
Monitor Output	HDMI: 1 HDMI / Composite: 1 BNC / VGA: 1 VGA / SPOT (Composite): 1 BNC
Audio In	Local: 16 RCA connector / Network: 16, RJ-45 (100Mbps/1Gbps Ethernet)
Audio Out	1 RCA connector
Alarm Input/Output	Terminal Blocks
Ethernet Port	2 RJ-45
eSATA Port	eSATA
RS232 Serial Port	DB9 (P)
RS485 Serial Port	Two-connector terminal block
IR Port	1 Remote Control
USB Port	2 (USB 2.0)

Storage

Primary Storage	SATA hard disk drive (up to 5) (up to 4 with an eSATA hard disk drive)
Secondary Storage	eSATA hard disk drive (RAID), iSCSI hard disk drive (RAID), Built-in DVD RW drive, USB hard disk drive or flash drive

General

Dimensions	16.9" (W) x 3.5" (H) x 19.3" (D) (430mm x 88mm x 490mm)
Unit Weight	22.9 lbs. (10.4kg)
Shipping Weight	30.9 lbs. (14.0kg)
Shipping Dimensions	26.9" (W) x 10.7" (H) x 21.2" (D) (683mm x 271mm x 538mm)
Operating Temperature	41°F to 104°F (5°C to 40°C)
Operating Humidity	0% to 90%
Power	100 to 240 VAC, 2.0 – 1.0 A, 50/60Hz
Power Consumption	Max. 100W
Approvals	FCC, UL, CB, CE

Table of Contents


Installation	7
Video Input.....	7
Video Loop Through	7
Factory Reset Switch.....	7
HD/SD Out Selector.....	8
Network Port.....	8
iSCSI Port.....	8
eSATA Port.....	8
RS232 Port	8
RS485 Port	9
Alarm Input/Output.....	9
Audio In/Out.....	9
Video Out.....	10
Power Cord Connector	10
Configuration	11
Front Panel Buttons and LEDs	11
IR Remote Control	13
Turning on the Power	13
Shutting down the System	13
Initial Unit Setup.....	14
Operation.....	15
Live Monitoring	15
Searching Video	16
Remote Program	18
ATVision	18
ATVision Pro.....	19
ATVision Mobile.....	20

Installation

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system.

Your DVR can be used with either NTSC or PAL equipment.

NOTE: You cannot mix NTSC and PAL equipment. For example you cannot use a PAL camera and an NTSC monitor.

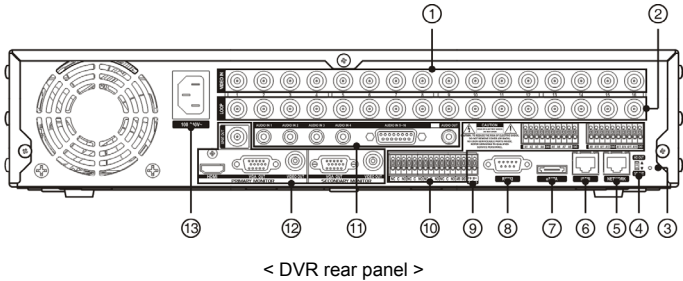

- | | | |
|----------------------|----------------------|------------------------|
| ① Video Input | ② Video Loop Through | ③ Factory Reset Switch |
| ④ HD/SD Out Selector | ⑤ Network Port | ⑥ iSCSI Port |
| ⑦ eSATA Port | ⑧ RS232 Port | ⑨ RS485 Port |
| ⑪ Audio In/Out | ⑫ Video Out | ⑬ Power Cord Connector |

Video Input



Connect the coaxial cables from the video sources to the BNC Video In connectors.

Video Loop Through



If you would like to connect your video source to another device, you can use the Loop BNC connectors.

NOTE: The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to a terminated device because it will cause poor quality video.

Factory Reset Switch



The DVR has a Factory Reset switch to the right of the HD/SD Out selector on the rear panel. This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When using the *Factory Reset*, you will lose any settings you have saved.

To reset the unit, you will need a straightened paperclip:

1. Turn the DVR off.
2. Turn it on again.
3. While the DVR is initializing, the front panel LEDs will blink. When the front panel LEDs blink, poke the straightened paperclip into the unlabeled hole to the right of the HD/SD Out selector.
4. Hold the switch until the DVR's internal buzzer sounds twice.
5. Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

HD/SD Out Selector



An HD/SD Out selector is provided to select the monitor display mode between HD (High Definition) and SD (Standard Definition). Setting the selector to the HD OUT position sends HD video to the connected HDMI and VGA monitors, and setting to the SD OUT position sends SD video to the connected composite BNC monitor.

Network Port



The DVR can be networked using the 10Mb/1Gb Ethernet connector. Connect a Cat5 cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

iSCSI Port



An iSCSI port is provided to connect external storage devices for recording video. Connect the external iSCSI hard disk drive (RAID) cable to the RJ-45 Ethernet port.

CAUTION: When recording video on an iSCSI device, the recoding speed might decrease and the DVR system performance might be affected if network devices (network cameras and network video transmitters) are connected.

eSATA Port



An eSATA port is provided to connect external storage devices for recording or archiving video. Connect the external eSATA hard disk drive (RAID) cable to the eSATA port.

CAUTION: Do NOT connect or disconnect iSCSI/eSATA devices while the DVR power is on. The DVR must be powered down to connect or disconnect iSCSI/eSATA devices. Power up iSCSI/eSATA devices so they are ready for operation before powering up the DVR. Power down iSCSI/eSATA devices after powering down the DVR and then disconnect iSCSI/eSATA devices.

RS232 Port



An RS232 port is provided to connect a remote control keyboard.



The DVR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals. The RS485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the + and – (respectively) of the DVR.

Alarm Input/Output



NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

AI 1 to 16 (Alarm-In): You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the AI (Alarm-In) and GND (Ground) connectors. The threshold voltage of electrical switches for NC (Normally Closed) is above 2.4V and for NO (Normally Open) is below 0.3V, and should be stable at least 0.5 seconds to be detected. The voltage range of alarm input is from 0V to 5V.

GND (Ground): Connect the ground side of the Alarm input and/or alarm output to the GND connector.

NOTE: All the connectors marked GND are common.

NC/NO (Relay Alarm Outputs): The DVR can activate external devices such as buzzers or lights. Connect the device to the C (Common) and NC (Normally Closed) or C and NO (Normally Open) connectors. NC/NO is a relay output which sinks 2A@125VAC and 1A@30VDC.

ARI (Alarm Reset In): An external signal to the Alarm Reset In can be used to reset both the Alarm Out signal and the DVR's internal buzzer. Mechanical or electrical switches can be wired to the ARI (Alarm Reset In) and GND (Ground) connectors. The threshold voltage is below 0.3V and should be stable at least 0.5 seconds to be detected. Connect the wires to the ARI and GND connectors.


Audio In/Out



Your DVR can record audio from up to 16 sources. Connect the audio sources to Audio In 1 to Audio In 16 as needed using RCA jacks. Connect Audio Out to your amplifier. Use the provided audio extension cable to connect the audio sources to Audio In 5 to 16.

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio. The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The DVR does not have a pre-amplifier for audio input, so the audio input should be from an amplified source, not directly from a microphone.

Video Out



An HDMI (High-Definition Multimedia Interface) connector is provided so that you can use an HDMI monitor as your primary monitor when in the HD (High Definition) display mode, and a VGA OUT connector is provided so that you can use a standard, multi-sync computer monitor as your-primary monitor. Use the cable supplied with your monitor to connect it to the DVR.

When in the SD (Standard Definition) display mode, connect the primary monitor to the VIDEO OUT connector. It is best to use the monitor as a subsidiary of the HD display output otherwise the monitor might have display limitations.

NOTE: Monitoring and playing back video from network devices is supported only on the primary monitors. When using HDMI monitors, change the monitor display mode to HD mode by setting the HD/SD Out selector on the rear panel to the *HD OUT* position. HDMI video out will only be enabled in the HD display mode.

VGA video out on the primary monitor will be disabled in the SD display mode.

Composite (BNC) video out on the primary monitor will be disabled in the HD display mode.



A VGA OUT connector is provided so that you can use a standard, multi-sync computer monitor as your secondary monitor. Use the cable supplied with your monitor to connect it to the DVR.

Connect the secondary monitor to the VIDEO OUT connector.



Connect the spot monitor to the SPOT OUT connector as needed.

NOTE: Connect the monitor before the DVR boots so that video can be displayed on the monitor with the resolution you have set during system setup. If you want to use both the HDMI and VGA Primary Monitor connectors, one of the monitors should be connected before the DVR boots, and the other monitor should be connected after the DVR boots.

Power Cord Connector




Connect the AC power cord to the DVR and then to a wall outlet.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.

Configuration

Front Panel Buttons and LEDs

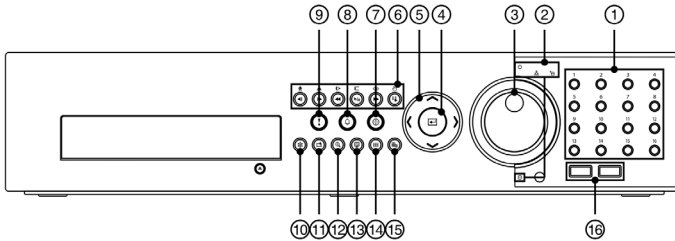


< DVR front panel >












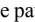





- | | | | |
|------------------|--------------------|--------------------------|----------------|
| ① Camera Buttons | ② LED | ③ Jog Dial, Shuttle Ring | ④ Enter Button |
| ⑤ Arrow Buttons | ⑥ Playback Buttons | ⑦ PTZ Button | ⑧ Alarm Button |
| ⑨ Panic Button | ⑩ Freeze Button | ⑪ Bookmark Button | ⑫ Zoom Button |
| ⑬ Monitor Button | ⑭ Display Button | ⑮ Menu Button | ⑯ USB Port |

NOTE: The infrared sensor on the DVR is just to the left of USB ports. Make certain that nothing blocks the sensor, or the remote control will not function properly.


When you use wireless communication devices (such as Wi-Fi or Bluetooth) near the DVR, the remote control might not function properly.

You can also use a USB mouse (not supplied) to navigate through the screens and menus much like you would on a computer.

- Camera Buttons** Pressing the individual camera buttons will cause the selected camera to display full screen. Buttons 1 to 9 are also used to enter passwords.
- LED**
- **Power LED:** The Power LED is lit when the unit is On.
 - **Network LED:** The Network LED is lit when the unit is connected to a network via Ethernet.
 - **iSCSI LED:** The iSCSI LED is lit when an iSCSI device is connected to the DVR.
 - **HDD LED:** The HDD LED flickers when the DVR is recording or searching video on the hard disk drive.
- Jog Dial, Shuttle Ring**
- **Jog Dial:** When in the playback mode, you can play video forward image-by-image by turning the Jog Dial clockwise and backward image-by-image by turning the Jog Dial counterclockwise. When in the Setup mode, you can change number values by highlighting the item in the menu and turning Jog Dial clockwise or counterclockwise to increase or decrease the number.
 - **Shuttle Ring:** The Shuttle Ring only functions in the Playback mode. The Shuttle Ring is spring loaded and returns to the center position when released. Turning the ring clockwise plays video forward. Turning the ring counterclockwise plays video backward. Playback speed varies with the amount the ring is turned. When you release the ring, it snaps back to the center position and the video pauses.
- Enter Button** The  button selects a highlighted item or completes an entry that you have made during system setup.

Arrow Buttons	<p>These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value.</p> <p>These buttons are also used to control Pan and Tilt when in the PTZ mode.</p>
Playback Buttons	<ul style="list-style-type: none"> • Backward: When in the pause mode, pressing the  button moves to the previous image. The button is also used to Zoom Out while in the PTZ mode. • Forward: When in the pause mode, pressing the  button moves to the next image. The button is also used to Zoom In while in the PTZ mode. • Rewind: Pressing the  button plays video backward at high speed. The button is also used for Near Focus in the PTZ mode. • Play/Pause: Pressing the  button plays back video at regular speed. The button is also used for Far Focus in the PTZ mode. • Fast Forward: Pressing the  button plays video forward at high speed. The button is also used to load a Preset View in the PTZ mode. • Search/Stop: Pressing the  button while in the Live Monitoring mode enters the Search mode. Pressing the  button while in the Search mode returns the DVR to the Live Monitoring mode. The button is also used to save Presets while in the PTZ mode.
PTZ Button	Pressing the  button enters the PTZ (Pan/Tilt/Zoom) mode which allows you to control properly configured cameras.
Alarm Button	The  button has two functions. First, it will reset the DVR's outputs including the internal buzzer during an alarm. Second, it will display the event log when you are in the live monitoring mode unless there is an active alarm.
Panic Button	Pressing the  button starts panic recoding of all camera channels, and displays  on the screen. Pressing the button again will stop panic recording.
Freeze Button	Pressing the  button freezes the current live screen.
Bookmark Button	When in the playback mode, pressing the  button adds the current playback point to the bookmark list or moves to the registered bookmark point.
Zoom Button	Pressing the  button zooms the current image on the screen. A PIP with a rectangle temporarily displays showing what area of the screen has been enlarged. You can use the arrow buttons to move the rectangle to another area.
Monitor Button	Pressing the  button toggles the monitor selection between Primary, Secondary and Spot.
Display Button	Pressing the  button toggles between different display formats. The available formats are: 2x2, 3x2, 3x3, 4x3 or 4x4 (2x2 or 4x4 on a Spot Monitor). Pressing the button while in 4x4 display format for local cameras enters the display mode for network devices, and pressing the button while in 4x4 display format for network devices enters the display mode for local cameras.
Menu Button	<p>In the Live Monitoring mode and Search mode, pressing the  button displays the menu icons on the right edge of the screen. Pressing the button again hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.</p> <p>In the Search mode clip-copying can be done instantly by pressing and holding the button for three or more seconds.</p>

IR Remote Control

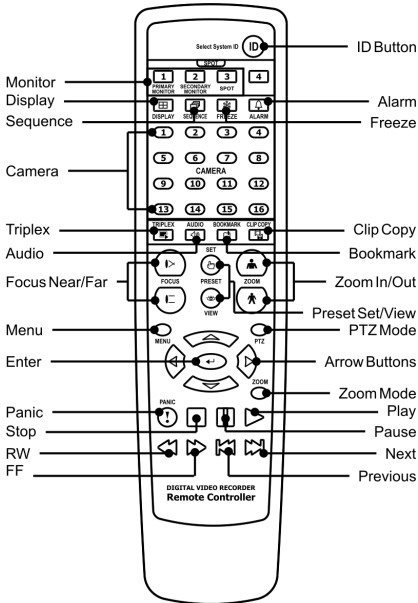

ID Button on Remote Control

If a DVR System ID is set to 0, the infrared remote control will control that DVR without any additional operations. If the system ID is 1 to 16, you must to press the **ID** button on the remote control and then press the number button (1 to 16) in order to control that DVR. If the System ID of two or more DVRs is set to 0, those DVRs will react to the infrared remote control at the same time.

SEQUENCE Button on Remote Control

Pressing **SEQUENCE** button displays live channels sequentially.

CLIP COPY Button on Remote Control

Pressing the **CLIP COPY** button allows you to copy video clips.

Turning on the Power

Connecting the power cord to the DVR turns on the unit. The unit takes approximately 60 seconds to initialize.

Shutting down the System

Highlight **Shutdown** in the System menu and press the **ENTER** button. The Shutdown screen displays asking you to confirm whether or not you want to shut the system down. After selecting **Shutdown** in the screen and pressing the **ENTER** button, a screen will appear telling you when it is safe to disconnect power.

Initial Unit Setup

Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, display language, camera, remote control, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **Ⓛ** (Login) in the Live Monitoring menu to enter the setup screens. The Login screen appears.

Login

User

admin

Password


?

OK

Cancel

Select a User and enter the password by pressing the appropriate combination of Camera number buttons and then the **Ⓛ** button. There is no default password when logging in the admin user for the first time. If you do not know the password, click the **?** button for guidance.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **⚙** (Setup) in the Live Monitoring menu.

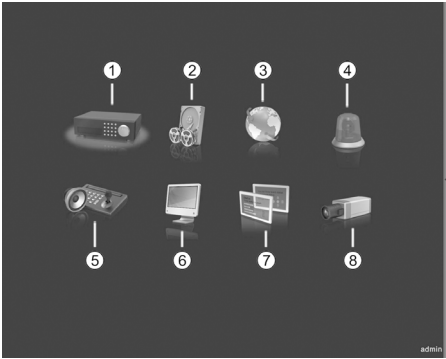

- Ⓛ

 System
- Ⓜ

 Record
- Ⓝ

 Network
- ⓔ

 Event
- Ⓛ

 Device
- Ⓟ

 Display
- Ⓢ

 Status
- ⓬

 Camera

System Setup	Record Setup	Network Setup	Event Setup
General	General	General	Motion
Date/Time	Schedule	IP Address	Alarm-In
User	Pre-Event	DVRNS	Video Loss
Storage	Archive	RTSP	Video Blind
Monitoring		Notification	Text-In
		iSCSI	Network
Device Setup	Display Setup	Status Setup	Camera Setup
Local Audio	OSD	Event	General
Network Audio	Primary Monitor	Storage	PTZ
Alarm-Out	Secondary Monitor		Network Camera
Remote Control	Spot Monitor		

NOTE: For detailed descriptions of the system setup, refer to the User's Manual on the software CD.



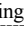
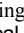
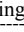

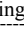
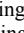
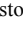
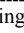
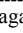
Operation




Live Monitoring

While in the live monitoring mode, pressing the **MENU** button displays the following Live Monitoring menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.

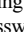

- ① Login/Logout
- ② Monitor
- ③ Display
- ④ Freeze
- ⑤ Alarm
- ⑥ Panic
- ⑦ Sequence
- ⑧ Camera Menu
- ⑨ Search
- ⑩ Setup

Login/Logout	Selecting  accesses the Login screen, and you will be asked to select a User and enter the password to log into the system. Selecting  displays the Logout screen asking you to confirm whether or not you want to log out the current user.
Monitor	Selecting  will allow you to select the monitor from Primary, Secondary and Spot.
Display	Selecting  displays the Display menu. <ul style="list-style-type: none">• Local Camera: Selecting Local Camera and choosing the camera number displays the selected local camera full screen.• Network Camera: Selecting Network Camera and choosing the camera number displays the selected network camera full screen.• Screen Format: Selecting Screen Format and choosing the screen mode displays the cameras in the selected multiview screen mode (2x2, 3x2, 3x3, 4x3 or 4x4).• Previous/Next Group: Selecting Previous Group or Next Group moves to the previous or next page.• Edit Group: Selecting Edit Group enters to the Active Cameo mode.• Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Freeze	Selecting  will freeze the current image on the screen until you select  again.
Alarm	Selecting  resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting  starts panic recording of all cameras, and selecting  again stops panic recording.
Sequence	Selecting  causes the cameras to display sequentially, and selecting  again exits the Sequence mode.


Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • PTZ: Selecting PTZ and choosing the camera number allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. • Zoom: Selecting Zoom and choosing the camera number zooms the current image of the selected camera on the screen. • Audio: Selecting Audio toggles audio output On and Off. • Mic: Selecting Mic toggles the DVR's audio that is sent to the network device On and Off. • Color Control: Selecting Color Control and choosing the camera number allows you to control brightness, contrast, hue and saturation for each camera for the selected camera. • Multi Stream: Selecting Multi Stream and choosing the network camera number allows you to select the desired stream when the selected camera has more than one stream. (Network Devices using the iNEX Protocol Only) • Information: Selecting Information and choosing the network camera number allows you to check the information of the selected network camera. • Spot Monitor: Selecting Spot Monitor allows you to select the camera you want to display on a Spot monitor.
Search	Selecting  exits the live monitoring mode and enters the search mode.
Setup	Selecting  enters the Main Setup screen.







Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.



- ① Search
- ② Go To
- ③ Display
- ④ Alarm
- ⑤ Panic
- ⑥ Camera Menu
- ⑦ Export
- ⑧ Data Source
- ⑨ Exit

Search	<p>Selecting  displays the Search menu.</p> <ul style="list-style-type: none"> • Event Log Search: Selecting Event Log Search selects video from the event log. • Record Table Search: Selecting Record Table Search selects using a recording table. • Motion Search: Selecting Motion Search selects motion events. • Text-In Search: Selecting Text-In Search selects text input strings.
---------------	---

Go To	<p>Selecting  displays the Go to menu.</p> <ul style="list-style-type: none"> • Go to the First: Selecting Go to the First displays the first recorded image. • Go to the Last: Selecting Go to the Last displays the last recorded image. • Go to the Date/Time: Selecting Go to the Date/Time allows you to set the date and time you want to search for video. • Bookmark: Selecting Bookmark adds the current playback point to the bookmark list.
Display	<p>Selecting  displays the Display menu.</p> <ul style="list-style-type: none"> • Local Camera: Selecting Local Camera and choosing the camera number displays the selected local camera full screen. • Network Camera: Selecting Network Camera and choosing the camera number displays the selected network camera full screen. • Screen Format: Selecting Screen Format and choosing the screen mode displays the cameras in the selected multiview screen mode (2x2, 3x2, 3x3, 4x3 or 4x4). • Previous/Next Group: Selecting Previous Group or Next Group moves to the previous or next page. • Edit Group: Selecting Edit Group enters to the Active Cameo mode. • Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Alarm	Selecting  resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting  starts panic recording of all cameras, and selecting  again stops panic recording.
Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • Zoom: Selecting Zoom and choosing the camera number zooms the current playback image of the selected camera on the screen. • Audio: Selecting Audio toggles audio playback On and Off. • Show/Hide Text-In: Selecting Show Text-In or Hide Text-In shows or hides the text-in data on the screen if the video was recorded with text-in data. • Spot Monitor: Selecting Spot Monitor allows you to select the camera you want to display on a Spot monitor.
Export	<p>Selecting  displays the Export menu.</p> <ul style="list-style-type: none"> • A-B Clip-Copy: Selecting A-B Clip-Copy will set the starting point of the video to be clip copied, and the  icon displays at the bottom-left corner of the screen. Selecting A-B Clip-Copy again will set the ending point of the video to be clip copied and displays the Clip-Copy screen. • Clip-Copy: Select Clip-Copy, and the Clip-Copy screen appears to allow clip copy setup. • Print: Selecting Print allows you to print a selected image.
Data Source	Selecting  allows you to select the data source to be searched.
Exit	Selecting  exits the search mode and enters the live monitoring mode.


Remote Program

ATVision


ATVision allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Start Internet Explorer on your local PC. You can run the ATVision program by entering the following information in the address field.


- “http://IP address:port number” (The DVR IP address and the ATVision port number (default: 12088) set in the Network setup screen (ATVision tab))
- Or, “http://DVRNS server address/DVR name” (The DVRNS server address and the DVR name registered on the DVRNS server)

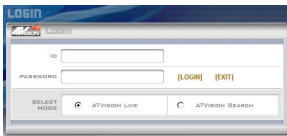

Select between the ATVISION LIVE (Web monitoring) and ATVISION SEARCH (Web search) modes. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode.

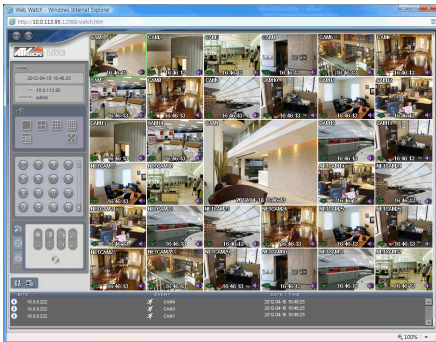

Web Monitoring

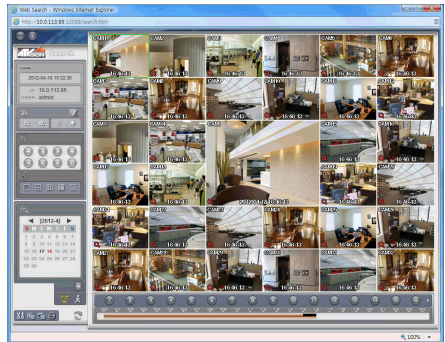


Web Search


NOTE: For detailed instructions on operating the ATVision program, refer to the User's Manual on the software CD.

ATVision Pro

ATVision Pro program, which is designed to be used with remote digital video recorder, is an integrated software program that controls system management, video monitoring, video recording and image playback of multiple remote sites.

CAUTION: If an older version of ATVision Pro software is installed in your computer, you should uninstall the older version first.

Insert the installation CD and run the Setup.exe file. Install the ATVision Pro software following the instructions. After installing the ATVision Pro software, you will find the ATVision Pro shortcut icon  on the desktop. Run the ATVision Pro program by double clicking the icon.

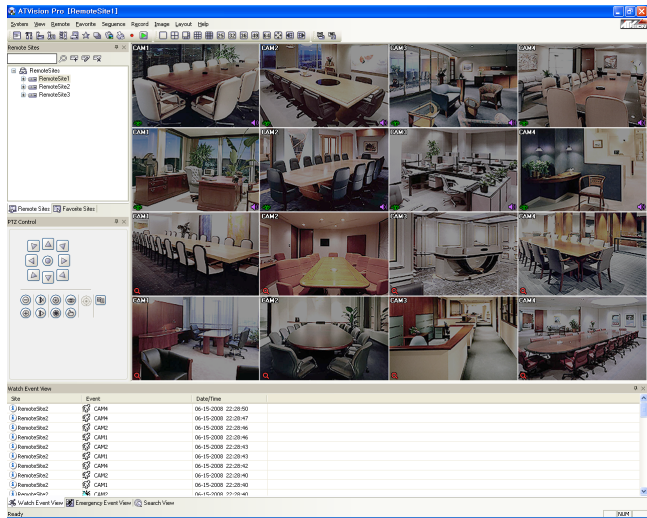


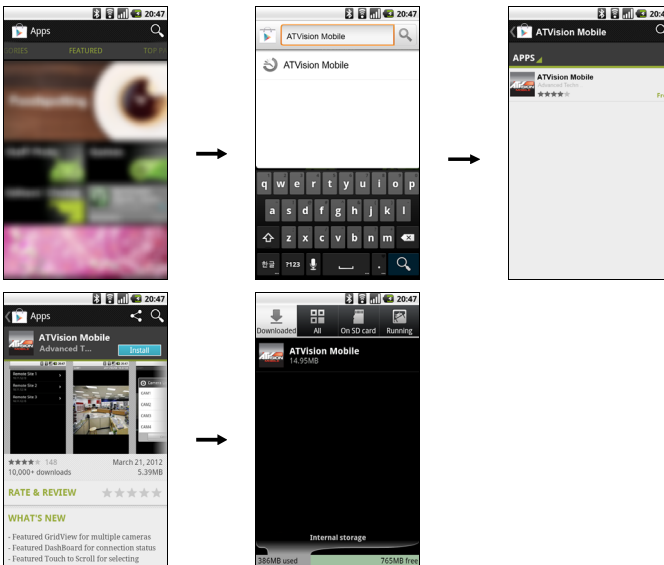
NOTE: For detailed instructions on operating the ATVision Pro program, refer to the User's Manual on the software CD.

ATVision Mobile allows you to access remote sites and monitor live video using mobile devices anytime from virtually anywhere.


CAUTION: This program uses large amounts of data and you are responsible for all data charges. Please contact your service provider's customer service to confirm or add an unlimited data plan.

Android-based mobile devices

1. Run the  Play Store (Google Play) application in the device.
2. Enter ATVision Mobile in the search field of the Play Store (Google Play) application.
3. Install the ATVision Mobile program and run the program.



4. Run the ATVision Mobile program. Push the Menu button of the device and the following default menu is displayed.

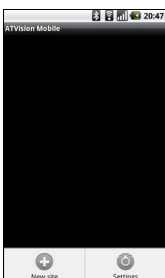


- New site: Tap to register DVRs.
- Delete site: Tap to delete a DVR. This menu will be available only when there are DVRs registered.
- Settings: Tap to edit the settings or check the information about the ATVision Mobile program.

5. Tap the New site button and enter the DVR information to register the DVR.

- **Description:** Enter the DVR name to use in the ATVision Mobile program.
- **Use DVRNS:** If the DVR uses the DVRNS function, enable the Use DVRNS option. You can set up the information for the DVRNS server by tapping the Settings button in the default menu.
- **Address, Watch Port, Search Port, Audio Port:** Enter the IP address and port number of the DVR. If the DVR uses the DVRNS function, check that the Use DVRNS option is enabled and enter the DVR name registered on the DVRNS server instead of the IP address. The name you enter should match the name set during the DVRNS setup on the DVR.
- **User ID, Password:** Enter the user ID and password. The user ID and password you enter should match the user ID and password used to log on to the DVR.

iOS-based mobile devices

1. Run the App Store application in the device.
2. Enter ATVision Mobile in the search field of the App Store application.
3. Install the ATVision Mobile program and run the program.

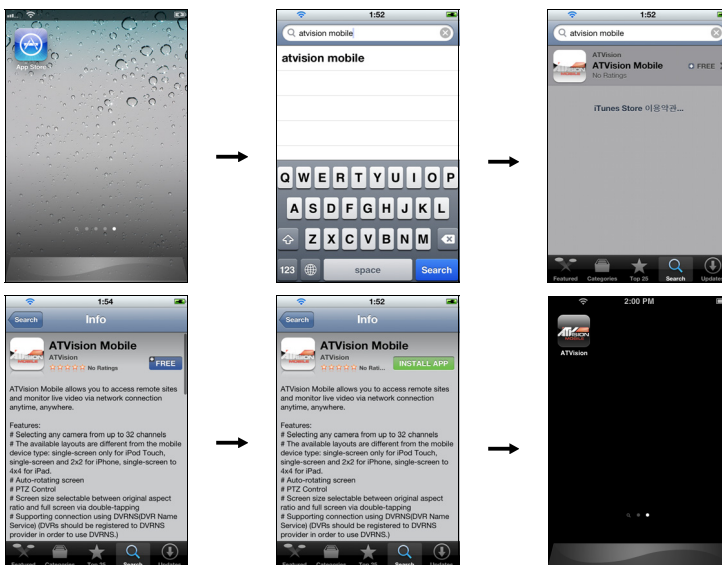

4. Tap the + button and enter the DVR information to register the DVR.

- **General:** Enter the DVR name to use in the ATVision Mobile program.
- **Connection Info:** Enter the IP address and port number of the DVR. If the DVR uses the DVRNS function, enable the DVRNS option and enter the DVR name registered on the DVRNS server instead of the IP address. The name you enter should match the name set during the DVRNS setup on the DVR.
- **Login Info:** Enter the user ID and password set on the DVR. The user ID and password you enter should match the user ID and password used to log on to the DVR.